## LINEAR ACTUATORS AND ELECTRONICS





## Contents

Preface	. 4
Valid for	. !
Important information	. (
Safety instructions	. (
Generel assembly instructions	
Declaration of incorporation of partly completed machinery	
1. System description	
Electrostatic discharge (ESD) Fundamental actuator construction	
Warranty and service life	
IP Protection degree	
IP66 Washable - Description of washing test	
Cable Wash	
Maintenance	
Environmental conditions Insulation class	
Key to symbols	
ETL-marking	
Mounting	
Connecting the system	
JUMBO system (special information)	20
2. Information on start-up, de-installation and operation	2.
Troubleshooting Actuators/Lifting columns	
Troubleshooting Electronics	
3. Information on specific actuators	
LA22	
LA23 LA23 IC	_
LA27	
LA28	
LA28 Compact	
LA29	
LA30	
LA31LA32	
LA32	
LA40.	
LA43	4
LA43 IC	
LA44	
LA44 IC	.50
4. Information on specific columns	5
BB3	
BL1	
BL4	
LC2	
LP2LP3	
LF3	)(
5. Information on specific control boxes	E (
5. Information on specific control boxes	
CB6P2	-
CB6S	
CB7	
CB8-A	6

CB9 HOMELINE	
CB9 CARELINE	
CB9 CARELINE BASIC	
CB12	
CB14	
CB16	
CBR1.	
CBI(1	0
6. Information on specific controls	68
ACC	
ACK	
ACL	
ACM	
ACO	
ACP	
DPHFPP	
FS	
FS2	
FS3	
HB20.	73
HB30	73
HB40	7!
HB50	
HB60	
HB70	
HB80	
HD8X HL70	
HL80.	
IRO	
LS	
LSD	
7. Information on specific JUMBO	
BAJ1 / BAJ2	
CBJ1 / CBJ2	
CBJ HOME.	
COBO20	
CH01.	
CHJ2	
MBJ1/2/3.	
8. Information on specific accessories	
BA18	
DJB .	
EBC	
Massage Motor	
MJB.	
SLS	90
SMPS30	90
Under Bed Light 2	92
9. Repair and disposal	93
Main groups of disposal	Q.
Practical information.	96
Drawings	0.0
Diawings	90
Addresses	100

#### **Preface**

Dear User.

We are delighted that you have chosen a product from LINAK®.

LINAK systems are high-tech products based on many years of experience in the manufacture and development of actuators, electric control boxes, controls and chargers.

This User Manual does not address the end-user. It is intended as a source of information for the manufacturer of the equipment or system only, and it will tell you how to install, use and maintain your LINAK electronics. It is the responsibility of the manufacturer of the end-use product to provide a User Manual where relevant safety information from this manual is passed on to the end-user.

We are sure that your LINAK system will give you many years of problem-free operation.

Before our products leave the factory they undergo full function and quality testing. Should you nevertheless experience problems with your systems, you are always welcome to contact your local dealer.

LINAK subsidiaries and some distributors situated all over the world have authorised service centres, which are always ready to help you.

LINAK provides a warranty on all its products.

This warranty, however, is subject to correct use in accordance with the specifications, maintenance being done correctly and any repairs being carried out at a service centre, which is authorised to repair LINAK products.

Changes in installation and use of LINAK systems can affect their operation and durability. The products are not to be opened by unauthorised personnel.

The User Manual has been written based on of our present technical knowledge. We are constantly working on updating the information and we therefore reserve the right to carry out technical modifications.

#### LINAK A/S

#### Valid for

This User Manual is valid for the following products: (See the first 3 - 5 characters on the label)

Actuators: LA22, LA23, LA23 IC, LA27, LA28, LA28C, LA29, LA30, LA31, LA32, LA34, LA40, LA43, LA43 IC,

LA44, LA44 IC

Columns: BB3, BL1, BL4, LC2, LP2, LP3

Control boxes: CB6, CB6P2, CB6S, CB7, CB8A, CB8-T, CB9, CB12, CB14, CB16, CB20, CBR1

Controls: ACC, ACK, ACL, ACM, ACO, ACP, DPH, FPP, FS, FS2, FS3, HB20, HB30, HB40, HB50, HB60, HB70,

HB80, HD8x, HL70, HL80, IRO, LS, LSD

JUMBO systems: BAJ1, BAJ2, CBJ1/2, CBJ Care, CBJ Home, COBO20, CH01, CHJ2, MBJ1/2/3

Accessories: BA18, CS16, DJB, EBC, Massage Motor, MJB, SLS, SMPS30, UBL2

#### Important information

#### Description of the various signs used in this manual.



#### Warning!

Failure to comply with these instructions may result in accidents involving serious personal injury.



Failing to follow these instructions can result in the product being damaged or destroyed.



#### Safety instructions

Please read the following safety information carefully.

It is important for everyone who is to connect, install or use the systems to have the necessary information and access to this User Manual.

Please be advised that LINAK has taken precautions to ensure the safety of the actuator system. It is the responsibility of the manufacturer/OEM to get the overall approval for the complete application.

LINAK recommends that the actuators should be used in push applications, rather than pull applications.

LINAK actuators are **not** to be used for repeated dynamic push-to-pull movements. This cause extra strain to the actuator and can give safety considerations, the consequence being possible damage to the actuator, e.g.:

- Piston rod eye/back fixture cracks due to fatigue.
- Extra play as parts are deformed.
- Noise as internal parts are moving due to the shifting force direction.

Therefore, if repeated dynamic push-to-pull movements are essential for the application, perform tests to validate the performance. Moreover, consider strengthening the actuator (e.g. using a steel piston rod eye) – contact LINAK A/S if in doubt.

If the actuator is used for push in an application where personal injury can occur (e.g. patient hoists), a special safety nut must be used. In general the LA12 actuator is not to be used in push/pull situations.

#### Relative or absoulte positioning for the PLC connection

Relative positioning - By means of a magnetic disc and a hall sensor in the PLC-actuator, it is possible to have encoder pulses with an accuracy down to 0.5 mm per pulse. This signal can be connected directly to the PLC's standard digital input.

Absolute positioning - As an alternative the user can have a 0-10V analogue signal from a potentiometer integrated in the PLC-actuator (max. stroke 100 mm). This signal can be connected directly to an analogue PLC input.

#### Low energy consumption

During recent years energy consumption has been more and more important to the end users of production equipment. Compared to pneumatic systems the energy consumption is considerably lower.

Except for LA34 which can be used for both push or pull applications, if mounted with safety nuts in both directions.

Persons who do not have the necessary experience or knowledge of the product/products must not use the product/products. Besides, persons with reduced physical or mental abilities must not use the product/products, unless they are under surveillance or they have been thoroughly instructed in the use of the apparatus by a person who is responsible for the safety of these persons.

"Do not remain under the application during operation or operate the application when assembling/disassembling moving parts".

Moreover, children must be under surveillance to ensure that they do not play with the product.

#### Classification:

The equipment is not suitable for use in the presence of a flammable anesthetic mixture with air or with oxygen or nitrous oxide.

#### Electromagnetic compatibility

LINAK Actuator Systems bear the CE marking as an attestation of compliance with the EMC Directive 2004/108/EC; the systems are designed to meet all requirements of applicable standards and have been tested to such requirements.

It is unlikely that the user will encounter problems with the Actuator System because of inadequate electromagnetic compatibility. However, electromagnetic immunity is always relative and standards anticipate environments of usage. If the user notes unusual behaviour of the Actuator System, in particular if such behaviour is intermittent and associated with the standing right next to mobile phones, microwaves and radio broadcast masts, this could be an indication of electromagnetic interference. If such behaviour occurs, try to move the Actuator System further away from the interfering equipment.

Electromagnetic emission is evaluated on a system level, with the actuator either connected to a LINAK Control Box and accessories or to some customer built electronic control circuitry. If used in other constellations and with external power supply, precautions may be taken to avoid conducted emission.



#### Warning!

If the actuator or lifting column is used for pull in an application where personal injury can occur, the following is valid:

It is the application manufacturer's responsibility to incorporate a suitable safety arrangement, which will prevent personal injury from occurring, if the actuator should fail.



#### Residual risk

Some of the products contains software based components. LINAK has done various possible efforts to assure that the software is free of errors and that the software has been developed according to the rules of IEC 60601-1-4 (software in Medical products). That involves risk analysis which shows a small residual risk for unwanted/unintended mow of actuators under specific conditions.

According to the above rules it must be informed and if nescessary considered in the risk analysis of the final application - More details to residual risk can be provided by LINAK if nescessary.



#### Warning

Note that during construction of applications, in which the actuator is to be fitted, there must be no possibility of personal injury, for example the squeezing of fingers or arms.



#### Warning!

The plastic parts in the system cannot tolerate cutting oil.



#### Warning!

Assure free space for movement of application in both directions to avoid blockade



#### Warning!

Uninstructed personell must not operate the application or the actuator



#### Warning!

In the event of blockage by an obsticle when application is moving inwards, removing the obsticle will cause the load to drop until spindle hits the nut



#### Warning!

Do not turn outer tube



#### Warning

Do not use chemicals, and inspect yearly for damage and wear.



#### Warnings!

LINAK's actuators and electronics are not constructed for use within the following fields:

- Planes and other aircrafts
  - Explosive environments
- · Nuclear power generation



#### Warning!

LINAK recommends that the actuators should be used in push applications, rather than pull applications.

If the actuator is used for push in an application where personal injury can occur (e.g. patient hoists), a special safety nut must be used. Except for the LA34 which can be used for both push or pull applications, if mounted with safety nuts in both directions.



#### Warning!

- If faults are observed, the products must be replaced.
- · Never spray directly on the products with a highpressure cleaner.



#### Warning!

A LINAK control box, actuator and accessory component must, in the final application, be placed where it is not imposed to any impact. This is to prevent damage by accidentally being struck by an object in the hand of a passer-by or by a broomstick or a mop handle during cleaning the floor. On a medical bed e.g. this might be underneath the mattress support platform. If necessary to mitigate this risk, additional protection might be required.



#### Warning!

Do not shorten the battery, other loads than self-discharge flatten the battery and cause formation of lead sulphate, which, if left in this state for too long, will irreversibly damage the battery. Avoid bad impact on individuals and environment.



#### Warning!

Prevent foreign objects or persons from unintentionally activating a footswitch or a hand control at any time e.g. during normal use or maintenance.

A hand control could be activated by squeezing e.g. between the mattress and the bed frame/rails or when it hangs on an application that is activated by moving another application into it or by moving the application into something else, e.g. a wall, furniture, another application etc.



#### Warning!

Handle batteries carefully.



LINAK battery packs may emit hydrogen gas. So do not bring fire or a heated object close to the battery pack, and never use the battery near a spark, fuses and/or equipment that emits sparks. Further, do not store the battery in a closed environment or incorporate it into a closed structure of an enclosure. Doing so can cause an explosion, fire, equipment damage and bodily injury.

Page 7 of 108 ...to be continued



Do not connect the positive terminal and the negative terminal of the LINAK battery packs with a wire or other metals. Short-circuiting the terminals of the battery can cause burn injuries, damage to the storage battery or trigger explosions.



Never connect the LINAK battery packs directly to a power supply socket or an automobile's cigarette lighter without using a charger as a medium. Connecting the battery directly can cause the battery to leak fluid, generate heat, explode, cause fires or bodily burns and injuries.



LINAK battery packs contain dilute sulphuric acid, which is a toxic substance. If the battery's internal fluid leaks out and gets onto your skin or clothing, make sure it is washed off with clean water. Additionally, if the fluid gets in your eyes, wash them with clean water immediately, and see a doctor. When dilute sulphuric acid gets in your eyes, it can cause a loss of eyesight and when it gets on your skin, it can cause a burn on your skin.



Do not use or store LINAK battery packs where the surrounding temperature exceed 50°C, such as inside a hot automobile, in direct sunlight, or in front of a stove or a source of intense heat. Doing so can shorten battery life, lower its performance level, cause the battery to leak fluid, be damaged or deformed.



For actuators without plugs, which are not connected to a LINAK control box, the mains supply or the actuator must always be equipped with an arrangement that switches off the actuator at the end-stop, for example, LS or LSD limit switch. If there is a risk of overloading the actuator, the mains supply must be equipped with a safety device against overloading (for example a CS16-PCB). If these precautions are not observed, the actuator can be damaged.



The LINAK products cannot tolerate the influence of strong solvents, basic or alkaline liquids.



Non-LINAK handsets

LINAK handsets are designed specially for LINAK control boxes, and they are designed to be highly reliable and flexible. If the customer still wishes to use his own handset, it is important to contact a LINAK sales person to find out the requirements with regard to the switches in the handset. Poor switches can destroy the control box.



The duty cycle printed on the label of the control box must always be noted. If this is exceeded, there is a risk of the control box being overheated and damaged. Unless otherwise specified on the label, the duty cycle is max. 10%: max. 2 min. in use followed by 18 min. not in use. Exceeding the duty cycle will result in a dramatic reduction of the product.

#### **General assembly instructions**

Please read the following safety information carefully. Ensure that all staff who are to connect, mount, or use the actuator are in possession of the necessary information and that they have access to this assembly instruction.

Persons who do not have the necessary experience or knowledge of the product/products must not use the product/products. Besides, persons with reduced physical or mental abilities must not use the product/products, unless they are under surveillance or they have been thoroughly instructed in the use of the apparatus by a person who is responsible for the safety of these persons. Moreover, children must be under surveillance to ensure that they do not play with the product.



#### Warning!

Failure to comply with these instructions may result in accidents involving serious personal injury. It is important for everyone who is to connect, install, or use the systems to have the necessary information and access to the User Manual on www.linak.com.

- If there is visible damage on the product it must not be installed.
- IIf the control box/TWINDRIVE makes unusual noises or smells, switch off the mains voltage immediately.
- The products must only be used in an environment that corresponds to their IP protection.
- The cleaners and disinfectants must not be highly alkaline or acidic (pH value 6-8).
- Irrespective of the load the duty cycle stated in the data sheets, must NOT be exceeded.
- The DESKLINE® systems can only be used in push applications.
- The control box/TWINDRIVE must only be connected to the voltage stated on the label.
- System not specified for pull must only be used in push applications.
- · Fastening screws and bolts must be correct tightened.
- Do not open the closing device on the TWINDRIVE during operation.
- · Specifications on the label must under no circumstances be exesided.
- NOT TO BE OPENED BY UNAUTORIZED PERSONNEL.
- Do only use the actuator within specified working limits.
- Note that during construction of applications, in which the actuator is to be fitted, there must be no possibility of personal injury, for example the squeezing or fingers or arms.
- · If irregularities are observed, the actuator must be replaced.
- If the actuator is used for pull in an application where personal injury can occur, the following is valid: It is the application manufacturer's
  responsibility to incorporate a suitable safety arrangement, which will prevent personal injury from occurring, if the actuator should fail.
- MEDLINE and CARELINE products are rated to operate at an altitude ≤ 2000 m.



#### Failing to follow these instructions can result in the actuator suffering damage or being ruined.

- · Before you start mounting/dismounting, ensure that the following points are observed:
  - The actuator is not in operation.
  - The mains current supply is switched off and the plug has been pulled out.
  - The actuator is free from loads that could be released during this work.
- · Before you put the actuator into operation, check the following:
  - The actuator is correctly mounted as indicated in the relevant user instructions.
  - The equipment can be freely moved over the actuator's whole working area.
  - The actuator is connected to a mains electricity supply/transformer with the correct voltage and which is dimensioned and adapted to the actuator in question.
  - Ensure that the voltage applied matches to the voltage specified on the actuator label.
  - Ensure that the connection bolts can withstand the wear.
  - Ensure that the connection bolts are secured safely.

#### During operation

- Listen for unusual sounds and watch out for uneven running. Stop the actuator immediately if anything unusual is observed.
- Do not side load the actuator.
- Use only the actuator within the specified working limits.
- Do not step or kick on the actuator.

#### · When the equipment is not in use

- Switch off the mains supply or pull out the plug in order to prevent unintentional operation.
- Check regularly the actuator and joints for extraordinary wear.

#### · Note:

- If the actuator is operated as a hand crank, it must be operated by hand, otherwise there is a risk of overloading the actuator and hereby damage the actuator.

#### ...

- When changing the cables on a LINAK actuator, it is important that this is done carefully, in order to protect the plugs and pins. Please be sure that the plug is in the right location and fully pressed in before the cable lid is mounted.

## DECLARATION OF INCORPORATION OF PARTLY COMPLETED MACHINERY

#### LINAK A/S

Smedevænget 8 DK - 6430 Nordborg

#### Herewith declares that LINAK DESKLINE® products as characterised by the following models and types:

Control Boxes CBD4, CBD5, CBD6, CBD6S

Linear Actuators DB4, DB5, DB6, DB7, DB9, DB12, DB14, DB16, LA23, LA31

Lifting Columns DL1A, DL2, DL4, DL5, DL6, DL7, DL8, DL9, DL10, DL11, DL12, DL14, DL15, DL16, DL17, BASE1

Desk Panels DPA, DPB, DPH, DPF, DPT, DP1C, DP1K, DP1L, DP1V, DP1U, WDPL1

RF Controls HB10RF, HB20RF, RFT, RFRL

Accessories SLS

#### Herewith declares that LINAK HOMELINE® products as characterised by the following models and types:

Control Boxes CB7, CB9H, CBH Advanced, CBH Basic Linear Actuators LA27, LA27CS, LA28, LA29, LA31 HOMELINE

Dual Actuators TD1, TD3

Controls HB10, HB10RF, HB20, HB20RF, HB40, HB60, HC10, HC10RF, HC20RF

Accessories DC CONNECTOR, DJBH, LED Lightbox, Lightplug001, Massage Motor, SMPS001, SMPS002, SMPS006, TR6, USB Connector

#### Herewith declares that LINAK MEDLINE® & CARELINE® products as characterised by the following models and types:

Control Boxes CB6, CB6S OpenBus, CB8, CB9, CB12, CB14, CB16 OpenBus, CB20 OpenBus, CBJ, CBJ-Care, CBJ-Home

Linear Actuators LA22, LA23, LA27, LA28, LA30, LA31 CARELINE, LA32, LA34, LA40, LA43, LA44

Lifting Columns BL1, BL4, LP2, LP3, LC2

Controls ACC, ACK, ACO, ACL, ACM, ACP, DPH, FS, FS2, FS3, FPP, HB20, HB30, HB40, HB70, HB80, HD80, HL70, HL80
Accessories BA18, BAJ, CH01, CHJ2, COB020, DJB, IRO, MJB, MJB, SMPS30, MJB Gateway, MJB Under Bed Light, Scale, SLS

#### Herewith declares that LINAK TECHLINE® products as characterised by the following models and types:

Linear Actuators LA12, LA14, LA22, LA23, LA23 IC, LA25, LA30, LA35, LA36, LA37

comply with the following parts of the Machinery Directive 2006/42/EC, ANNEX I, Essential health and safety requirements relating to the design and construction of machinery:

#### 1.5.1 Electricity supply

The relevant technical documentation is compiled in accordance with part B of Annex VII and that this documentation or part hereof will be transmitted by post or electronically to a reasoned request by the national authorities.

This partly completed machinery must not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of the Machinery Directive 2006/42/EC where appropriate.

Nordborg, 2013-05-29

LINAK A/S

John Kling, B.Sc.E.E.

John Eling

Certification and Regulatory Affairs

Authorized to compile the relevant technical documentation

#### 1. System description:


#### Usage/type of applications:

LINAK actuators, lifting columns and electronics have been developed for use in all places where a linear movement is required.

#### LINAK's products can, for example, be used for:

- · Adjustment of beds
- · Adjustment of furniture
- · Adjustment of table heights and angles
- · Patient hoists within the care and hospital sector
- · Adjustment of industrial processing machines
- Adjustment of agricultural machines
- · Adjustment of ventilation systems
- · Adjustment of dentist chairs/gynaecological chairs
- Ftc

#### The principles of a LINAK system are as follows:



#### Attention should be paid to the following:

- Control boxes must only be connected to the mains voltage specified on the label. All DIN, jack, or minifit plugs from the CB6S/CB12/CB14/CB16/ CB20 IPX6 Washable should be locked by using a LINAK locking mechanism.
- The control box must be connected in such a way that the cables are not trapped, exposed to tension or sharp objects when the application is
  moved in different directions.
- All Control boxes with mains supply should be connected to the mains before they are able to work.

Prior to first use of LINAK batteries, please make sure that they are being charged 24 hours in order to reach proper function and prolong the lifetime of the batteries.

If the customer uses a non-LINAK battery, it is important to check that the current is not reversed (plus and minus swapped over) This applies to both control boxes, which always run off battery and control boxes with battery backup. Contact your nearest LINAK dealer for specification of type, size etc.

The control current in the handset cable must not exceed 100 mA.

**The control box** is the heart of the system and connects the various outlying units (actuators, lifting columns, handsets and attendent controls). Control boxes differ widely in complexity. The simplest are only able to convert control signals from the handset into operating voltage for the actuator. The most advanced are microprocessor controlled and have advanced functions such as, parallel running of several actuators and other complex correlations. Most LINAK control boxes provide an Electronic Overload Protection (EOP), designed to protect the actuator (excl. LA12, LA29, LA31, LA34), against overload by disconnecting the current when the actuator is fully extended or retracted. If an LA12, LA29, LA31, LA34 actuator is used, the built-in limit switches stop the actuator when fully extended or retracted, and the control box only disconnects when the maximum current is exceeded. When using a CB6S control box it is important to note that is does not have electronic overload protection.

**The actuator** is the unit, which converts the operating voltage from the control box into a linear movement.

The principle of the LINAK actuator's mode of operation is that a low voltage DC motor (5), via a gear system (12), rotates a threaded spindle, onto which a nut is fitted. As this nut cannot rotate, since the piston rod (2) is restrained, the piston rod will move forwards or backwards, when the threaded spindle rotates.

On the basis of motor type, gearing, and the threaded spindle's pitch, the actuator's thrust and speed are determined.

**The handset** is the unit to be used when you want the LINAK® system to perform a movement. It determines whether the control box will make the actuator move in or out. There are many variants of LINAK handsets.

**The Attendant Control** (ACC, ACK, ACL, ACM, ACP, ACO) is an accessory used when nursing staff want to restrict the patients adjustment options of a bed. It is often used in conjunction with a handset and disables selected functions on the handset. It can also have control functions with the same function as those on the handset.

For safety reasons, open function activation of ACP and ACO (ACC, ACK) requires activation of two buttons.



#### Recommendation:

It is recommended to have options like quick release, manual lowering or similar built into the system, in case of power loss or system failure, if movement of the system is critical. After service it is recommended to test the system for correct functionality before it is put back into operation.

#### Electrostatic discharge (ESD)

LINAK considers ESD to be an important issue and years of experience have shown that equipment designed to meet the 8kV level specified in the Standards such as IEC601-1-2, EN50082-2 are insufficient to protect electronic equipment in certain environments.

LINAK handles all Electro Static Discharge Sensitive devices (ESDS) according to EN61340

#### 1. Handling and Mounting of ESDS devices.

- Handling of sensitive components only takes place in an ESD Protected Area (EPA) under protected and controlled conditions.
- Wrist straps and/or conductive footwear (personal grounding) are always used when handling ESDS devices.
- Sensitive devices are protected outside the EPA by the use of ESD protective packaging.


#### 2. Responsibility LINAK/Customer.

- ESDS devices must under no circumstances, during transport, storage, handling, production or mounting in an aplication, be exposed to harmfull ESD.
- LINAK can only guarantee the lifetime of ESDS devices if they are handled in the same way from production at LINAK A/S until they are mounted in the manufacturers application. It is therefore important that the ESDS devices are not removed from the ESD protected packaging before they are within the EPA area at the customers premises.

#### Please refer to EN61340 for further information:

EN61340-5-1, Electrostatics - Protection of electronic devices from electrostatic phenomena - General requirements EN61340-5-2, Electrostatics - Protection of electronic devices from electrostatic phenomena - User guide

#### Fundamental actuator construction

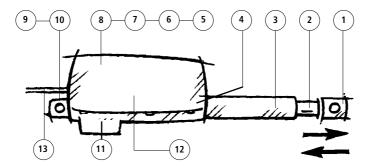

- 1. Piston rod eve
- 2. Piston rod
- 3. Location of mechanical splines
- 4. Location of brake

- 5. Motor
- 6. Motor with optical switch
- 7. Motor with potentiometer
- 8. Motor with reed-switch
- 9. Back fixture

- 10. Back fixture with electrical splines
- 11. Ouick release mechanism
- 12. Transmission between motor and spindle
- 13. Cable for connection to 12/24/36V DC by means of plug via control box

#### Warranty and service life

The LINAK® warranty covers manufacturing defects in the products, starting from the date of manufacture. There is 36 months' warranty on the HOMELINE® products, 18 months' for MEDLINE® and CARELINE® products, and 12 months' for the TECHLINE® products. There is 12 months' warranty on batteries. The warranty is limited to the value of the LINAK product.

LINAK's guarantee is only valid so far as the products have been used and maintained correctly and has not been tampered with. Furthermore, the products must not be exposed to violent treatment. In the event of this, the warranty will be ineffective / invalid. LINAK's warranty is only valid if the system is unopened and has been used correctly.

All LINAK products are designed to have an optimum service life as a matter of course, but the expected service life in a specific application is very dependent on how the products are used.

#### **IP Protection degree**

The products can be cleaned as follows according to their IP protection, which is stated on the product label.

The IP code specifies the degrees of protection provided by the enclosures. For most products only the protection against ingress of water (second characteristic numeral) is specified, ingress of solid foreign objects or dust (first characteristic numeral) is not specified and therefore replaced by the letter X in the code. For some special industrial products both the first and second characteristic numerals are specified. This is a demand from the marked and will only be specified if tested and approved.

IP protection	Cleaning instructions			
IPX0	Clean with a damp cloth			
IPX1	Clean with a damp cloth			
IPX2	Clean with a damp cloth			
IPX3	Clean with a damp cloth			
IPX4	Clean with a damp cloth			
IPX5	Wash with a brush and water, but not water under pressure			
IPX6	Wash with a brush and water. The water can be under pressure, but the system must not be hosed down directly with a highpressure cleaner. Max. 20°C			
IPX6 Washable according to IEC 60601-2-52	Clean by the use of wash tunnels according to IEC 60601-2-52			

To avoid degreasing of the piston rod, the actuator should be retracted to minimum stroke and without load before washing.



#### Warning!

The systems must not be sprayed directly with a highpressure cleaner.



#### Warning!

Interconnecting cables must remain plugged in during cleaning to prevent the ingress of water.



#### Warning!

Cleaning with a steam cleaner is not permitted.

#### IP66 Washable - Description of washing test

LINAK washable products are frequently put through a fully regulated washing test.

LINAK understanding of the word washable is that the products conform to this test and none other.

Reference: The Norm EN 60601-2-52, which includes special demands to fundamental safety and relevant functional characteristics for

hospital beds.

The demands for the washing process are described in the German "Maschinelle Dekontamination" from the organization

AK-BWA.

Description: At LINAK the washing test takes place in an instrument washing machine, which is fitted and programmed in such a way that

it duplicates the process used in a typical hospital installation for the cleaning of beds and other medical equipment.

During the test the products are exposed to both thermal and chemical effects.

To avoid degreasing of the piston rod, the actuator should be retracted to minimum stroke and without load before washing.

**Preparation:** As plastic materials to a larger or lesser degree change characteristics and shape with time and climatical exposure, an aging

of the products is carried out first. The conditions for aging are 65 °C +/- 2°C in normal dry air for 10 days followed by a

minimum of 16 hours at room temperature before the washing process starts.

**Procedure:** Aging for 10 days at 65°C.

**Detergents:** 

Rest for a minimum of 16 hours.

The washing process proceeds in the following way:

. Wash with Alkaline detergent for 2 min. with 70 °C warm water in the tank

• Rinse with neutral rinsing product for 20 sec. with 85 °C warm water in the tank

Drying and cooling for 10 min. in open air at normal room temperature approx. 20 °C

• The washing process is repeated 50 times

Washing machine: The pressure before the nozzle must not exceed 8 bar and the distance between the nozzles and electrical components must

be at least 30 cm.

Only flat squirt nozzles are allowed.

**Water:** Degree of hardness not more than 5° dH and no demineralized water.

LINAK recommend the following products:

• Sekumatic FDR or FRE from Ecolab

Neodisher Dekonta from Dr. Weigert

Thermosept NDR from Schülke or similar with a pH-value of 5-8 and in a concentration of 0.5%

Rinsing aids: LINAK recommend the following products:

· Sekumatic FKN from Ecolab

· Neodisher BP or TN from Dr. Weigert

• Thermosept BSK from Schülke or similar with a pH-value of 5-8 and in a concentration of 0.2%.

Demands to products:

· They must not contain caustic solutions

They must not change the surface structure or adhesive properties of the plastic

Must not break down grease.

#### LINAK washing profile according to EN60601-2-52

# 

#### LINAK washing machine



#### Cable Wash

#### Before the washing procedure starts!

In order to maintain the flexibility of the cables, it is important that the cable is placed in such a way that the cable's own weight does not strain the coil during the washing process.

This can be done by placing the cable ON the bed or another form of support for the cable.

Please see the examples in the below pictures



#### Maintenance

#### Valid for all LINAK products

- The LINAK products must be cleaned at regular intervals to remove dust and dirt and inspected for mechanical damage, wear and breaks,

   worn out parts must be replaced.
- The LINAK products are closed units and require no internal maintenance.
- Only type IPX6 is waterproof and type IPX6 Washable tolerates being washed in tunnels.
- . The LINAK products must be IPX6 Washable when cleaning in wash tunnels. Make sure that the plugs are correctly fitted with O-rings before washing.
- O-rings: When individual parts are replaced in a LINAK IPX6 or IPX6 Washable system, the O-rings on all parts, must be replaced at the same time.
   On control boxes with a replaceable mains fuse, the O-ring in the fuse cover must be replaced every time the cover has been removed.
   The O-rings must be greased in water free vaseline when replacing them. Make sure that the counterpart the socket is clean and undamaged.

#### Valid for all LINAK actuators and lifting columns

- Actuators/lifting columns must be inspected at attachment points, wires, piston rod, cabinet, and plugs, as well as checking that the actuator/ lifting columns function correctly.
- To ensure that the pregreased inner tube remain lubricated the actuator must only be washed down when the piston rod is fully retracted.

#### Valid for all LINAK control boxes and handsets

- Electronics must be inspected at attachment points, wires, cabinet, and plugs.
- Inspect the connections, cables, cabinet, and plugs, and check for correct functioning (does not apply to battery versions).
- With the exception of the CS16 the control box is sealed and maintenance free.
- Inspect at regular intervals that the ventilation aperture on the external battery is positioned correctly and is intact throughout its length, approx. 20 mm., see figure 1.

#### **Environmental conditions**

Storage and transport	
Operating	
Temperature Relative humidity Atmospheric pressure	5°C to 40°C 20% to 90% @ 30°C – not condensing 800 to 1060 hPa (Rated to operate at an altitude $\leq$ 2000 m,
Storage	
Temperature Relative humidity Atmospheric pressure	$-10^{\circ}$ C to +50°C 20% to 90% @ 30°C − not condensing 800 to 1060 hPa ( <i>Rated to operate at an altitude</i> ≤ 2000 m,
Transport	
Temperature Relative humidity Atmospheric pressure	-10°C to +50°C 20% to 90% @ 30°C − not condensing 800 to 1060 hPa (Rated to operate at an altitude $\leq$ 2000 m,
If the actuator is assembled in the application and is exposed to push or pull during transportation, the actuator can be damaged.  Do not drop an actuator or otherwise damage the housing during disassembly or transportation.  We do not recommend using an actuator which has been damaged.	

Valid where nothing otherwise is stated under the specific products in a later section.

#### Insulation class

LINAK control boxes are available in insulation class 1 and insulation class 2.

Class 1 means with earth connection

Class 2 means without earth connection

When measuring the resistance in the earth connection in LINAK Control Boxes (class 1), it is recommended to use equipment, delivering a test current of no less than 5A. The resulting voltage will correspond to the resistance in the earth connection. Test currents below 5A, would yield no exact measurements.



If the application is insulation dielectric strength tested by applying a test voltage from the terminals of the mains connection to any accessible metal parts (e.g. 4 kV for 240 V rated medical equipment), corona discharge or a momentary flashover might occur within the actuator. This is not considered as an insulation breakdown.

However to avoid to overstress different types and levels of insulation, the control box and the actuator must be tested individually (disconnected) with the respective dielectric strength test voltages (e.g. 4 kV for a 240 V rated control box and 500 V for the actuator). This principle is in accordance with IEC 60601-1:2005, cl. 8.8.3.

#### Key to symbols

The following symbols are used on the label on the LINAK products.

	IEC 60417-5172: Class II equipment	(ÚL)	UL Listing Mark	C€	Compliance to all relevant EC directives
	Product with a thermofuse		UL Listing Mark for Canada	6	China
		t QL)		9	Pollution control mark (also indicates recyclability)
<b>~</b> \	IEC 60417-5957: For indoor use only	շ (ՍL) us	UL Listing Mark for Canada and the United States	0.1 W Standby	ZERO standby power
	IEC 60417-5222:		UL Listing Mark	Power	Regulatory Compliance Mark:
9	Safety isolating transformer,	LISTED			The Australian Safety/EMC Regulations
•	IEC 60417-5840:		UL962	IPXX	Protection against contact/ foreign matter (first character)
$\mathcal{T}$	Patient part of type B	File E151104	UL60601-1	IFAA	and water (second character) as per EN60529
	Patient part of type BF	File E175209	UL60601-1		Alternating Current
<b>★</b>		File E97199	UL1310	<i>'</i> \	
	Earth	APPROVAL	AS 3108		Direct current
Ļ		V94265	Australian approval mark		1.16.2
	IEC 60417-5019:	46	Various	0	Lock function
	Protective earth; protective ground	Product Eafrey Fridant		7	Release function
	IEC 60417-5002:	LGAIT	TÜV Rheinland - LGA tested	U	
<u> </u>	Positioning of cell	(SAFETY)		<b>5</b> *2	Charge indicator
_	ISO 7000-0434A:		Recognised		Cofee and the found in house
<u></u>	Caution, consult accompanying document	74	Component Mark	Ü	Safety switch/enable button
	ISO 7000-1641	<b>6</b> 10	Canadian	u	
i	Operating instructions	c All	Recognised - Component Mark	PEOGRAFIA	C/N XXXXXXX
V	Electronics scrap	<b>E</b> 11®	Recognised	RECOGNIZED COMPONENT	ETL Recognized Component mark for Canada and United
N N		C 7 US	Component Mark for Canada and the United States	c (CIV)us	States
200	Recycle	↑ Ps	PSE-Mark	Intertek	For complete description, see ETL-marking on next page.
Li-ion		E			·

#### **ETL-marking**

Due to space limitations, the complete ETL-marking demands are not represented on the marking plates.

The full ETL Recognized Component markings are shown here.



C/N 120690
Conforms to ANSI/AAMI Std. ES60601-1
Cert. to CSA Std. C22.2 No. 60601-1



C/N 9901916 Conforms to ANSI/AAMI Std. ES60601-1



C/N 4008003 Conforms to ANSI/AAMI Std. ES60601-1



C/N 4008004 Conforms to ANSI/AAMI Std. ES60601-1 Cert. to CSA Std. C22.2 No. 60601-1



C/N 4008005 Conforms to ANSI/AAMI Std. ES60601-1 Cert. to CSA Std. C22.2 No. 60601-1



C/N 4008623 Conforms to ANSI/AAMI Std. ES60601-1 Cert. to CSA Std. C22.2 No. 60601-1



C/N 4008838 Conforms to ANSI/AAMI Std. ES60601-1 Cert. to CSA Std. C22.2 No. 60601-1



C/N 4008671
Conforms to ANSI/AAMI Std. ES60601-1



C/N 4009507 Conforms to ANSI/AAMI Std. ES60601-1 Cert. to CSA Std. C22.2 No. 60601-1

#### Mounting

#### Actuator:

Do not use any other screws for the mounting brackets than those recommended by LINAK. If longer screws are used they will come into contact with the inner parts of the actuator. This will result in an irregular operation or even damage the actuator.

#### During mounting, the actuator must always be:

- Fixed, to protect it against torque and bending. See Figure 2.
- Fixed, so that it is restrained, but free to move on its mountings. See Figure 3.
- Fixed in brackets, which can take up the torque reaction. See Figure 3.
- Mounted at right angles, so that the right angle requirement is observed. See Figure 4.
- · Mounted with correct bolt dimension.
- Mounted with bolts and nuts made of high quality steel grade (e.g. 10.8). No thread on bolt inside back fixture or piston rod eye.
- Bolts and nuts must be protected from being able to fall out.
- Inspect the actuator for damage before mounting. Damaged actuator must not be mounted. Watch e.g. for damaged packaging.
- Do not use a too high tourque when mounting the bolts for back fixture or piston rod eye

#### Control boxes:

- The mounting screws on the control box must be tightened with a maximum torque of 1 Nm
- The mounting surface to which the control box is attached should have a surface evenness better than  $\pm$  0.5 mm.
- Systems must not be installed/deinstalled while in operation.
- Control boxes with a wet alarm must be mounted as shown on figure 5.
- Nuts and bolts must be made of steel.
- · Nuts and bolts must be tightened securely.
- Control boxes with earth connection (Class 1), here the nut must be tightened with a torque of 1-1,2 Nm.

The correct bolt size for securing the CB8, CB12, CB14, CB16, CB20 and CUDM, is Ø5 mm and the ACP box is M5.



#### Cables:

It is important to remove the transport plastic bag before using the cable. Cables need to be fixed to the application or to be placed in such a way that users cannot stumble and injure themselves.

#### Accessories:

The mounting screws on the accessories must be tightened with a maximum torque of 1 Nm. IRO can be mounted with a higher torque, up to 2 Nm.

- The mounting surface to which the accessory is attached should have a surface evenness better than ± 0.5 mm.
- Systems must not be installed/de-installed while in operation.
- · Nuts and bolts must be made of steel.
- · Nuts and bolts must be tightened securely.

The correct bolt size for securing the DJB, IRO, MJB, SLS and SMPS30 is M4 and the BA18 is M5.

#### Controls

The mounting screws on the controls must be tightened with a maximum torque of 1 Nm.

- The mounting surface to which the accessory is attached should have a surface evenness better than ± 0.5 mm.
- Systems must not be installed/de-installed while in operation.
- Nuts and bolts must be made of steel.
- Nuts and bolts must be tightened securely.

The correct bolt size for securing the ACC and ACL is M4, for ACP is it M5 and for the ACM is it M6.

For further instructions regarding mounting, see the data sheet for the individual product or in chapter 5, 6 or 8 in this manual.

#### Connecting the system

Do not connect the mains cable until all actuators and handsets have been connected to the control box.

Start by connecting the handset to the control box. The connection in the control box is marked with "HB".


Connect the different actuators to the different channels on the control box. Each channel is marked with a number (e.g. "1", "2", "3"......).

Check that all plugs are well connected and firm pushed into the connection plug. Due to the fact that LINAK control boxes are designed for a high IP degree a firm force can be required.

#### Connect the mains cable.

The actuators can now be operated by pushing a button on the handset. Use only one button at the time.

If the control box is equipped with a special software an initializing process might be necessary. This process is described in the software specification.

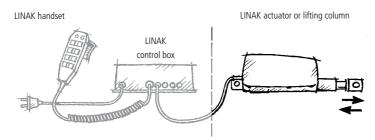

#### Attention should be paid to the following:

- Control boxes must only be connected to the mains voltage specified on the label. All DIN, jack or minifit plugs from the CB65/CB12/CB14/CB16/ CB20 IPX6 Washable should be locked by using a LINAK locking mechanism.
- The control box must be connected in such a way that the cables are not trapped, exposed to tension or sharp objects when the application is
  moved in different directions.
- All Control boxes with mains supply should be connected to the mains before they are able to work.

Prior to first use of LINAK batteries, please make sure that they are being charged 24 hours in order to reach proper function and prolong the lifetime of the batteries

If the customer uses a non-LINAK battery, it is important to check that the current is not reversed (plus and minus swapped over) This applies to both control boxes, which always run off battery and control boxes with battery backup. Contact your nearest LINAK dealer for specification of type, size etc. The control current in the handset cable must not exceed 100 mA.

Any non-detachable power supply cord with mains plug is considered as the disconnecting device.

Charging is only allowed in dry environment, and appliance inlet must be thoroughly dried before connecting to mains.

All types of actuators may only be connected according to the label, where the voltages 12, 24, or 36 VDC are indicated.

- a) Actuators with jack plugs may only be connected to LINAK control boxes
- b) Actuators without plugs are connected as shown in Figures 6.1 6.12.

For actuators operating without a control box, the mains supply of the actuator must be equipped with an arrangement, which switches off the actuator at end-stop (e.g. LS or LSD limit switch). If there is a risk of overloading the actuator, the mains supply must be equipped with a safety device against overloading (e.g. a CS16 PCB). If this requirement is not observed, the actuator may be damaged.

Actuators with internal control PCBs's are not first failure safe if used in a system combination without power request (power for actuator switched ON only when handset key active).

#### JUMBO™ system (special information)

The LINAK JUMBO system is specially developed for patient lifts, offering various combinations of actuators and control boxes.

#### Connecting the system:

Mount the mounting bracket (MBJ) to the application. Mount control box and battery (and charger (CHJ2) if equipped).

If it is a JUMBO Home system mount the control box on the application (no mounting bracket is needed).


Only vertical mounting allowed (connectors facing downwards).

Connect the handset to the control box. The connection in the control box is marked with "HB".

Connect the actuators to the control box. Each channel is marked with a number (e.g. "1", "2"). Channel "1" has always to be used for the High / Low (Lifting) function.

The actuators can now be operated by pushing a button on the handset. Use only one button at the time.

#### Example of JUMBO patient lift system

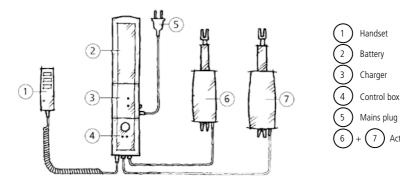

System components:


Actuators Control Box Batteries

Batteries
Handsets
Battery Charger

types LA28, LA32, LA34, LA44 types CBJ1/CBJ2, CBJC


types BAJ1, BAJ2 types HB5, HB7, HB8 type CH01

#### Configuration of the JUMBO System

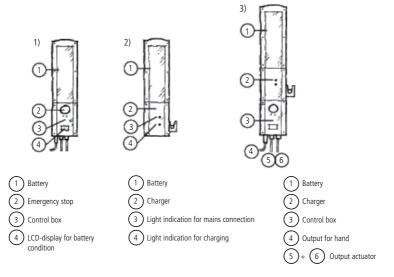

...to be continued

Actuators

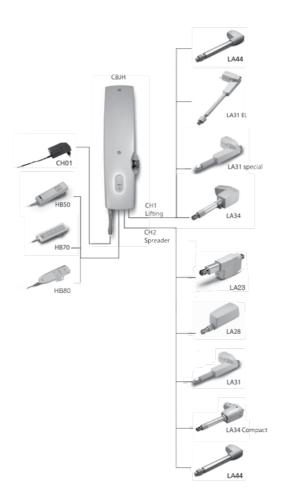

#### 2. Information on start-up, de-installation and operation

#### Before installation, de-installation, or troubleshooting:

- · Stop the actuator/lifting column.
- Switch off the power supply or pull out the mains plug and pull out the plug to the actuator/lifting column.
- · Relieve the actuator/lifting column of any loads, which may be released during the work.

Prior to first use of LINAK batteries, please make sure that they are being charged 24 hours in order to reach proper function and prolong the lifetime of the batteries.

#### Before start-up:

- Make sure that the system has been installed as instructed in the User Manual.
- The individual parts (actuator/lifting column/handsets etc.) must be connected before the control box is connected to the mains.
- Make sure that the voltage of the mains to be connected to the product or the system is the one stated on the label.
- Make sure that the actuator/lifting column is connected to a mains electricity supply/transformer with the correct voltage and which is dimensioned
  and adapted for the actuator in question.
- The equipment can be freely moved over the actuator/lifting column's whole working area.
- · Check correct function after mounting.
- The actuator/lifting column must not be loaded in excess of the values indicated in the specifications on the product label.
- The duty cycle noted on the product label must always be noted. Otherwise there is a risk of damaging the products.
   Exceeding the duty cycle will result in a dramatic reduction of the life time of the system.
   Unless specified otherwise on the product label the duty cycle is max. 10%: Max. 2 minutes in use followed by 18 minutes not in use.
- The actuator/lifting column system may only be used in an environment corresponding to the system's IP-rating.
   LINAK products are marked with the actual IP-rating on the label.
- If any individual parts are suspected to be damages, do not install the parts, but return them for inspection/service.

#### **During operation:**

- Listen for unusual sounds and watch out for uneven running. Stop the actuator/lifting column immediately if anything unusual is observed.
- If the control box makes unusual noises or smells, switch off the mains voltage immediately and the external battery, if any.
- · Take care that the cables are not damaged.
- Unplug the mains cable on mobile equipment before it is moved.

## **Troubleshooting Actuators / Lifting columns**


Symptom	Possible cause	Action
No motor sound or movement of piston rod	- The actuator is not connnected to the control box - Blown fuse in the control box - Cable damaged	Connect the actuator to the control box     Fuse must be changed     Send actuator for repair
Excessive electricity consumption		- Send actuator for repair
Motor runs but spindle does not move	- Gear wheel or spindle damaged	- Send actuator for repair
Actuator cannot lift full load	- Clutch is worn - Motor is damaged	- Send actuator for repair
Motor sound but no movement of piston rod		- Send actuator for repair
No signal from Reed or Hall switch		- Send actuator for repair
Motor runs and quick release does not function or is noisy	- Declutching arm turns less than approx. 75°	- Adjust cable
Piston rod will only move inwards and not outwards	- Safety nut has operated	- Send actuator for repair
Motor runs too slowly or does not give full force	- Insufficient power supply - Voltage drop in cable	- Increase power supply - Thicker cable

## **Troubleshooting Electronics**

Symptom	Possible cause	Action
Power indicator does not light up	- Not connected to mains	- Connect to mains
	- The fuse has blown	- Replace fuse, if the system is prepared for external fuse replacement, or send the system for repair
	- Defective power cable	On control boxes with exchangeable power cable change the cable.     On control boxes with fixed cable send it for repair
	- Control box defective	- Send control box for repair
Power indicator lights up, but actuator does not run	- Actuator plug not pushed into control box properly	- Push actuator plug into control box properly
Relays in control box are heard clicking	- Actuator defective	Replace actuator     Control box defective     Replace the control box
Power indicator lights up, but actuator does not run	- Control box defective	- Send control box for repair
No relay noise is heard from control box Not valid for CB20/CB6S OBF/CB16 OBF	- Handset defective	- Send handset for repair
Control box completely dead on battery and no relay clicking is heard	- Battery completely flat	- Charge battery
and no relay clicking is near	- Battery defective	- Replace battery
Actuator does not run on battery, but relay clicking is heard	- Actuator plug not properly pushed into control box	- Push actuator plug properly into control box
	- Actuator defective	- Replace actuator
	- Control box defective	- Replace control box
Control box okay apart from one direction on one channel	- Handset defective - Control box defective	- Send handset for repair - Send control box for repair

#### 3. Information on specific actuators

#### 1. LA22 (MEDLINE® CARELINE® TECHLINE®)

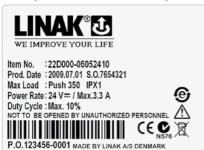

The LA22 is an in-line actuator specially designed with a small overall dimension for easy use in industrial, agricultural, and rehabilitation products.

Thanks to its small outer dimensions and linear design, the LA22 is well suited for applications where installation space is limited, such as on wheelchairs.

#### 2. LA23 (MEDLINE® CARELINE® DESKLINE® TECHLINE®)



The LA23 is a small and strong push/pull actuator (up to 2500N). The LA23 can be used in various applications where size is important.

The actuator does have build in electrical limit switches and guided nut.

#### Usage:

Duty cycle: 10%, 2 minutes continuous use followed by 18 minutes not in use

Usage temperature: - 30°C to + 55°C (according to ISO 7176-9)
 Storage temperature: - 45°C to + 70°C (according to ISO 7176-9)

Compatibility: CB20, CB16, CB6S, CBJ1/2, CBJC, CBJH, CBD4, 5 & 6\*

 $^{\star}$  SLS must be ignored Up + Down in the CBD4, 5 or 6 when configured for LA23

 $^{\star}$  Only the 3, 6 & 12 mm versions can be configured in the CBD4, 5 or 6

\* Only tested for single use.

Approvals: IEC60601-1:2005 3<sup>rd</sup> ed., ANSI / AAMI ES60601-1:2005, 3<sup>rd</sup> edition LA23 in combination with CBD4, 5 & 6 has no approvals

Fire catagory: Enclosure UL94-V0



#### Warnings!

- · Do not sideload the actuator.
- Only use the actuator within specified working limits.
- Always use steel backfixture for LA23 over 1500N and for pull loads.
- The B and G 24V motors must only be used with their respective control box types.
  - Motor type A: 12V motor must be used with CBD4, CBD5 and CBD6
  - Motor type B: 24V motor which must be used with JUMBO; CBJ1/2, CBJC and CBJH or generally in applications which are **mainly driven with battery** Motor type G: 24V motor which must be used with OpenBus™ control boxes; CB20, CB16, CB6s.
- If an actuator with stroke length below 50 mm is used, and the electrical end-stop switch fails, please be aware that the distance before reaching the
  mechanical end-stop will be prolonged. The extra distance will be 50 mm minus actual stroke length. I.e. If an actuator with 20 mm stroke length is
  used and the switch fails, it will travel an additional 30 mm before reaching the mechanical end-stop.
- Instruction concerning the turning of the piston rod eye. When mounting and taking into use, it is not permitted to make excessive turns of the piston rod eye. In cases where the eye is not positioned correctly, it is permitted to first screw the eye down to its bottom position, at a maximum torque of 2 Nm (1), and thereafter a maximum half turn outwards again (2).
- If stroke is less than 50 mm and the outer limit switch fails it will be possible to drive the actuator up to stroke of 52 mm before the mechanical end stop take effect. Please make sure that the application can withstand this in a safe way.
- When mounting the LA23 in the application ensure that the bolts can withstand the wear and that they are secured safely.
- Do not place load on the actuator housing and do prevent impact, or blows or any other form of stress to the housing.





...to be continued



#### Recommendations:

- Do not place load on the actuator housing and do prevent impact or blows, or any other form of stress to the housing.
- Ensure that the cable lock is mounted correct.
- Ensure that the duty cycle and the usage temperatures for LA23 actuators is respected
- Ensure that the cable cannot be squeezed, pulled or subjected to any other stress.
- If a cable lock has been removed it is recommended to check if it is has been damaged during removal. If so it is recommended to replace with a new one.
- Before mounting a cable, ensure that the cable, cable plug or o-ring is not damaged. If damage is observed, the cable must be replaced with a new one.
- The B and G 24V motors must only be used with their respective control box types.
- Not acceptable: B motor with OpenBus<sup>TM</sup> control boxes!

  Research The activation will be the attivated in will make the first be activated as least the second and activated the second activated the seco
- Reason: The actuator will be too strong, it will run too fast, be noisy and only have a short lifetime. The actuator will not live up to what we promise.


  Not acceptable: G motor with 24V supply!
- Not acceptable: G motor with 24V supply
  - Reason: The actuator will be too weak, this means it will only run slowly, not be able to lift as much in the cold and under low current conditions. The actuator will not live up to what we promise.
- The LA23 is not suitable for use in outdoor applications where it can be exposed to sun and rain.
  - If outdoor use cannot be avoided, it is very important that the LA23 is mounted in a position where it is well shielded. It is up to the customer to provide the shielding.
  - Furthermore, it will be good practice to ensure that the actuator is fully retracted in the "normal" position. The reason is that there will be a vacuum inside the actuator if it is extended which over time can lead to water entering the actuator.

The item numbers for ordering the Cable Lock are:

- Item number: 0231007 (light grey) for one cable lock (1 piece).
- Item number: 0231037 (black) for one cable lock (1 piece).

Below you see an instruction in how to mount and remove the cable lock from LA23.

#### a) Mount a cable lock:



Push down until the cable lock clicks into place.

#### b) Cable lock removal



Step 1: Insert e.g. a screwdriver at a 45° angle as illustrated.



Step 2: Turn the screwdriver to release the cable lock.




Step 3: Now the cable lock can be removed by hand.


**Note:** When a cable lock has been removed, it is recommended to replace it with a new.

#### **Connection diagrams:**

## Standard electrical end stop - no positioning 23XXXXXX00XXXXX




## Standard electrical end stop and potential free end stop - no positioning $23X\!X\!X\!X\!X\!X\!01\!X\!X\!X\!X$



### Dual Hall digital positioning

23XXXXXXX02XXXXX

## Dual Hall PNP positioning 23XXXXXXX03XXXXX






Note: Connection colours only fit with "open end" cables.




Note: If reversed driving is wanted this has to be done by using different cables.

## Hall Potentiometer feedback and potential free end stop 23XXXXXX2XXXXXX




#### Hall Potentiometer feedback

23XXXXXXX1XXXXXX



#### 






Note: Connection colours only fit with "open end" cables.

#### Hall PWM position feedback

23XXXXXXX03XXXXX



#### **Standard Integrated Control**


23XXXXXXX5XXXXXX

#### Integrated Control with Hall Potentiometer position feedback

23XXXXXXX6XXXXXX

#### Integrated Control with Hall PWM position feedback

23XXXXXXX7XXXXXX

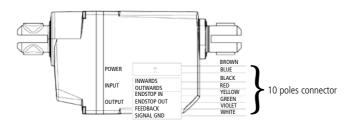

Drawing no.: 0239010-A




LA23 with integrated control is not approved according to IEC60601-1:2005 3rd ed., ANSI / AAMI ES60601-1:2005, 3rd edition.



Note: Connection colours only fit with "open-end" cables.

#### 3. LA23 IC (TECHLINE®)

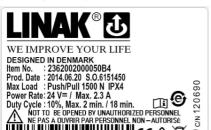

The LA23 is a small and strong push/pull actuator (up to 2500N). LA23 can be used in various applications where size is important. The actuator does have build in electrical limit switches and guided nut.

#### Usage:

 Duty cycle: 10%, 2 minutes continuous use followed by 18 minutes not in use

Usage temperature: -30°C to +55°C (according to ISO 7176-9)
 Storage temperature: -45°C to +70°C (according to ISO 7176-9)

Fire catagory: Enclosure UL94-V0



#### Warnings:

- All LA23 IC (Integrated Controls) versions are not compliant for Medical use.
- · Do not sideload the actuator.
- · Only use the actuator within specified working limits.

P.O.2140274-0001 MADE BY LINAK A/S DENMARK

- Always use steel backfixture for LA23 over 1500N and for pull loads.
- When mounting the LA23 in the application ensure that the bolts can withstand the wear and that they are secured safely.
- Motor type A: 12V motor Motor type B: 24V motor.
- If an actuator with stroke length below 50 mm is used, and the electrical end-stop switch fails, please be aware that the distance before reaching the mechanical end-stop will be prolonged. The extra distance will be 50 mm minus actual stroke length. I.e. If an actuator with 20 mm stroke length is used and the switch fails, it will travel an additional 30 mm before reaching the mechanical end-stop.
- Instruction concerning the turning of the piston rod eye. When mounting and taking into use, it is not permitted
  to make excessive turns of the piston rod eye. In cases where the eye is not positioned correctly, it is permitted
  to first screw the eye down to its bottom position, at a maximum torque of 2 Nm (1), and thereafter a
  maximum half turn outwards again (2).





#### Recommendations:

- Do not place load on the actuator housing and do prevent impact or blows, or any other form of stress to the housing.
- Ensure that the cable lock is mounted correctly.
- Ensure that the duty cycle and the usage temperatures for LA23 actuators is respected.
- Ensure that the cable cannot be squeezed, pulled or subjected to any other stress.

The item numbers for ordering the Cable Lock are:

- Item number: 0231007 (light grey) for one cable lock (1 piece).
- Item number: 0231037 (black) for one cable lock (1 piece). Below you see an instruction in how to mount and remove the cable lock from LA23.

#### a) Mount a cable lock:



Push down until the cable lockclicks into place.

#### b) Cable lock removal



Step 1: Insert e.g. a screwdriver at a 45° angle as illustrated.



Step 2: Turn the screwdriver to release the cable lock.




Step 3: Now the cable lock can be removed by hand.

**Note:** When a cable lock has been removed, it is recommended to replace it with a new.


#### Connection diagrams:

#### Standard electrical end stop - no positioning

23XXXXXXX00XXXXX

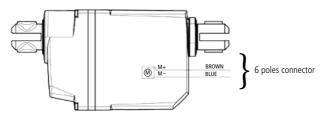


#### Standard electrical end stop and potential free end stop - no positioning 23XXXXXXX01XXXXX



## **Dual Hall digital positioning**

23XXXXXXX02XXXXX

#### **Dual Hall PNP positioning** 23XXXXXXX03XXXXX






Note: Connection colours only fit with "open end" cables.




Note: If reversed driving is wanted this has to be done by using different cables.

## Hall Potentiometer feedback and potential free end stop 23XXXXXX2XXXXXX




#### Hall Potentiometer feedback

23XXXXXXX1XXXXXX



## Hall PWM position feedback and potential free end stop 23XXXXXX4XXXXXX






Note: Connection colours only fit with "open end" cables.

#### Hall PWM position feedback

23XXXXXXX03XXXXX



#### Standard Integrated Control


23XXXXXX5XXXXXX

#### Integrated Control with Hall Potentiometer position feedback

23XXXXXXX6XXXXXX

#### Integrated Control with Hall PWM position feedback

23XXXXXXX7XXXXXX

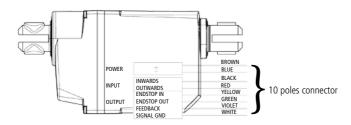

Drawing no.: 0239010-A



LA23 with integrated control is not approved according to IEC60601-1:2005 3rd ed., ANSI / AAMI ES60601-1:2005, 3rd edition.



Note: Connection colours only fit with "open-end" cables.

#### 4. LA27 (MEDLINE® CARELINE® HOMELINE®)



Item No. : 273100 A01405040 Prod. Date : 2009.03.18 S.O.7654321 Max Load : Push 1500 N IPX4

Power Rate: 24 V == / Max. 3.5 A

Duty Cycle: Max. 10% NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

P.O.123456-0001 MADE BY LINAK A/S DENMARK

The LA27 actuator is a powerful actuator designed for applications such as furniture and care beds.

#### Built-in end-stop circuit (CS27)

In the LA27/CS27 the actuator is switched off at the end position. There is no overload protection.

The LA27CS27 has no IP classification and is connected to a HB71 or HB72.
 The power supply is the TR6 or TR7.

It is important that the supply voltage 24 VDC is connected correctly (see *Figure 6.7*) otherwise the CS-circuit may be destroyed.

#### Mechanical spline:

The splines function so that the actuator can only push, not pull. During pull in the actuator, the inner tube is lifted off the thread bush, and the actuator can therefore never pull a load, only push.

#### Functional test of mechanical splines:

When the piston rod is at the innermost position, it must be possible to pull it out manually to its full travel length and to press it in again without much resistance and without using the motor. If this is not possible, contact your nearest LINAK dealer.

#### **Ouick Release:**

The LA27 with QR is designed to be used as a part of the backrest function in a Care/Hospital bed. The QR function allows a patient to be lowered manually to a flat position very quickly (CPR) in case of an emergency.

#### Functional test of OR:

To test a LA27QR it is necesarry to have the actuator built into an application. The release cable has to be provided and mounted by the customer.

The necesarry force on the cable requiered to operate the Quick Release is approx. 20 kg. The necesarry force on the actuator to operate the quick release is approx. 50 kg. Wenn operating the QR, it is recommended that the QR is activated all the way down.

#### Usage:

- Duty cycle: 2/18; 2 minutes continuous use followed by 18 minutes not in use
- Duty cycle: Max 5% or 1 min. continuous use followed by 19 minutes not in use with 8000 N version.
- · Lifetime limited to only 3000 cycles according to EN1970 with 8000 N version
- Ambient temperature: +5° to +40°C (the actuator must also be at this temp.)
- Approvals:
   LA27 is approved according to the 3rd edition of IEC 60601-1, ANSI/AAMI ES 60601-1 and CAN/CSA C-22.2 No. 60601-1

NOTE: re. LA27 with 6.000N specification (274x3xxx1xxx0xZ; Z = A or B with worm shaft\*) for OpenBus<sup>TM</sup>: I.e. to use such combination a preceding test MUST be carried out.

This combination reduces the self-lock ability because of lower friction from the worm shaft which has a rolled axle. The worm shaft is however needed because of the OpenBus™ output power.

The problem related to an application:

The self-lock ability may be reduced in cases where the load curve is 6.000 N in both minimum and maximum stroke length.



#### Warning!

- The actuator must not be used in pull applications when the quick release is activated, as the risk of personal injury can arise.
- Do only use the actuator within specified working limits.
- . Do not sideload the actuator.



#### Recommendations:

- LA27 is not meant to have CB6S OBL/OBF mounted on the actuator. The CB6S OBL/OBF must be mounted separately using a bracket.
- LA27 must have a minimum installation dimension of 320 mm if control box CB6 is to be mounted on the actuator.
- The cable for the LA27 is not part of the actuator therefore it must be ordered separately.
- Piston rod eye: The distance from the centre of the eye, to the end of the actuator.
- · Change between push and pull not allowed
- Inspect actuator once a year, for wear and jarring sound.
- We recommend using a safety nut in medical applications
- · Do not expose actuators without all cables fitted to water/cleaning.
- No thread on bolt inside back fixture.

#### Note:

For CB6 the current will be cut off when the total current on all channels reaches approx. 5.1 to 5.4 Amp. This means that when two LA27's running simultaneously are connected to a CB6 they will not be able to lift the max. load mentioned under technical specifications.

#### 5. LA28 (MEDLINE® CARELINE® HOMELINE®)



Item No. :281100+00100000
Prod. Date :2009.07.01 S.O.7654321
Max Load :Push 2000 IPX1

Power Rate: 24 V == / Max.2.3 A
Duty Cycle: Max. 10%, Max. 2 min. / 18 min.
NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

P.O.123456-0001 MADE BY LINAK A/S DENMARK

The LA28 is primarily a system actuator. The actuator is very quiet and powerful designed for use in the furniture, rehabilitation, and hospital bed line of businesses.

The actuator is also ideal for use in agricultural machinery and for a wide range of industrial applications.

#### Reed-switch:

Reed-switch gives a number of pulses for each rotation of the motor. These pulses are used to calculate the piston rod's position as well as to control several actuators running in parallel.

Your nearest LINAK dealer can inform the number of pulses per stroke length.

Regarding Reed-switch connection, Figure 6.8 (LA28R)

#### Built-in end-stop circuit (CS28/CS28S)

In the LA28 actuator, with built-in CS28 A-, B- or C-PCB, the actuator is switched off at the end position or when overloaded.

#### LA28 actuator with:

- The CS28 A is standard IPX1 and is connected to a HB41 handset with a telephone plug.
- The CS28 B is standard IPX5 and is connected to a HB41 handset with a DIN plug. CS32 B is also available in IPX6.
- The CS28 C is standard IPX1 and is connected to an external contact or control. See figure 6.7.

#### Mechanical spline:

The splines function so that the actuator can only push, not pull. During pull in the actuator, the inner tube is lifted off the thread bush, and the actuator can therefore never pull a load, only push.

#### Functional test of mechanical splines:

When the piston rod is at the innermost position, it must be possible to pull it out manually to its full travel length and to press it in again without much resistance and without using the motor. If this is not possible, contact your nearest LINAK dealer.



#### Warning!

Do only use the actuator within specified working limits.

#### Usage:

Duty cycle: Max. 10 % or max. 2 min. continuous use followed by 18 min. not in use.

Ambient temperatures: + 5° to + 40°C
 Compatibility: CB8, CB12, CB14, and CBJ

Approvals: IEC60601-1:2005 3rd edition, ANSI / AAMI ES60601-1:2005, 3rd edition and CAN / CSA-22.2 No 60601-1:2008 approved



#### Recommendations:

- LINAK control boxes are designed so that they will short-circuit the motor terminals of the actuator(s), when the actuator(s) are not running.
   This solution gives the actuator(s) a higher self-locking ability. If the actuator(s) are not connected to a LINAK control box, the terminals of the motor must be short-circuited to enable self-locking of the actuator.
- The maximum load in pull is 2000 N.
- Min. stroke length for the LA28 with splines is 80 mm
- The current supply to LINAK actuators must be cut off in case of overload and when the actuators reach end position.
- Ambient operating temperature is 22°C.
- LA28 Compact cannot be used in pull applications, unless fitted with an aluminium back fixture.

#### Further information:

#### Noise level:

- LA28: dB(A) 45; measuring method DS/EN ISO 3743-1, actuator not loaded
- LA28S: dB(A) 54; measuring method DS/EN ISO 3743-1, actuator not loaded

#### Material:

• The piston rod eyes are "crimped" in place and cannot be unscrewed.




"Crimped" piston rod eye



Piston rod without eye (are not tested)

#### 6. LA28 Compact (MEDLINE® CARELINE® TECHLINE®)

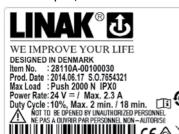

The LA28 Compact is a small and powerful actuator designed for use in system solutions for healthcare equipment or industrial applications. Ideal applications are for example wheelchairs, treatment chairs, patient lifts or beds.

#### Usage:

· Duty cycle:

Max 10 % or max. 2 min. continuous use followed

by 18 min. not in use. Ambient temperatures:  $+ 5^{\circ} to + 40^{\circ} C$ 

 Compatibility: CB8, CB12, CB14 and CBJ

Approvals: IEC 60601-1:2005, 3rd edition, ANSI / AAMI ES60601-1:2005, 3rd edition and CAN / CSA-22.2

No 60601-1:2008 approved



P.O.12345678-0001

#### Recommendations:

- \*LINAK control boxes are designed so that they will short-circuit the motor terminals of the actuator(s), when the actuator(s) are not running. This solution gives the actuator(s) a higher self-locking ability. If the actuator(s) are not connected to a LINAK control box, the terminals of the motor must be short-circuited to enable selflocking of the actuator.
- . Min. stroke length for LA28 with splines is 80 mm
- The current supply to LINAK actuators must be cut off in case of overload and when the actuators reach end position.
- Ambient operating temperature is 22°C.
- LA28 Compact cannot be used in pull applications, unless fitted with an aluminium back fixture.

#### Further information:

#### Noise level:

• LA28: dB(A) 45; measuring method DS/EN ISO 3743-1, actuator not loaded

MADE BY LINAK A/S DENMARI


. LA28S: dB(A) 54; measuring method DS/EN ISO 3743-1, actuator not loaded

#### Material:

• The piston rod eves are "crimped" in place and cannot be screwed loose.



"Crimped" piston rod eye



Piston rod without eye (are not tested)

#### 7. LA29 (HOMELINE®)



Prod. Date : 2009.03.18 S.O.7654321 Max Load : Push 1000 N Power Rate: 24 V == / Max. 3.5 A

Duty Cycle: 10%, Max. 2 min. / 18 min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNE

P.O.123456-0001 MADE BY LINAK A/S DENMARK

The LA29 actuator is a HOMELINE actuator, specially made for domestic applications like recliners.

The actuator has a very short installation dimension as the distance between the two fixing points is small when the actuator is retracted and at the same time independent of the stroke length.

#### Reed switch:

The Reed switch gives a number of pulses for each rotation of the motor. These pulses are used to calculate the position as well as to control several actuators running in parallel.

Your nearest LINAK dealer can inform the number of pulses per stroke length.

Regarding Reed-switch connection, see Figure 6.10.

#### Hall

The Hall principle is very similar to the Reed principle. A Hall sensor is based on a magnet that rotates. Two hall sensors are placed close to the magnet field. The control box (CB20/CB6S OBF/CB16 OBF/CBD4/CBD5) can detect whenever the magnetic field changes direction.

The two Hall sensors are placed close to each other, but with a small displacement. This distance leads to a timing difference between the two pulses. Whichever one of them comes first indicates the direction of movement. Therefore, there will be no error summary (as with the reed switch) Hall is therefore a very precise system. Hall is not suitable for use in quick release actuators - see figure 10.

#### Built-in end-stop circuit

The end-stop switch is part of the actuator construction. Each time the actuator reaches end-stop position the switch is activated and the current is cut off.



#### Warning!

Do only use the actuator within specified working limits.

#### 8. LA30 (MEDLINE® CARELINE® TECHLINE®)



P.O.2140274-0001 MADE BY LINAK A/S DENMARK

The LA30 is a powerful actuator yet small enough to fit most applications.

The actuator can be supplied with options such as built-in potentiometer for servo operation or an extra powerful motor for increased speed and strength (S-motor).

In addition to industrial and agricultural applications, the actuator is also ideal for positioning satellite dishes.

#### Reed-switch:

The Reed-switch gives a number of pulses for each rotation of the motor. These pulses are used to calculate the piston rod's position as well as to control several actuators running in parallel.

Your nearest LINAK dealer can inform the number of pulses per stroke length.

Regarding Reed-switch connection, see Figure 6.10.

#### Mechanical spline:

The splines function so that the actuator can only push, not pull.

During pull in the actuator, the inner tube is lifted off the thread bush, and the actuator can therefore never pull a load, only push. See Figure 8.

#### Functional test of mechanical splines:

When the piston rod is at the innermost position, it must be possible to pull it out manually to its full travel length and to press it in again without much resistance and without using the motor. If this is not possible, contact your nearest LINAK dealer.



#### Warning!

Do only use the actuator within specified working limits.

#### Usage:

Duty cycle: 10%, 2 minutes continuous use followed by 18 minutes not in use

Ambient temperature: + 5° to + 40°C
 Storage temperature: - 40° to + 70°C
 Compatibility: CB8, CB12,

· Should the LA30 be used with a non LINAK control unit, please ask the nearest LINAK representative for further details



#### Recommendations

LINAK control boxes are designed so that they will short-circuit the motor terminals (poles) of the actuator(s), when the actuator(s) are not running. This solution gives the actuator(s) a higher self-locking ability. If the actuator(s) are not connected to a LINAK control box the terminals of the motor must be short-circuited to achieve the self-locking ability of the actuator.

#### Improved self-locking ability



The H-bridge ensures that the motor is shorted when the relays are incactive.

This is necessary to improve the self-locking of the actuator.



When using the LA30 with stereo jack plug be aware of the reversed direction of travel as standard.




The current supply to LINAK actuators must be cut off in case of overload when the actuators reach end position.

#### Various other information:

#### Noise levels:

LA30: dB(A) 50; LA30S: dB (A) 55; LA30L: dB(A) 48. Measuring method DS/EN ISO 3743-1, actuator not loaded.

#### 9. LA31 (CARELINE® TECHLINE® HOMELINE® DESKLINE®)

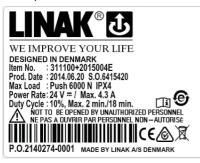

The LA31 actuator is a very quiet and powerful actuator designed for a variety of applications such as furniture, care, or hospital beds.

The standard LA31 actuator is available for both the HOMELINE, CARELINE, TECHLINE and DESKLINE product ranges.

#### Reed-switch:

The Reed-switch gives a number of pulses for each rotation of the motor. These pulses are used to calculate the piston rod's position as well as to control several actuators running in parallel.

Your nearest LINAK dealer can inform the number of pulses per stroke length. Regarding Reed-switch connection, **see** *Figure 6.10*.

#### Usage

Duty cycle: Max 10% or 2 minutes continuous use followed by 18 minutes not in use.

• Ambient temperature: + 5° to + 40°C

• The CARELINE system has full compliance with EN 60601-1

#### Hall

The Hall principle is very similar to the Reed principle. A Hall sensor is based on a magnet that rotates. Two hall sensors are placed close to the magnet field. The control box (CB20/CB6S OBF/CB16 OBF/CBD4/CBD5) can detect whenever the magnetic field changes direction. The two Hall-sensors are placed close to each other, but with a small displacement. This distance leads to a timing difference between the two pulses. Whichever one of them comes first indicates the direction of movement. Therefore, there will be no error summary (as with the reed-switch) Hall is therefore a very precise system. Hall is not suitable for use in quick release actuators. see *figure 10*.

#### Built-in end-stop circuit

In the actuators mentioned the end-stop switch is part of the actuator construction. Each time the actuator reaches end-stop position, the switch is activated and the current is cut off. In addition to the end-stop switch, we also recommend a mechanical end stop function as an additional safety option for applications where it will be necessary.

#### **External Ouick Release**

The quick release function is placed in the piston rod end, in which a wrappedspring clutch can be loosened by means of turning the spring housing either by the handle or a cable. Hereafter, the inner tube can turn freely and due to the pressure on the piston rod end from the application, the inner tube will rotate and thus screw itself downwards.

#### Internal Quick Release:

The LA31 with Quick Release is designed to be used as a part of the backrest function in a Care/Hospital bed. The Quick Release function allowes a patient to be lowered manually to a flat position very quickly (CPR) in case of an emergency.

# New version of Quick Release (Internal Quick Release).

The new version of the Quick Release is integrated in the clutch of the LA31. It operates by way of a release cable that is pulled. Hereafter, the clutch is declutched and the spindle can turn freely. Due to the pressure on the piston rod end from the application, the spindle will rotate thus moving the actuator inwards. Due to this new version the LA31 actuator can keep its standard installation dimension and has a protection class up to IPX6 washable.

The Quick Release is e.g. used for emergency lowering of the headrest part of a bed.

# Functional test of QR:

To test a LA31QR it is necessary to have the actuator built into an application. The release cable has to be provided and mounted by the customer. The necessary force on the cable requiered to operate the Quick release is approx. 5 kg. The necessary force on the actuator to operate the Quick Release is approx. 50 kg. When operating the Quick Release, it is recommended that the Quick Release is activated all the way down.

# Mechanical spline:

The splines functions so that the actuator can only push, not pull. During pull in the actuator, the inner tube is lifted off the thread bush, and the actuator can therefore never pull a load, only push. **See figure 8**.

## Functional test of mechanical splines:

When the piston rod is at the innermost position, it must be possible to pull it out manually to its full travel length and to press it in again without much resistance and without using the motor. If this is not possible, contact your nearest LINAK dealer.



#### Warning!

- If the actuator does not work as described above, the risk of injury due to squeezing can arise. Therefore, the actuator must immediately be sent
  for service at the nearest, authorised LINAK workshop.
- The actuator must not be used in pull applications when the Quick Release is activated, as the risk of personal injury can arise.
- Do only use the actuator within specified working limits.
- Bowden cable cover must click twice, in order to be locked sufficiently
- · Do not sideload the actuator
- Inspect the actuator minimum once a year for wear and jarring sound
- If an LA31 is used in an application where there are repeated dynamic (push/pull) movements in the area 2000 4000 N, then it is necessary to contact LINAK A/S in order to make a correct specification of the actuator. Repeated push/pull movements cause extra strain to the actuator and can give safety considerations, the consequence being possible damage to the actuator.



LA31 actuators for patient hoists are marked with a label to ensure the user is aware that it is not permitted to handle the patient hoist by pulling the actuator or otherwise expose it to side forces.

#### LA31 with mechanical end stop - a first failure safe option:

In many applications our customers have approvals according to EN 60601-1.

The typical applications can be beds, massage couches etc.

In the norm, EN 60601-1, it is mentioned that the application must be first failure safe.

The manufacturer is responsible for making a risk analysis in order to check this. If a risk is identified it is the manufacturer of the application who makes sure that the risk is eliminated.

Normally the result of this risk analysis will state that the end stop switch in the LA31 would be questioned: Is this switch first failure safe?

The answer to this will be: No, a switch cannot be first failure safe. - In practical life we have discovered only very few defect switches.

Ask the customer: - What was the result of your risk analysis when you achieved the EN 60601-1 approval on your application? There are several ways that an application can be made first failure safe:

- Use a mechanical stop in the application
- Use of a mechanical end stop in LA31 is a possible option.
- Use an SLS (safety limit switch) in connection with the actuator.
- · Or a longer installation dimension.

As a special solution we can offer LA31 with mechanical end stop with the same installation dimension as a standard LA31. Contact LINAK A/S for further information if you need this solution.



# Recommendations:

• LA31 with brake. An LA31 brake in a push application brakes actively when the actuator moves in an inward direction. The same applies to an actuator mounted with a brake in a pull direction. It brakes in an outward direction. Under this condition the standard motor uses up to 4 Amp. and the fast motor uses up to 6 Amp. (Measured after 5 cycles at normal room temperature).

Therefore if the LA31 with brake is used together with a CB7 it is important that the current cut-off limit of the control box is higher than the used Amp. i.e. not lower than 4 Amp.

LA31 with brake cannot be combined with CB9/CB7 with emergency lowering. For all LA31 actuators with brake self-locking ability up to max. load it is only possible in one direction: push or pull.

• The LA31 actuator must not be exposed to more than 4000 N in pull. In applications where misalignments may occur the normal back fixture can take max. 1500 N in pull whereas the flexible back fixture can take up to 4000 N in pull. The actuator must be mounted at right angles (90°) to it is fixing/load (max.1.5° deviation)

Max. load and safety factor of 2.5 according to EN60601-1:

- 6000 N is only possible from S = 0 250 mm stroke
- Only max. load of 4000N from S = 250 350 mm stroke. See details on later pages.
- Stroke above S> 350 mm is to be treated as a special article, please contact LINAK A/S.



WE IMPROVE YOUR LIFE

DESIGNED IN DENMARK Item No. : 32K500-00150412 Prod. Date : 2014.06.20 S.O.6125402 Max Load : Push 6000 N IPX5 Power Pate: 24 V = / Max 5 3 A

MAX. COAC : PUSH 0000 N IPAS

Power Rate: 24 V = / Max. 5.3 A

Duty Cycle : 10%, Max. 2 min./18 min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

P.O.2140274-0001 MADE BY LINAK A/S DENMARK

The LA32 actuator is a powerful actuator that can be supplied with a ball screw spindle to give outstanding performance. The ideal choice for a wide range of applications including adjustment of hospital beds.

The LA32 actuator has many special options including a safety nut, splines, quick release (F) and an optional protection up to IPX6 standard.

#### Reed-switch:

The Reed-switch gives a number of pulses for each rotation of the motor. These pulses are used to calculate the piston rod's position as well as to control several actuators running in parallel.

Your nearest LINAK dealer can inform the number of pulses per stroke length.

Regarding Reed-switch connection, see Figure 6.10.

#### Usage:

Duty cycle: Max. 10% or 2 minutes continuous use followed by 18 min. not in use

Ambient temperature + 5° to + 40° C

For use with LINAK control boxes CB8, CB12, CB14 and CS16 PCB or internal CS32 PCB

NON-AUTORISÉ

• Should the LA32 be used with a non LINAK control unit, please ask the nearest LINAK representative for further details

Approvals: IEC 60601-1:2005, 3<sup>rd</sup> edition, ANSI / AAMI ES60601-1:2005, 3<sup>rd</sup> edition and CAN / CSA-22.2
 No 60601-1:2008 approved



#### Recommendations:

As there is friction in the spindle/gear system, a load of 800 N is necessary to start the lowering function with the LA32F.
 The actuator will use up to 3.5 Amp. in inward direction unloaded due to a brake system that is fitted as standard on all types of the LA32F.

• Release of the QR is only possible with a Bowden cable release force 25-60 N.

• The piston rod eyes are "crimped" in place and cannot be screwed loose.





"Crimped" piston rod eye Piston rod without eye

· Piston rods without eyes have not been tested

· LA32 with quick release and freewheeling function must not be sold to new products



Maximum load in pull = 2000N



LA32 actuators for patient hoists are marked with a label to ensure the user is aware that it is not permitted to handle the patient hoist by pulling the actuator or otherwise expose it to side forces.

#### Freewheeling of piston rod

All LA32 actuators with freewheeling as well as with quick release have the designation W on the label.

# The function causes the following:

- The piston rod can be pulled out with a thrust of approx. 300 N and it remains in the new position without declutching.
- The actuator cannot pull, but only push.

## **Functional test:**

It must be possible to pull the piston rod out with a thrust of approx. 300 N and it must remain in the new position without releasing. If this is not possible, contact your nearest LINAK dealer.

#### Built-in end-stop circuit (CS32)

In the LA32 actuators, with built-in CS32 A-, B- or C-PCB, the actuator is switched off at the end position or when overloaded.

#### LA32 actuator with

- The CS32 A is standard IPX1 and is connected to a HB41 handset with a telephone plug.
- The CS32 B is standard IPX5 and is connected to a HB41 handset with a DIN plug. CS32 B is also available in IPX6.
- The CS32 C is standard IPX1 and is connected to an external contact or control. See Figure 6.7.

#### Mechanical spline:

The splines function so that the actuator can only push, not pull. During pull in the actuator, the inner tube is lifted off the thread bush, and the actuator can therefore never pull a load, only push. **See figure 8**.

#### Functional test of mechanical splines:

When the piston rod is at the innermost position, it must be possible to pull it out manually to its full travel length and to press it in again without much resistance and without using the motor. If this is not possible, contact your nearest LINAK dealer.

#### **Electrical splines:**

In the rear fixture on the actuator, a microswitch is fitted, which turns off the motor, if the actuator is exposed to pull forces.

#### Functional test of electrical splines

When the actuator is correctly fixed/mounted, the inward movement of the piston must stop, when the actuator is pulled or the movement is blocked, so that the back fixture is not put under undue stress/tension. For mounting, see *Figure 7*.

#### Quick release

When the quick release arm, **see** *Figure* **9**, is turned counter clockwise approx. 75° and fixed here, the piston rod is released and can now be pressed in to its innermost position or pulled out to its outermost position. When the quick release arm is released, the arm turns back and the actuator functions normally again. The cable must not be tight.



# Warning!

- If the actuator does not work as described above, the risk of injury due to squeezing can arise. Therefore, the actuator must immediately be sent
  for service at the nearest, authorised LINAK workshop.
- The actuator must not be used in pull applications when the quick release is activated, as the risk of personal injury can arise.
- Do only use the actuator within specified working limits.

#### 11. LA34 (MEDLINE® CARELINE®)



LA34 is a technological state-of-the-art actuator that, due to its innovative construction can push up to 10,000 N at a speed of 5 mm/sec, and with a current consumption of approx. 7 Amp. The strong LA34 actuator is made in a low weight composite material.

Its compact design, the outstanding performance and a wide range of safety options makes LA34 the right choice for a variety of medical and industrial applications.

#### Reed-switch:

The Reed-switch gives a number of pulses for each rotation of the motor. These pulses are used to calculate the piston rod's position as well as to control several actuators running in parallel.

Your nearest LINAK dealer can inform the number of pulses per stroke length. Regarding Reed-switch connection, see Figure 6.10.

#### Options:

- Mechanical spline: When using the actuator in a vertical position, the force needed to activate the mechanical spline is maximum 60 N + the weight of the application. To reengage the spline function, a force of maximum 60N is needed. Same installation dim. as standard actuator.
- A modified Bowden cable holder is available (as a special article), with better cable alignment and improved guidance of the cables.
- Electric spline: When using the actuator in a vertical position, the force needed to activate the electric spline is maximum 100 N + the weight of the application. To reengage the spline function, a force of maximum 100 N is needed.

#### Usage:

2/18 - 2 minutes continuous use followed by 18 minutes not in use Duty cycle:

 Ambient temperature:  $+ 5^{\circ} \text{ to } + 40^{\circ} \text{ C}$ 

Compatibility: CB9 with EAS, CB12 with EAS, CB14\*, CB18, CB20 and CBJ, CB6 OBL/ F, CB16 OBL/ F,

(\* = only possible with customized software)

IEC60601-1:2005 3rd edition, ANSI / AAMI ES60601-1:2005 3rd edition, and CAN / CSA-22.2 No 60601-1:2008 · Approvals:

for LA34 24V zinc and composite versions.



#### Recommendations:

- Power supply without current cut-off can cause serious damage to the actuator if mechanical stop is encountered or the actuator movement is blocked in another way.
- LINAK control boxes are designed so that they will short-circuit the motor terminals (poles) of the actuator(s) when the actuator(s) are not running.

This solution gives the actuator(s) a higher self-locking ability. If the actuator(s) are not connected to a LINAK control box the terminals of the motor must be short-circuited to achieve the self-locking ability of the actuator.



#### Warning:

An LA34 actuator is not designed for repeated dynamic push-to-pull movements. This cause extra strain to the actuator and can give safety considerations, the consequence being possible damage to the actuator. Therefore, if repeated dynamic push-to-pull movements are essential for the application, perform tests to validate the performance and use a steel piston rod eye (contact LINAK A/S).



LA34 actuators for patient hoists are marked with a label to ensure the user is aware that it is not permitted to handle the patient hoist by pulling the actuator or otherwise expose it to side forces.



Tests show that uneven running can occur when retracting the LA34 composite actuator with a low load below 500N. This has no impact on the safety of the actuator and is caused by internal frictions.

If the LA34 actuator is used in connection with a non-LINAK power supply the system must be equipped with current trip cut-off.

Adjustment of the installation dimension N

As standard the installation dimension on the LA34 actuator can be manually adjusted by +4/-0 mm (not possible for mechanical splines). The adjustment of the installation dimension must only be made without use of tools only, or hand). It is not allowed to use tools to adjust the installation dimension of the LA34 actuator as there is a risk that the inner tube may be unscrewed.

# Hall

The Hall principle is very similar to the Reed principle. It is a control box, which based on Hall signals, can decide whether the actuator runs out or in. Hall, however, can detect whether the actuator runs in or out. The number of pulses is like Reed. Hall and Reed are placed opposite the potentiometer on the actuator's worm wheel. Therefore, it is not suitable for use in quick release /free wheelingactuators. see figure 10.

#### Potentiometer

The potentiometer function is mechanically attached to the spindle and registers the number of spindle revolutions. The signal from the potentiometer is measured in Ohm, where the lowest value is measured when the actuator has been run into inward switch stop. The potentiometer is a 10-turn and therefore it is dependent on the stroke length/spindle pitch. see figure 6.5

#### Mechanical spline:

The splines function so that the actuator can only push, not pull. During pull in the actuator, the inner tube is lifted off the thread bush, and the actuator can therefore never pull a load, only push. See *Figure 8*.

#### Functional test of mechanical splines:

When the piston rod is at the innermost position, it must be possible to pull it out manually to its full travel length and to press it in again. When used in a vertical position the force needed to activate the mechanical spline is maximum 60N + the weight of the application. To reengage the spline function, a force of maximum 60 N is needed. If this is not possible, contact your nearest LINAK dealer.

# **Electrical splines:**

In the rear fixture on the actuator, a microswitch is fitted, which turns off the motor, if the actuator is exposed to pull forces.

#### Functional test of electrical splines

It is important that the actuator is correctly fixed with regard to the section on page 11. For mounting, see Figure 7.

When the actuator is correctly fixed/mounted, the inward movement of the piston must stop, when the actuator is pulled or the movement is blocked, so that the back fixture is not put under undue stress/tension.

#### **Ouick Release**

LA34 (34xxxF/H) is equipped with a function which permits operation of the actuator should the power source fail. Condition for functioning: the actuator must be loaded in push direction (LA34xxxF) or pull direction (LA34xxxFH).



#### Warning!

- If the actuator does not work as described above, the risk of injury due to squeezing can arise. Therefore, the actuator must be sent immediately for service at the nearest, authorised LINAK workshop.
- The actuator must not be used in pull applications when the Quick Release is activated, as the risk of personal injury can arise.
- Do only use the actuator within specified working limits.

#### **Activation of Quick Release**

Pull the release handle in the direction of the piston rod eye (outwards), the harder you pull the button the quicker the actuator runs down. When releasing the button the emergency lowering stops immediately. The emergency lowering is activated as long as the load on the actuator is above 100-150 kg. The actuator is ready for normal use when the emergency lowering is finished.

#### Safety device regarding functional failure of the nut (Safety nut):

The LA34 has a built-in safety nut in push as standard and is available with a safety nut in pull as an option. Actuators with safety nut in push can only function when used in push applications. The safety nut comes into operation should the main nut fail.

Afterwards it is only possible to drive the actuator into the innermost position. Safety nut in pull is for pull applications and works the opposite way as described above. Thereafter, the actuator will not function any more and must be sent for service.

#### Built-in end-stop circuit

In the actuators mentioned the end-stop switch is part of the actuator construction. Each time the actuator reaches end-stop position, the switch is activated and the current is cut off.

#### 12. LA40 (MEDLINE® CARELINE®)

WE IMPROVE YOUR LIFE DESIGNED IN DENMARK

: 400401000A000B26+32CB127522002 Type

Item No. J08477

Prod. Date : 2014.12.18 Max Load : Push 8000-5500 N IPX6

Power Rate: 24 V = / Max. 6.4 A

Duty Cycle: 10%, Max. 2 min. / 18 min. NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISE

W/O #1234567-0001 MADE BY LINAK A/S DENMARK

The LA40 is a low noise and powerful actuator which is available in a 6000N and an 8000N version. Based on the extensive knowledge and experience from previous actuator families, LINAK has developed new gear and braking principles that improve the efficiency of the new LA40.

Usage:

Duty cycle: 10%, 2 minutes continuous use, followed by 18 minutes not in use

5° C to 40° C Usage temperature: Storage temperature: -10° C to 50° C

Compatibility: CB6, CB6OBF, CB6OBL, CB16OBF, CB16OBL, CU20

20% to 90% @ 30° C - not condensing Relative humidity:

Atmospheric pressure: 700 to 1060 hPa

Approvals: IEC60601-1, 3rd edition, ANSI, AAMI ES60601-1:2008, 3rd edition, and CAN / CSA 22.2 No 60601-1:2008,

ND (National Deciation, AU/NZ) - approvals are pending



# Recommendations:

- Power supply without current cut-off can cause serious damage to the actuator if a mechanical stop is encountered or the actuator movement is blocked in another way.
- Connection bolts must be dimensioned so that they have the necessary strength and tolerance in order to obtain the minimum safety factor according to the requirements of the authorities.
- The LA40 must have a minimum installation dimension of 380 mm if control box CB6 is to be mounted on the actuator.
- The actuator must not be subject to a side load, as this can cause bending/collapse of the actuator. The actuator can never be used as a handle.
- The actuator must not be subject to off centre loading, as this can cause bending/collapse of the actuator.
- The actuator must not be subject to impact, or any form of stress to the casing.
- The actuator must not be subject to overload, as this can reduce the lifetime of the actuator and in the worst case cause damage to the actuator.
- The actuator must never be used in dynamic pull applications, as this can cause collapse.
- Only use the actuator within the specifications.
- Connection bolts and brackets are to be inspected in connection with service, and must be replaced if there are signs of wear.
- . Ensure that the cable lock is mounted correctly.
- Ensure that the duty cycle and the usage temperatures for LA40 actuators is respected.
- Ensure that the cable cannot be squeezed, pulled or subjected to any other stress.
- The LA40 is not suitable for use in outdoor applications where it can be exposed to sun and rain.

#### Instruction concerning the turning of the piston rod eye - LA40

When mounting and taking into use, it is not permitted to make excessively many turns of the piston rod eye. In cases where the eye is not positioned correctly, it is permitted to first screw the eye down to its bottom position (1), and thereafter a maximum half turn outwards again (2).





#### 13. LA43 (MEDLINE® CARELINE®)

WE IMPROVE YOUR LIFE DESIGNED IN DENMARK

Type 43040200A050B4-2120103752D0210

Item No. : J90004

Prod. Date: 2014.06.20 S.O.6145250 Max Load : Push 8000 N IPX4

Duty Cycle: 10%, max. 2 min. / 18 min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL NE PAS À OUVRIR PAR PERSONNEL NON-AUTHORISÉ

P.O.2140274-0001 MADE BY LINAK A/S DENMARK

The LA43 is available in a powerful 8.000N version, ensuring safe patient handling. With the LA43 actuator, LINAK offers a product, which with its wide range of safety options, low noise level, and outstanding performance is the right choice for medical applications such as patient lifts, beds, dental chairs etc.

#### Usage:

Duty cycle: 10%, 2 minutes continuous use followed by 18 minutes

not in use

+5°C to +40°C Usage temperature: Storage temperature:  $-10^{\circ}$ C to  $+50^{\circ}$ C

Compatibility: CBJ1/2, CBJ-Home, CBJ-Care, CB6S, CB16, CB20 Approvals: IEC60601-1:2005 3rd ed., ANSI / AAMI ES60601-1:2005,

3rd edition pending



# Recommendations:

The actuator is not suitable for outdoor applications

- Power supply without current cut-off can cause serious damage to the actuator if a mechanical stop is encountered or the actuator movement is blocked in another way.
- If there is a risk of "pull forces" in the application, the actuator must be equipped with electrical spline to avoid damage in pull.
- If the actuator is operated without load (e.g. loose on a table) the electrical spline can activate and the actuator cannot run in an inwards direction. Push the back fixture and the actuator can be operated again.
- Connection bolts must be dimensioned so that they have the necessary strength in order to obtain the minimum safety factor according to the requirements of the authorities.
- The actuator must not be subject to a side load, as this can cause bending. It is also for this reason that the actuator should not be used as a handle, e.g pulling a patient hoist sideways.
- The actuator must not be subject to off centre loading, as this can damage the actuator.
- The actuator must not be subject to impact, or any form of stress to the casing.
- The actuator must not be subject to overload, as this can reduce the lifetime of the actuator and in the worst case cause damage to the actuator.
- The actuator must not be used in pull applications, as this can cause collapse.
- Only use the actuator within the specified working limits.
- It is recommended that the actuator is serviced according to the relevant national norms for the applications in which the actuator is used.
- Connection bolts and brackets are to be inspected in connection with service, and must be replaced if there are signs of wear.
- The safety function: Electrical Spline, should be checked in connection with service. The function is checked by applying a straight pull, of max, 100 N. to the back fixture. The actuator must not be able to run in an inward direction. Hereafter press the back fixture against the housing and the actuator can run in an inward direction.
- The actuator should be cleaned regularly, in order to maintain a good hygiene.
- The application must be tested for correct functionality before putting it back into operation.
- Do not step or kick on the actuator as it may damage the housing or the motor.

#### Patient Lifts and Stand Aids:

- Long installation dimension: Must always be used for patient lifts.
- Do not hold the inner or outer tube while the actuator is running. There can be a risk of squeezing between the Manual Lowering unit and the
- Do always use the electrical spline function for patient lifts



LA43 actuators for patient hoists are marked with a label to ensure the user is aware that it is not permitted to handle the patient hoist by pulling the actuator or otherwise expose it to side forces.



#### Warnings:

It is not allowed to use tools to adjust the installation dimension of the LA43 actuator as there is a risk that the inner tube may be

#### Self-locking ability

• LINAK control boxes are designed so that they will short-circuit the motor terminals (poles) of the actuator(s), when the actuator(s) are not running. This solution gives the actuator(s) a higher self-locking ability. If the actuator(s) are not connected to a LINAK control box, the terminals of the motor must be short-circuited to achieve the self-locking ability of the actuator.



# Manual lowering:

The following pictures illustrate the manual lowering procedure.

# Fig. 1. Manual Lowering

In case of a power failure it is possible to mechanically lower a patient placed in a patient hoist. When turning the manual lowering handle clockwise the actuator can be moved fully inwards.

Fig. 2

# Fitting the plug/smart cable lock

The following pictures illustrate how to fit the plug connection using the smart cable lock manual lowering procedure.



Step 1: Insert the cable in the socket. Make sure the O-ring on the cable is fully inserted..



Step 2: Attach the cable lock. Make sure the inclined surface is facing upwards.



Step 3:
Push the cable lock inside the slot.
If necessary, the cable can be pushed down at the same time to ease the cable lock mounting.

Fig. 3

#### 14. LA43 IC (MEDLINE® CARELINE®)

WE IMPROVE YOUR LIFE

DESIGNED IN DENMARK

: 43040150A050B4-2110103252D0210

Item No. : J03947

Prod. Date: 2014.06.20 S.O.6145789 Max Load : Push 8000 N IPX4

Duty Cycle: 10%, max. 2 min. / 18 min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL NE PAS À OUVRIR PAR PERSONNEL NON-AUTHORISÉ

P.O.2114579-0001 MADE BY LINAK A/S DENMARK

The LA43 Intelligent Control (IC) enables a simple system consisting of 1 or 2 actuators, a Switch Mode Power Supply and a hand control or a footswitch. The system is for example an advantage when there is no space for a control box.

Usage: Duty cycle:

Ver. 2013513, v. 1.00

**Ti** (e)

10%, 2 minutes continuous use followed by 18 minutes not in use

Usage temperature:  $+ 5^{\circ} \text{ C to} + 40^{\circ} \text{ C}$ Storage temperature: -10° C to + 50° C SMPS30 Compatibility:

IEC60601-1:2005 3rd edition. Approvals:

ANSI / AAMI ES60601-1:2005 3rd edition pending



#### Recommendations:

• The actuator is not suitable for outdoor applications

- Power supply without current cut-off can cause serious damage to the actuator if a mechanical stop is encountered or the actuator movement is blocked in another way.
- If there is a risk of "pull forces" in the application, the actuator must be equipped with electrical spline to avoid damage in pull.
- If the actuator is operated without load (e.g. loose on a table) the electrical spline can activate and the actuator cannot run in an inwards direction. Push the back fixture and the actuator can be operated again.
- Connection bolts must be dimensioned so that they have the necessary strength in order to obtain the minimum safety factor according to the requirements of the authorities.
- The actuator must not be subject to a side load, as this can cause bending. It is also for this reason that the actuator should not be used as a handle, e.g pulling a patient hoist sideways.
- The actuator must not be subject to off centre loading, as this can damage the actuator.
- The actuator must not be subject to impact, or any form of stress to the casing.
- The actuator must not be subject to overload, as this can reduce the lifetime of the actuator and in the worst case cause damage to the actuator.
- The actuator must not be used in pull applications, as this can cause collapse.
- Only use the actuator within the specified working limits.
- It is recommended that the actuator is serviced according to the relevant national norms for the applications in which the actuator is used.
- Connection bolts and brackets are to be inspected in connection with service, and must be replaced if there are signs of wear.
- The safety function: Electrical Spline, should be checked in connection with service. The function is checked by applying a straight pull, of max. 100 N, to the back fixture. The actuator must not be able to run in an inward direction. Hereafter press the back fixture against the housing and the actuator can run in an inward direction.
- The actuator should be cleaned regularly, in order to maintain a good hygiene.
- The application must be tested for correct functionality before putting it back into operation.
- Do not step or kick on the actuator as it may damage the housing or the motor.



# Warnings:

It is not allowed to use tools to adjust the installation dimension of the LA43 actuator as there is a risk that the inner tube may be unscrewed.

#### Safety concept:

The user is a part of the safety concept. A light on the SMPS30 is green when a button on the handset is not activated. When a switch is activated the light changes to orange. Orange indicates that power request is on.

When the light is orange and a button is not activated there is a fault on the system. And the user must call for service.

# Cable connections:

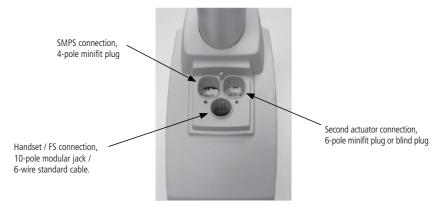


Fig. 1





Fig. 3

Step 1: Insert the cables in the sockets. Make sure the O-rings on the cables are fully inserted.



Fig. 2

Step 2: Insert the cables into the cable lock. Make sure that the correct cables are placed in the corresponding holes.



Attach the cable lock and secure it with screws. The tightening torque should be 0.4 Nm.

# Cable connection and cable lock:

Tighten the two screws with approx. 0.4 Nm torque to secure the cable lock.

#### 15. LA44 (MEDLINE® CARELINE®)



WE IMPROVE YOUR LIFE DESIGNED IN DENMARK

Item No. : 442104+5L3001A0 Prod. Date: 2014.06.20 S.O.6412569 3

Max Load : Push 12000 N Power Rate: 24 V= / Max. 9.5 A

Duty Cycle: 10 %, Max. 2 min. / 18 min. IPX4 NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL NE PAS A OUVRIR PAR PERSONNEL NON—AUTORISE

P.O.2114579-0001 MADE BY LINAK A/S DENMARK

The LA44 is available in powerful 10,000 N and 12,000 N versions, ensuring safe patient handling.

With the LA44 actuator, LINAK offers a product, which with its wide range of safety options, low noise level, and outstanding performance is the right choice for medical applications such as patient lifts, beds, dental chairs etc.

#### **Built-in end-stop switches**

The end-stop switch is part of the actuator construction. Each time the actuator reaches end-stop position, the switch is activated and the current is cut off.

#### Mechanical Spline

The Spline functions so that the actuator can only push, not pull.

# Precautions:

- The actuator is not suitable for outdoor applications
- Power supply without current cut-off can cause serious damage to the actuator if a mechanical stop is encountered or the actuator movement is blocked in another way.
- If there is a risk of "pull forces" in the application, the actuator must be equipped with mechanical or electrical spline to avoid damage in pull.
- If the actuator is operated without load (e.g. loose on a table) the electrical spline can activate and the actuator cannot run in an inwards direction. Push the back fixture and the actuator can be operated again.
- Connection bolts must be dimensioned so that they have the necessary strength in order to obtain the minimum safety factor according to the requirements of the authorities.
- The actuator must not be subject to a side load, as this can cause bending. It is also for this reason that the actuator should not be used as a handle, e.g pulling a patient hoist sideways.
- The actuator must not be subject to off centre loading, as this can damage the actuator.
- The actuator must not be subject to impact, or any form of stress to the casing.
- The actuator must not be subject to overload, as this can reduce the lifetime of the actuator and in the worst case cause damage to the actuator.
- The actuator must not be used in pull applications, as this can cause collapse.
- Only use the actuator within the specified working limits.
- It is recommended that the actuator is serviced according to the relevant national norms for the applications in which the actuator is used.
- Connection bolts and brackets are to be inspected in connection with service, and must be replaced if there are signs of wear.
- The safety function: Electrical Spline, should be checked in connection with service. The function is checked by applying a straight pull, of max. 100 N, to the back fixture. The actuator must not be able to run in an inward direction. Hereafter press the back fixture against the housing and the actuator can run in an inward direction.
- The actuator should be cleaned regularly, in order to maintain a good hygiene.



LA44 actuators for patient hoists are marked with a label to ensure the user is aware that it is not permitted to handle the patient hoist by pulling the actuator or otherwise expose it to side forces.

#### Self-locking ability.

• LINAK control boxes are designed so that they will short-circuit the motor terminals (poles) of the actuator(s), when the actuator(s) are not running. This solution gives the actuator(s) a higher self-locking ability. If the actuator(s) are not connected to a LINAK control box, the terminals of the motor must be short-circuited to achieve the selflocking ability of the actuator.

#### Usage:

· Duty cycle:

 Electrical spline functionality: Electrical spline; can be combined with manual lowering. The Electrical-spline switch is mounted inside LA44.

> It activates on a pulling movement of the slightly moveable back fixture. When using the actuator in a vertical position, the force needed to activate the electric spline is maximum 100 N + the weight of the application. To reengage the spline function, a force of maximum 100 N is needed.

 Mechanical spline functionality: When using the actuator in a vertical position, the force needed to activate the mechanical spline is maximum 60 N + the weight of the application. To reengage the spline function, a force of maximum 60 N is needed.

10%, 2 minutes continuous use followed by 18 minutes not in use

· Usage temperature: 5°C to 40°C - 10°C to + 50°C · Storage temperature:

· Compatibility: CBJ1/2, CBJ-Home, CBJ-Care, CB6s, CB16, CB20

· Approvals: IEC60601-1:2005 3rd edition, ANSI, AAMI ES60601-1:2005, 3rd edition, and CAN / CSA 22.2 No 60601-1:2008.

# Manual lowering:

The following pictures illustrate a) The manual lowering procedure and

b) How to fit and remove the plug connection using the "Smart cable lock"

Fig. 1



Fig. 1. Manual Lowering

In case of a power failure it is possible to mechanically lower a patient placed in a patient hoist. When turning the manual lowering handle clockwise the actuator can be moved fully inwards.

# Fitting the plug/smart cable lock



Step 1:

The three flanges in this position indicate that the "smart cable locking" device is in the unlocked position.



Step 2:

Position and press the cable plug into the socket.




Step 3:

Hold around the lock flanges and turn the lock either clockwise or anticlockwise. The cable is fully locked when turned 90°

Fig. 3

#### Unlocking the plug/smart cable lock

Flanges in locked position



Press here with tool

Fia. 1

No tap on this side

Using a tool, release the lock (must be from the side shown) by pushing the tap (through the small slot in the side of the lock).

At the same time, turn the lock 90° in either direction to release the plug connection.



#### Warnings!

- The actuator must not be subject to a sideways load, as this can cause bending. It is also for this reason that the actuator should not be used as a handle.
- The actuator must not be subject to moment loading, as this can damage the actuator.
- The actuator must not be subject to impact or blows, or any other form of stress to the casing.
- The actuator must not be subject to overload, as this can reduce the lifetime of the actuator and in the worst case cause damage to the actuator.
- The LA44 must not be used in pull applications, as this can cause collapse.
- Do not hold the inner or outer tubes when the actuator is running due to danger of squeezing.
- Do only use the actuator within specified working limits.
- It's not allowed to adjust the Build-in dimension by turning of the inner tube. This might cause collapse of the actuator.



# Recommendations

- It is recommended that the actuator is serviced according to the relevant national norms for the applications in which the actuator is used.
- Connection bolts must be dimensioned so that they have the necessary strength in order to obtain the minimum safety factor according to the
  requirements of the authorities.
- · Connection bolts and brackets are to be inspected in connection with service, and must be replaced if there are signs of wear and tear.
- The safety function: Electrical Spline, should be checked in connection with service. The function is checked by applying a straight pull, of max.
   100 N, to the back fixture. The actuator must not be able to run in an inward direction. Hereafter press the back fixture against the housing and the actuator can run in an inward direction.
- The actuator should be cleaned regularly, in order to maintain a good hygiene.
- Inspect the actuator minimum once a year for wear and jarring sound

#### 16. LA44 IC (MEDLINE® CARELINE®)

WE IMPROVE YOUR LIFE DESIGNED IN DENMARK

Item No. : 442200+1L3001AG

Prod. Date: 2014.06.20 S.O.6178941

Max Load : Push 12000 N Power Rate: 24 V= / Max. 9.5 A

Duty Cycle: 10 %, Max. 2 min. / 18 min. IPX4

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL NE PAS A OUVRIR PAR PERSONNEL NON—AUTORISE

The LA44 Intelligent Control (IC) enables a simple system consisting of 1 or 2 actuators, a Switch Mode Power Supply and a hand control or footswitch.

The system is for example an advantage when there is no space for a control box.

#### Usage:

• Duty cycle: 10%, 2 minutes continuous use followed by 18 minutes


· Usage temperature:  $+ 5^{\circ} \text{ C to } + 40^{\circ} \text{ C}$ -10° C to + 50° C Storage temperature:

SMPS30 · Compatibility:

· Approvals: IEC60601-1:2005 3rd edition, ANSI / AAMI ES60601-

1:2005 3rd edition pending

#### Cable connections:

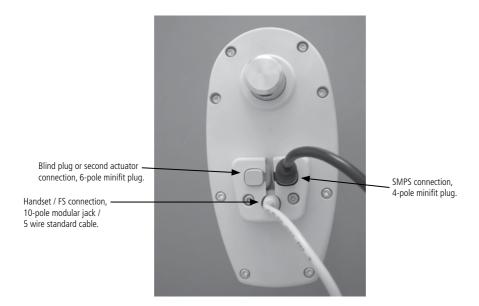

#### Cable connection and cable lock

Tighten the two screws with approx.1.5 Nm torque, to secure the cable lock.

Precautions, Recommendations and Warnings - please see LA44 user manual

# 4. Information on specific columns

#### 1. BB3 (MEDLINE® CARELINE®)



The BB3 3-part telescopic actuator is the ideal choice for vertical lift of beds where design and easy integration in the customer's guidance ensures optimum freedom of design.

The BB3 is a 3-part telescopic actuator designed to meet EN 1970 for care beds, which demands an adjustment range from 350 mm up to 750 mm.

#### Reed-switch:

The Reed-switch gives a number of pulses for each rotation of the motor. These pulses are used to calculate the piston rod's position as well as to control several actuators running in parallel.

Your nearest LINAK dealer can inform you of the number of pulses per stroke length.

Regarding reed-switch connection, see Figure 6.10.

- The columns must be securely mounted before operation, no rotation must be possible
- · The motor housing must be mounted uppermost.



#### Warning!

Do only use the column within specified working limits.

#### 2. BL1 (MEDLINE® CARELINE® TECHLINE®)



The BL1 is a 3-part lifting column designed to be used for example in Hospital beds, Nursing Home beds, Treatment chairs, Couches and Dental chairs.

The lifting column is compact and has a long stroke length. The 3-part guidance enables an overlap between the individual profiles, which ensures a high degree of stability.

The lifting column has an open spindle actuator with a chain drive inside which is practically noiseless.

#### Usage:

Duty cycle: 10%, 2 minutes continuous use followed by 18 minutes not in use

Usage temperature: + 5°C to + 40°C
 Storage temperature: Max 50°C

Compatibility: CB6 OBL, CB6 OBF, CB16 and CB20

Approvals: DS/EN60601-1



#### Important:

If the actuator(s) are not connected to a LINAK control box, the terminals of the motor must be short circuited to guarantee the self-locking ability of the actuator.



#### Recommendations:

- Max. storage temperatures: +50°C.
- BL1 is for use in push applications, cable outlet from smallest profile.
- When washing according to IPX6 parameters, it is not allowed to splash water directly onto the plastic frames between the profiles. Direct splashing is only permitted on the aluminium profiles.



# Warnings!

- BL1 is heavy (9.8 kg) To avoid personal injury, DO NOT DROP!
- Do not adjust anything during movement, can cause personal injury!
- LINAK recommend using a safety nut in medical applications!
- A broken chain causes a drop of half the length of actual stroke. Therefore do not overload!
- The BL1 is designed for use in push applications, dynamic "Pull forces" can result in damage to the column and cause collapse of the application.
- Do not loosen any screws on the BL1, this can cause collapse of the column!

# **Technical specification:**

Load in push 4 mm spindel : Max. 2000 N See label Load in push 9 mm spindel : Max. 700 N See label

Load in pull (dynamic): 0N

Load in pull (static) 4 mm spindel: Max. 2000 N
Load in pull (static) 9 mm spindel: Max. 700 N
Bending moment (static) : Max. 500 Nm
Bending moment (dynamic) : Max. 250 Nm

Duty Cycle: 10% Max. 2 min./18 min. See label


Protection class: IPX6


Usage temperature: +5°C to +40°C
Storage temperature: Max. 50°C

## **BL1 Mounting guidelines:**



- BL1 is for use in push applications, and can be mounted in both directions (smallest profile down, or up).
   Note: The cable outlet can only be positioned at the end of the small profile.
- It is very simple to mount the BL1 in the application using the 4 mounting holes in both endplates.
- Use 4 self-tapping screws, in each end, for mounting to the application. Use EJOT PT type DG Ø8, screw depth must be min. 30 mm in aluminium profile. Screw torque: 15 - 17 Nm.
- If the column has been loosened from the application, it is very important that the self-tapping screws are mounted in the same thread, to ensure the same strength in the thread. Therefore we recommend that the screws are loosened no more than 1 or 2 times.

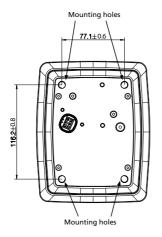

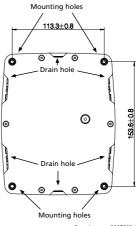

Drawing no.: 0807000-1




- The BL1 is for use in push applications and can be mounted in both directions (smallest profile down, or up).
   Note: The cable outlet can only be positioned at the end of the small profile.
- The mounting plate in the application must cover the entire top plate of the BL1 and be strong enough to carry the load.
- Remember to secure the cable mounted in the top of the column to the application, so that it cannot be pulled out of the column. We
  recommend to use LINAK Cable lock kit 0808040, use only screws included in the kit.


#### • Electro Static Discharges!


If painted top and bottom plates are used, there is no electrical connection through the length of the the BL1 column. Therefore, to avoid ESD issues, consider external potential alignment between the top and bottom of the bed frame.

# Endplate kit Topplate dimensions:

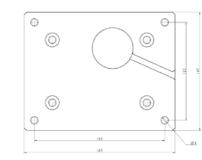


Endplate kit Topplate dimensions:

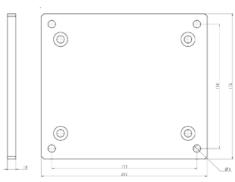

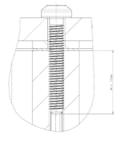

# When mounting more than one BL1, you need to consider the fixation:

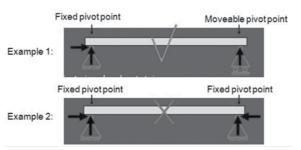


The reason why it is important only to fix one column is that the columns will not move exactly in parallel — even if you have positioning such as hall.


If more than one column is fixed, it can lead to dangerous situations.

If you have trend/antitrend function in your application, you need to mount one or more of the BL1s with a slider.

Having sliders prevents the column from bending like illustrated below.

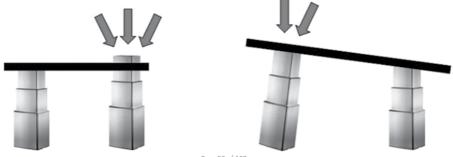

#### 3. BL4 (MEDLINE® CARELINE®)

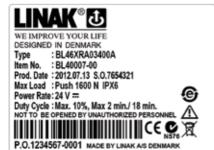

The BL4 is a 4-part lifting column specially designed for hospital and care beds; the BL4 can of course be used for other applications where a compact lifting column with a long stroke length is needed.

The lifting column is based on the BB3 actuator, which is practically noiseless. The specifications comply with the demands to the lifting functions in beds as to load, speed and stroke length.

#### Reed-switch:

Reed-switch gives a number of pulses for each rotation of the motor. These pulses are used to calculate the piston rod's position as well as to control several actuators running in parallel.

# Usage:

Duty cycle: up to 10% or max. 2/18 min.

Ambient temperatures: + 5° to + 40° C

Compatibility: CB9AF, AL, AM, CB12H (special version), CB14 and OpenBus™ control boxes e.g. CB20

# Technical specification:

Load in push: Max. 1500 N See label

Load in pull (dynamic): 0N

Load in pull (static): Max. 600 N
Bending moment (static): Max. 500 Nm
Bending moment (dynamic): Max. 250 Nm

Duty cycle: 10% Max. 2 min./18 min. See label
Protection classes: IPX4, IPX6 and IPX6 Washable

Usage temperature:  $+5^{\circ}\text{C}$  to  $+40^{\circ}\text{C}$  Storage temperature: Max.  $50^{\circ}\text{C}$ 

Your nearest LINAK dealer can inform the number of pulses per stroke length.

Regarding Reed-switch connection, see Figure 6.10.

- There are mounting holes in the endplates and motor housing
- The columns must be securely mounted before operation, no rotation must be possible
- · The motor housing must be mounted uppermost
- · The mounting bracket tension must be adjusted correctly



#### Warnings!

- Do only use the column within specified working limits.
- The BL4 is heavy (8.2 kg) To avoid personal injury, DO NOT DROP!
- · Do not adjust anything during movement, can cause personal injury!
- The BL4 is designed for use in push applications, dynamic "Pull forces" can result in damage to the column and cause collapse of the application.
- Do not loosen any screws on the BL4, this can cause collapse of the column!
- IPX6 washable versions must not be dismantled and then rebuilt again without the motor housing being changed in order to ensure the washability.
- There must be at least 4 hours between each washing cycle to allow the BL4 to resume normal temperature.



#### Recommendations:

- Max. storage temperatures: +50°C.
- BL4 is for use in push applications only and only mounted with the motor housing uppermost.
- Actuators using "buffer" end-stop principle are not compatible with BL4 and CB9 systems.
- If the column is driven in end-position (end-stop switches in the actuator will be activated) and if the handset is kept activated you will in some cases, depending on the column load, see that the actuator starts and stops as long as the handset is activated.


#### Recommendations with washable versions:

- IPX6 Washable versions must not be dismantled and then be rebuilt again without the motor housing being changed in order to ensure the washability.
- There must be at least 4 hours between each washing cycle to allow the BL4 to resume normal temperature.

# **BL4 Mounting guidelines:**



- The BL4 must always be mounted vertically before operation and always vertical with the motor housing uppermost. (Otherwise, the
  internal end-stop switch system can break due to rotation).
- Both the motor housing and the bottom tube (the one with the largest diameter) must be secured in the application in such a way that no
  rotation can occur.
- It is recommended to monitor the current consumption in order to determine the necessary tensioning force for the mounting bracket. If the current consumption rises the BL4 has been tightened too much.

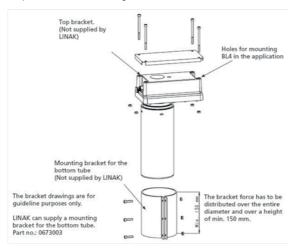




- The mounting plate in the application must cover the entire top plate of the BL1 and be strong enough to carry the load.
- It is recommended that all 4 holes in the motor housing are used to fasten the BL4 to the application.
- The screws must provide a secure fixing e.g. as with self-locking.
- Remember to secure the cable to the housing with a cable tie. Use the fixing eye next to the connector socket.
   On the BL4 cables, clip sleeve are mounted, they need to be removed.
- Electro Static Discharges!

Be aware that there is no electrical connection through the length of the BL4 column. Therefore, to avoid ESD issues, consider external potential alignment between the top and bottom of the bed frame.

#### When mounting more than one BL4 you need to consider the fixation:

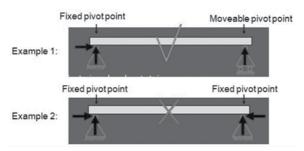

The reason why it is important only to fix one column is that the columns will not move exactly in parallel — even if you have positioning such as hall.

If more than one column is fixed, it can lead to dangerous situations.


If you have trend/antitrend function in your application you need to mount one or more of the BL4s with a slider.


Having sliders prevents the column from bending like illustrated below.





#### LINAK mounting bracket part no.: 0673003-A

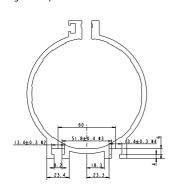

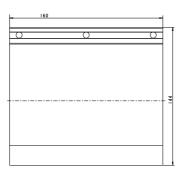

#### Mounting guidelines for the BL4 bracket, supplied by LINAK, part no. 0673003:

Mounting the bracket in the application:

- The bracket must be mounted to an even abutting plate in the application by using the 2 slits.
- In each slit at least 3 bolts must be mounted. Type M8 8.8.
- Tightening moment must be 22.7 26.1 Nm.
- The 3 bolts must be placed in the same height as the 3 holes.

#### Mounting of the BL4 into the bracket:

- The BL4 must be fi tted in the bracket after mounting the bracket to the application.
- 3 bolts and nuts must be mounted in the 3 holes. Type M6 8.8
- Tightening moment must be  $10.3 \pm 0.3 \text{ Nm}$



The mounting points must be re-tightened at least once a year with the above specified moments.

#### 4. LC2 (MEDLINE® CARELINE® TECHLINE®)



The LC2 column is an update of the LP2 programme. It has an improved "CAUTION: NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL! "twisting" stability and end-stop switches as standard.

The column is designed to be used in a vertical position and only for lifting purposes. It is not possible to use the column in any kind of "pull" application.

Depending on the application, the LC2 can be operated either as a single column or several columns in a parallel system by choosing a control box with microprocessor.

It is designed to provide vertical lifting (push only) where simultaneous bending and torsion moments may occur.



Do only use the column within specified working limits.

# 5. LP2 (DESKLINE® MEDLINE® CARELINE® TECHLINE®)



The LP2 range of vertical lifting columns is ideal where vertical positioning of substantial loads is required.

The design allows the LP2 range to be built in a complete motion control system simply by adding a suitable LINAK control box and handset.

Advanced design and high quality construction allows the column to be operated either as single or parallel with up to a maximum of four units and/or with a memory function.

The LP2 lifting column is the ideal choice for duties such as height adjustment on computer workstations, work benches, or a wide selection of other duties.

- There are mounting holes in the end plates.
- · The largest profile must be mounted uppermost.

P.O.2114579-0001 MADE BY LINAK A/S DENMARK



# Warning!

Do only use the column within specified working limits.



#### Warning!

Ensure a safe connection between column and application



Side mounting bracket screws: use the correct torque on the side mounting bracket screws.



#### Warning!

The column can not be used in pull



#### Warning!

Max. bending: LP22 = 550 Nm

LP25 = 1000 Nm

#### 6. LP3 (MEDLINE® CARELINE® TECHLINE®)



NE PAS A OUVRIR PAR PERSONNEL NON-AUTORISÉ

P.O.2114579-0001 MADE BY LINAK A/S DENMARK

The LP3 is developed for vertical lifts and can resist a bending moment by virtue of the effective telescopic system.

The lifting column is designed for applications where a small installation dimension is requested without compromising the lifting capacity.

The LP3 is characterised by having a lower installation dimension proportional to the stroke length compared to the LP2. The LP3 can also attain a higher speed than the LP2.

The telescopic column is compatible with LINAK's control boxes and can run individually; as 2 x LP3 parallel and/or with memory.

The LP3 is the perfect choice for height adjustment on dental, gynaecologist, and wheelchairs as well as for operating, office and working benches etc.



The column can only be loaded with the maximum bending moment over the first 80% of the stroke. The maximum bending moment will be reduced to 50%.



The column must be mounted with the largest profile uppermost!

- There are mounting holes in the end plates.
- The largest profile must be mounted uppermost.



#### Warning!

Do only use the column within specified working limits.



Ensure a safe connection between column and application



#### Warning!

Side mounting bracket screws: use the correct torque on the side mounting bracket screws.



The column can not be used in pull



# Warning!

LP3 = 375 NmMax. bending:

# 5. Information on specific control boxes

Please be aware if the control box is not visible after mounting, all information regarding limitation of use shall be marked on the end product.

#### Output voltage

On control boxes connected to the mains the voltage of the actuator output is dependent on load, and the no-load voltage can reach 50 V. Control boxes connected to a battery can reach a voltage of 30 V during charging and no load.

# For all control boxes with battery

Prior to first use of LINAK batteries, please make sure that they are being charged 24 hours in order to reach proper function and prolong the lifetime of the batteries.



# Warning!

Please observe the following maintenance, replacement, and disposal requirements to ensure a safe and reliable operation.

#### Maintenance of batteries

The batteries are to be replaced after 4 years at the latest. Perhaps earlier, dependent on the pattern of use. Frequent and high-powered discharges reduce the battery life. For an optimum lifetime the product must be connected to the mains voltage as often as possible. It is recommended that the batteries are to be charged at least every 3rd month - otherwise will the batteries have reduced capacity due to self-discharge. It is recommended to test the battery function at least once every year.

# Replacement of batteries

The batteries must only be replaced by the same type of batteries or mechanical and electrical equivalent types. The batteries must be new or maintained by means of charging at least every 3<sup>rd</sup> month. The batteries, which make a set, must be supplied with identical production codes. Mismatching of production codes may lead to a severely reduced life time expectancy.

Before mounting ensure that the battery set is correctly connected, compare with the drawing in the battery room, and check that no connectors are loose.



#### Warnings!

From the factory the battery room is hermatically separated from the electronics room. When replacing the batteries this separation must not be damaged or modified as this may allow penetration of battery gas into the electronics room with risk of explosion.

When replacing batteries in waterproof products (IPX5 and IPX6) precautions must be taken that the sealing material (silicone ring or joint filler) is not damaged and that it is correctly placed in the groove. Hereafter the screws in the cover are to be fastened with appox. 1 Nm. If the seal is damaged it must be replaced by a new silicone string (LINAK article no. 0008004 for a roll of 100 metres).

#### Disposal

The batteries, which are lead-acid batteries, can be returned to LINAK or disposed in the same way as car batteries.



#### Warnings!

The battery room is supplied with ventilation that ensures correct and necessary airing of the battery room. This airing must not be blocked or covered as a positive pressure may occur with risk of explosion.

If the product has been exposed to mechanical overload (lost on the floor, collision/squeezing in the application or a powerful stroke) the product must be sent to an authorised workshop for control of the hermetic separation between the battery and electronics rooms.

# Using control boxes with speed control

The common way of carrying out a speed control of the actuators is by using PWM, switching the motor on/off at a high frequency. In rare cases, while switching the motor on/off, we have experienced that the coupling between the actuators and application frame and ground is too high, thus generating a slight current noise which exceeds the allowable EMC limits. The current in question is extremely low and is in no way related to any personal or patient risk.

The coupling is defined by the mechanical layout of the application, and no real guidelines can be given. Using plastic bushings or similar can improve the application.

If an application faces this issue, it can easily by solved by connecting ground of the CB box to the application frame-, through a cable with built in serial connection of a resistor and a capacitor.

The EMC test defined in IEC60601-1-2, applicable for all medical products, will show if this is an issue concerning the specific applications.

If you need more information or have any issues on this subject, please contact your LINAK A/S Sales contact.

#### Design criteria when using a customized CB

When using a customized CB together with a LINAK actuator, the interface connection between the CB vs. Actuator as well as the purpose of the actuator (with or without feedback) must be considered.

#### Actuators with feedback

E.g. potentiometer solutions have certain technological characteristics due to the design that might cause quality issues if used outside the specification range.

#### The connection interface

The connection interface is not only the compatibility of the plug types used, e.g. male mini-fit to female mini-fit plug type.

It is also considering the contact transition, i.e. the cable as well as the cable connector, the connecting plug, the material surface of the plug PIN, the soldering of the PCB plug connector etc.

When however using a LINAK Actuator with feedback AND having a bad connection interface towards a Customized CB – LINAK only guarantees the feedback voltage to be within 500 mV (+/- 250 mV).

#### 1. CB6 (MEDLINE® CARELINE®)



Item : CB6404+10019
Date : 2014.06.13
U In : 230 V~. 50/60Hz

Int. : 10%. Max. 2 min. / 18 min.



The CB6 control box has been specially developed for use together with LA27 actuator in the care and rehab industry.

The control box is designed to be mounted on the actuator LA27 as with the CB9 and LA31 system. The CB6 control box has a LED power ON indicator, detachable mains cable and strain relief for all cables.

The control box CB6 communicates with the LA27 actuator by means of the built-in end stop signal switches in the actuator. Due to the signal switches the power to the motor will be cut off in the control box and not in the actuator.

This ensures that it is only possible to run in the opposite direction once the actuator has reached the end position.

#### Usage:

- Duty cycle: 2/18; 2 minutes continuous use followed by 18 minutes not in use
- CB6 is approved according to EN60601-1 / UL60601-1
- The CB6 can only be combined with LA27 and HB30 / HB70 / HL70 / HB80 and HL80.



#### Recommendations:


- Be aware of the handset configuration (e.g. CH1, 2, 3 should be CH1, 3, 4).
- Same cables variants as for CB9 CARELINE and CB12.

# Connecting the system:

- Do not connect the mains cable until all actuators have been connected to the control box.
- Start by connecting the handset to the control box. The connection at the control box is marked with "HB".
- Connect the different actuators to the different channels on the control box. Each channel is marked with a number (e.g. "1", "2", "3"....).
- Check that all plugs are well connected and firm pushed into the connection plug.
   Due to the fact that LINAK control boxes are designed for a high IP degree, a firm force can be required.
- · CONNECT the mains and turn on the power!
- Finally, connect the battery (BA18) with special T-cable or normal battery cable depending on the specified system.
- The actuators can now be operated by pushing a button on the handset. Use only one button at a time.

If the control box is equipped with special software, an initialising process might be necessary. This process is described in the software specification.

#### CB6 system diagram

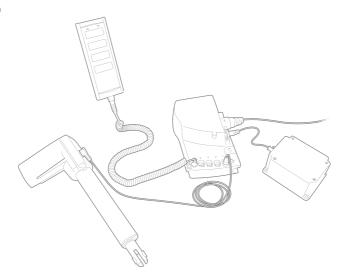

#### Attention should be paid to the following:

- Control boxes must only be connected to the mains voltage specified on the label.
- The control box must be connected in such a way that the cables are not trapped, exposed to tension or sharp objects, when the application is
  moved in different directions.

#### 2. CB6P2 (MEDLINE® CARELINE®)

WE IMPROVE YOUR LIFE



The CB6P2 platform is introduced to obtain a powerful and optimised solution to customers looking for existing analogue input systems. It is based on OpenBus™ technology, but to meet existing analogue systems it has an analogue input similar to HB40 and therefore OpenBus™ accessories cannot be connected.

#### Combination Overview

CB6P2 is meant for use with:

LA27 std. motor with Hall (cable type 'A')

LA27 std. motor (cable type 'B').

LA31 std. / fast motor with / without Hall. LA34 std. / small / fast motor with / without Hall (fast motor not max. load),

LA44 std. / fast motor with / without Hall (fast motor not max. load),

BL1 (only with 270W transformer type) with / without Hall,

HB7x, HL7x, HB8x, ACL/ACM/ACP (HB40-like)



# Recommendations:

#### Battery Operation:

- If the battery voltage is at 'low level', a battery alarm beeps constantly when the HB/ACx is activated. (Low level means that battery charging is necessary to maintain the best possible life time. Low level battery limit corresponds to approx. 19 V (+/- 5%).
- If the battery voltage is at 'critical level' the battery alarm function shuts down all operation immediately. Critical level limit corresponds to approx. 17.5 V (+/- 5%).
- If battery back-up is applied it only commences battery charging when it is connected to the mains.
- A battery stored at 25° C has to be recharged every 6-7 months.
- Prior to first use of LINAK batteries, please make sure that they are charged for 24 hours in order to reach proper function and prolong the lifetime of the batteries.
- The longest lifetime is obtained when the battery is fully charged.

# 3. CB6S (MEDLINE® CARELINE®)



DESIGNED IN DENMARK

Item : CB6404+00019 Date: 2014.06.20 S.O.2145789 U In : 230 V~, 50/60Hz IIn : Max. 1A

: 10%, Max. 2 min. / 18 min.



CB6S is part of the LINAK OpenBus™ product range – that provides more flexible solutions no matter which actuator concept is preferred. LA27C, LA31, LA34, BL1, BL4 with mini-fit plug and std. end-stop switch/signal switch are all supported. Please be aware the actuators must be used within their current limits in order to maintain proper use and full compatibility within a system.

#### Three versions are offered:

CB6 OBL, CB6 OBMe and CB6 OBF (OBL = OpenBus Light; which is RELAY based and OBF = OpenBus Full which is FET based).

(OBM = OpenBus Medium: which is RELAY based

#### Microprocessor

All control boxes with a microprocessor must be initialised before start-up. A description of the initialisation procedure can be obtained from your LINAK dealer.

If an actuator is replaced, the micro-processor always has to be initialised before use (actuators with reed/hall). If re-programmed, please ensure that the correct software is used.

# 4. CB7 (HOMELINE®)

LINAK® 13 WE IMPROVE YOUR LIFE : CB70081011-0000

Date : 2014.06.20 S.O.6145789 24 V~ ±10 %, 50-60 Hz



Compared to other LINAK control boxes the CB7 is very small and compact in design.

The CB7 is designed to slide onto an LA31 actuator for easy fitting e.g. in a recliner application where "mounting" space is limited.

The control box function is divided in two parts. The actual control box CB7, which slides onto the LA31 actuator and a separate external power supply transformer box TR6 or TR7, which can be wall mounted or placed on the floor moulding next to the mains.

The control box is only fitted with low voltage electronic components and the connection between the CB7 and transformer is via a 24 V power cable.

#### 5. CB8A (MEDLINE® CARELINE® TECHLINE®)



Item : CB8002A44-00

Date: 2009.03.19 S.O.7654321 U Out: 24 V==, max. 240 VA Int. : 5%. Max 3 min / 57 min





The CB8A is a battery powered control box operating up to 3 actuators individually. One of these channels can be used either as an external emergency stop device or for battery charging.

Simple design and high quality construction make the CB8A an ideal control box choice for mainsfree operation of beds, chairs, tables and many other mobile applications.

# Usage:

• Duty cycle: Max. 10% or 2 min. in use followed by 18 min. not in use

Ambient temperatures: + 5° to +4 0° C

Approvals: IEC60601-1:2005 3<sup>rd</sup> edition approved ANSI/AAMI

ES60601-1:2005 3rd edition approved.



#### Warning!

In order to avoid injury, the emergency stop should be activated in (all) transport situations.



# Recommendations:

- Note: max. accumulated power consumption is 10 Amp.
- The measurement is individual for each channel, but if the total current consumption reaches 10 Amp, the CB cuts off the current. The CB and the actuator are therefore protected via a common measurement.
- · External Charger CH01 has to be ordered separately
- Battery kit BA0801 has to be ordered separately for versions M, G, H, Q, R (2 channel) and version M (3 channel).
- An external emergency stop device (NC) or short-circuiting connection must be mounted from channel 3 of CB800XXXXN-X0 before connection to allow proper function and battery charging.
- When using the CB8A with emergency stop button, the stop button must be released before charging batteries.
- Acoustic alarm sounds when batteries are low and recharging should be started. The alarm level corresponds to approx. 17-18 VDC.
- If the CB800XXXXN-XO option is chosen, An external emergency stop device (NC) or short-circuiting connection must be mounted in channel 3, before
  connection to allow proper function and battery charging.
- If the option N for CH3 is chosen, the external emergency stop has to be placed on channel 3, otherwise the CB8A will not work.

#### Important: Individual current cut-off:

The current to each actuator is monitored and when this reaches a specified value, the current to that actuator is cut-off.

As the actuators do not have the same current consumption the cut-off values must also be different. Therefore it must be specified which actuator is to be connected to which channel:

CURRENT CUT-OFF (A)
2 A (2.35 +/- 0.35 Amp)
3 A (3.00 +/- 0.35 Amp)

5 A (5.35 +/- 0.50 Amp) 6 A (5.90 +/- 0.70 Amp)

4 A (4.00 +/- 0.50 Amp)

Values in brackets

#### 6. CB8-T (MEDLINE® CARELINE® TECHLINE®)

LINAK B S WE IMPROVE YOUR LIFE

DESIGNED IN DENMARK

Item : CB8002T22-0017

Date : 2014.06.20 S.O.6145789 U In : 230 V~ / 50 Hz

I In : Max. 0.63A IPX5

Int. : 5%, max. 1 min. / 19 min.



The CB8-T is developed for use with LINAK A/S' actuators and handsets. The control box can operate up to 2 actuators individually.

The simple compact design combined with high quality makes the control box ideal for use with beds, chairs, tables and many other applications.

#### Important: Individual current cut-off:

The current to each actuator is monitored and when this reaches a specified value, the current to that actuator is cut-off.

As the actuators do not have the same current consumption the cut-off values must also be different. Therefore it must be specified which actuator is to be connected to which channel:

CURRENT CUT-OFF (A)
2 A (2.35 +/- 0.35 Amp.)
3 A (3.00 +/- 0.35 Amp.)
4 A (4.00 +/- 0.50 Amp.)
5 A (5.35 +/- 0.50 Amp.)
6 A (5.90 +/- 0.70 Amp.)

Values in brackets show tolerances

#### 7. CB9 (HOMELINE®)



The CB9 has been developed for Home use. The CB9 and the LA31 can be fully integrated, which saves mounting and wiring or be installed separately.

The HOMELINE CB9 series is available as either analogue (Ax) or  $\mu$ -processor based (Px) types.

#### 8. CB9 (MEDLINE® CARELINE®)



The CARELINE® CB9 has been developed for use together with LA31/LA31R, LA34/LA34R\* in the Care & Rehab industry. CB9 and LA31 can be fully integrated which saves mounting and wiring or be installed separately.

Exchangeable mains cables, Electronic Overload Protection (EOP), EAS, earth connection (Class 1) and exchangeable mains fuse makes CB9 a good choice for the simple hospital and care beds.

The CARELINE® CB9 series is available as either analogue (Ax) or μ-processor based (Px) types.

#### Usage

- Duty cycle: Max. 10% or 2 min. continuous use followed by 18 min. not in use
- Ambient temperature: + 5° to + 40°C
- Compatible with up to 4 actuators, type LA31/LA31R and LA34/LA34R, via 4-pole DIN sockets
- Compatible with BA18
- Medically approved according to EN 60601-1/UL 60601-1



#### Recommendations:

LA34 fast motor is not compatible with any standard versions of CB9, due to high current consumption. For use of LA34 standard motor and small motor always use a CB9 with EAS.

Additionally, actuators with reed switch may not be connected to AC, AJ, AK, AF, AL or AM types because of a conflict between the CB-signal wires and the reed wires!

#### 9. CB9 CARELINE Basic (MEDLINE® CARELINE®)



DESIGNED IN DENMARK Item : CB9000PM4-N0000 Date : 2014.06.20 S.O.6145789

U In : 230V ~, 50/60 Hz I In : Max. 1.5A

Int. : 10%, Max. 2 min./18 min.



The CARELINE® Basic CB9 has been developed for use together with LA31 and LA34 in the Care & Rehab industry.CB9 and LA31 can be fully integrated thus saving mounting and wiring or they can be installed separately. Exchangeable mains cables, Electronic Overload Protection (EOP) and earth connection (Class 1) mains fuse makes CB9 a good choice for simple hospital and care beds. The CARELINE® Basic CB9 series is only available as an analoque (Ax) type.

#### Microprocessor:

With LINAK software packages the Px types are aimed at applications where parallel drive and/or memory functions are required. Please consult the ordering example for a detailed description of the article number.

# Internal battery charger:

AC and AF: Means common measurement on CH1, CH2, CH3 and CH4, If the total current exceeds 5A all channels will be cut off.

Compatible with BA18.

If anything other than a LINAK® charger is used, it must conform to the following specifications: Charging voltage:  $27.6 \, \text{VDC} \pm 2\%$  Charging current:  $< 300 \, \text{mA}$ .

3.4A and 7A on CH3+4.

Note: CH1+2 = LA31 connection and CH3+4 = LA31/LA34 connection.

AK and AM: Means common measurement on CH1, CH2, CH3 and CH4. If the total current exceeds 7A all channels will be cut off.
AS: Means an individual current measurement on CH1, CH2, CH3 and CH4. The current will be cut off only when the current on one channel reaches approx. 4A.

AJ and AL: Means a common current measurement on CH1+2. The current will be cut off when the total current on both channels reaches approx.

Max. current available from the CB9 transformer is approx. 7A.

Px: Means Electronic Overload Protection via a pulse measurement.

#### Usage:

EOP:

• Duty cycle: Max. 10% or 2 min. continuous use followed by 18 min. not in use

• Ambient temperature: + 5° to + 40°C

- Compatible with up to 4 actuators, type LA31/LA31R and LA34/LA34R, via 4-pole DIN sockets
- Compatible with BA18
- Medically approved according to EN 60601-1/UL 60601-1 3th Edition



#### Recommendations:

The LA34 fast motor is not compatible with any standard versions of the CB9, due to high current consumption. For use of the LA34 standard motor and small motor always use a CB9 with EAS.

Additionally, actuators with reed switch may not be connected to AC, AJ, AK, AF, AL or AM types because of a conflict between the CB-signal wires and the reed wires!

#### 10. CB12 (MEDLINE® CARELINE®)



IPX6 Int. : 10 %, Max. 2 min./18 min.



The CB12 product range features three standard versions, which are ideal for a vast number of medical and industrial applications.

In general the CB12 is a transformer operated control unit, which can control up to 4 actuators. The control box features a range of built-in safety devices, increased current cut-off, EAS (Electronic Arc Suppression), and other options such as battery backup, earth outlet, wet alarm etc.

#### CB12 with battery backup

The CB12 with battery backup has an acoustic alarm, which sounds when the batteries are low, approx. 17-18V. To charge the batteries on a CB12 with internal batteries, just connect the CB12 to mains. With external batteries, connect the external batteries to an external charger.

#### CB12F with mains cut-off

In standby mode the CB12F with mains cut-off will typically switch off the power supply to the transformer for 3-4 hours, following which it will switch on the mains supply for approx. 3 sec. It will then be switched off again for 3-4 hours. If the control box has an internal/external battery, the power supply to the transformer will not be switched off until the battery is fully charged.

# External battery charger

If anything other than a LINAK® charger is used, it must conform to the following specifications: Charging voltage: 27.6 VDC ± 2% Charging current: < 300 mA.



#### Warning

In order to avoid injury, a system with control(s) or accessories, a CB12 with battery backup and actuators assembled, must always be disassembled in transport and service situations.

#### 11. CB14 (MEDLINE® CARELINE® TECHLINE®)



O 2114579-0001 MADE BY LINAK A/S DENMARK

The CB14 with microprocessor is developed for systems with a need to run up to five actuators or two actuators / lifting columns in parallel and / or with memory function.

The effective toroidal transformer and the many features such as battery backup, earth outlet, wet alarm makes the control box suitable for a variety of applications.

#### CB14 with battery backup

The CB14 with battery backup has an acoustic alarm, which sounds when the batteries are low, approx. 17-18V. To charge the batteries on a CB14 with internal batteries, just connect the CB14 to mains. With external batteries, connect the external batteries to an external charger.

# Memory position on CB14

When storing the memory position on CB14 the actuators must be run to the wanted position and the "store" button (S) must be pushed. Hereafter, the selected memory button (1, 2, or 3) must be activated within 2 seconds.

#### Microprocessor

All control boxes with a microprocessor must be initialized before start-up. A description of the initialisation procedure can be obtained from your LINAK dealer. If an actuator is replaced, the microprocessor always has to be initialised before use (actuators with reed/hall).

If re-programmed, please ensure that the correct software is used.

#### External battery charger

If anything other than a  $\overline{LINAK}^{\odot}$  charger is used, it must conform to the following specifications: Charging voltage: 27.6 VDC  $\pm$  2% Charging current: < 300 mA.



#### Warning!

In order to avoid injury, a system with control(s) or accessories, a CB14 with battery backup and actuators assembled, must always be disassembled in transport and service situations.

#### 12. CB16 (MEDLINE® CARELINE®)



CB16 is part of the LINAK<sup>®</sup> OpenBus<sup>™</sup> product range. It is a powerful control box with either traditional transformer solution or Switch Mode Power Supply. The universal Switch Mode Power Supply makes the control box adaptable to the worldwide market irrespective of the input voltage.

#### Usage:

Approvals: CB160BF/OBL is approved according to IEC60601-1:2005 3<sup>rd</sup> ed., ANSI / AAMI ES60601-1:2005, 3<sup>rd</sup> edition,

CAN / CSA-22.2 No 60601-1:2008.

• Compatibility: LA27 (no feedback/encoded feedback), LA31, LA34, LA43, LA44, BL1, and BL4

• Duty cycle: 10%, 2 minutes continuous use followed by 18 minutes not in use

Usage temperature: 5°C to 40°C
 Storage temperature: - 10°C to 50°C



# Recommendations:

# **NOTE - HOT PLUGGING**

Removing or adding any OpenBus cables are not allowed when the CB is powered by mains supply!

If needed anyway follow the below procedure:

1. Remove mains and wait 5 sec.

2. Mount or dismount the required cables

If this procedure is NOT followed it may result in a damaged OpenBus driver circuit.

The risk of a damaged circuit increases if the accessory has a high start current (in rush current).

# NOTE - Use of internal mains signal in software or on OpenBus

Please note when using the internal mains signal on control boxes with SMPS that the mains signal may take up to 6 seconds before disappearing after mains has been removed.

#### **Battery operation:**

BATTERY LEVELS

Battery High: > 20 V - normal Battery Medium: 18-20 V - alarm Battery Low: < 18 V - critical

Page 65 of 108 ....to be continued

- If the battery voltage is at 'Medium level' a battery alarm beeps as long as a key is activated. (Medium level means that battery charging is
  necessary to maintain the best possible lifetime).
- If the battery voltage is at 'Low level', the battery alarm function shuts down all movement immediately. The OpenBus is still active for
  approx. 15 seconds. (If trying to operate the system anyway, the battery could get deep drained or the actuator system could get damaged.
  When at low battery level (which is critical), there is a risk that the processor will incorrectly monitor the end of stroke.
  Crashing the actuator could be a result.
- The CB16 with battery back-up only commences battery charging when it is connected to the mains.
- A battery stored at 25° C has to be recharged every 6-7 month.
- Prior to first use of LINAK batteries, please make sure that they are being charged 24 hours in order to reach proper function and prolong the lifetime of the batteries.
- The longest lifetime is obtained when the battery is fully charged.

# Before startup of CB160BF

Due to the microprocessor in CB160BF the control box has to be initialised before startup. Initialisation will in most cases be possible pressing H0 and H1 or H10 and H11 on a handset.



Initialisation depends upon the software description so please obtain a description of the initialisation procedure from your local LINAK dealer.

- If an actuator is replaced, the microprocessor always has to be initialised before use (actuators with reed / hall).
- If re-programmed please ensure that the correct software is used.



## Precautions

# If backlight supported HB is used:

- When CB16 OBL or OBF is powered by mains voltage:
  - At no operation of the HB the backlight in the HB is dimmed.
  - If an HB button is activated the backlight illuminates fully.

When the HB button is released the light is dimmed again after approx. 10-15 sec.

- . When CB16 OBL or OBF is powered by battery:
  - At no operation of the HB theres is no backlight in the HB.
  - If an HB button is activated the backlight illuminates fully.

When the HB button is released the backlight turns off.

# 1st failure safe monitoring:

- · Failure indication:
  - all ACO LED's are blinking
  - The CB16 buzzer is shortly beeping if a handset is activated
  - The error can be reset by activating H0 and H1 OR H10 and H11 on a handset.

# Compatibility - CB16 OBL:

Using actuators with feedback on CB16 OBL are not supported. If used anyway it will not work properly. The reason is that feedback signals
 (e.g. Hall signals) is positioned at the same PINS as analogue stop signals - when using no feedback.

#### CB160BF SMPS - Actuator combinations and/or customized software

Due to the high power from the CB16OBF SMPS, it is highly recommended to validate the system to guarantee the lifetime of connected actuators.
 Especially when using customized software and/or actuator combinations which do not comply with the LINAK compatibility list - for further questions please contact your local LINAK contact.

#### 13. CB20 (MEDLINE® CARELINE®)

The CB20 consists of 3 modules:

CP20 = Control Power, CU20 = Control Unit and BA20 = Battery.

To ensure the battery pack BA20 has max. efficiency the following must be complied with:

- . The battery pack BA20 must be connected
- Mains voltage must be connected min. 12 hours before use.

#### Microprocessor

All control boxes with a microprocessor must be initialized before start-up. A description of the initialization procedure can be obtained from your LINAK dealer. If an actuator is replaced, the microprocessor always has to be initialized before use (actuators with reed/hall). If re-programmed, please ensure that the correct software is used.

#### External battery charger

If anything other than a LINAK® charger is used, it must conform to the following specifications:

Charging voltage: 28.0 VDC ± 2% Charging current: < 300 mA.

#### Usage:

Compatibility: with specific versions of LA23, LA27C, LA31, LA34, LA43, LA44, BL1 and BL4/BB3

• Duty cycle: 10% ~ max. 2 min. continuous use followed by 18 min. not in use

Ambient temperature: + 5° to + 40°C
 Approvals: IEC60601-1:2005 3<sup>rd</sup> ed., ANSI / AAMI ES60601-1:2005, 3<sup>rd</sup> edition, CAN/CSA-22.2 No 60601-1:2008 approved

#### Please be aware:

CB20 is delivered in 3 separate units - CU20 + CP20 + BA20. The units are not assembled at LINAK A/S.



#### Recommendations:

#### HOT PLUGGING

Removing or adding any OpenBus<sup>TM</sup> cables are not allowed when the CB is powered by mains supply! If necessary anyway follow the below procedure: 1. Remove mains and wait 5 sec.

2. Mount or dismount the required cables

If this procedure is NOT followed it may result in a damaged OpenBus™ driver circuit.

The risk of a damaged circuit increases if the accessory has a high start current (in rush current).

· Please note mains cable must be ordered separately.

# **Battery running:**

- If battery capacity is under 50% a "bip" sound is given for 2 seconds, when a handset key is pressed.
- If the system is activated and the mains plug is pulled out, the system will stop.
- In the opposite case, if the system is running using battery power and the mains plug is then plugged in, the system will continue running.
- The charging indicator can blink if the system operates with a high load causing the voltage to drop and because of this the batteries will start to charge.
- The CB20 with battery back-up only commences battery charging when it is connected to the mains.
- A control box with battery should be charged at least every six months. However the longst life is obtained when the battery is fully charged.
- A battery must be charged for at least 12 hours before use.

### 14. CBR1 (MEDLINE® CARELINE® HOMELINE®)

LINAK 10 VE MINISTER 1 VE MIN

The CBR1 has been developed for use together with the RA40 Rotary actuator. The CBR1 can be installed in the same profile as the RA40 Rotary actuator thus saving mounting and wiring.

# 6. Information on specific controls

#### 1. ACC (MEDLINE® CARELINE®)



The ACC (Attendant Control Compact) is fitted to advanced hospital and patient care beds for use where patient positioning must be carefully controlled by medical staff.

#### 2. ACK (MEDLINE® CARELINE®)



The OpenBus™ system makes it possible to use keypads as Attendant Controls or Handsets integrated in the bed side rails. The keypads are named ACK (Attendant Control Keypads).

The protection class is dependent on customer design and testing.

#### Features and Options:

. There is no IP rating as standard, please contact LINAK A/S if a special IP rating is required

#### Usage

- Compatibible with OpenBus™ control boxes e.g. CB20
- Ambient temperature: +5° to + 40°C
- For approvals information see Lintra/Development/Certificates

# For LINAK Standard ACK's, the following is applicable:

- . Colour: Grey RAL 7035
- · Adhesive for the standard ACK is 3M 468MP
- For information re. suitable and unsuitable surfaces, please see 3M's webpage
- Standard recommandation for curing time is 72 hours
- The customer is responsible for correct mounting on suitable surfaces
   For datasheets and additional informations regarding the adhesives: www.3M.com

#### For Customised ACK's, the following is applicable:

Dependant on the customer's own design, installation, application and test it is possible to improve the IP protection class by the use of a special ACK introducing an extra sealing ring to prevent against ingress

Mounting and curing time is dependent on customer's application.

For datasheets and additional information regarding the adhesives: www.3M.com



#### Recommendations:

- · The customer is responsible for the cable strain relief.
- Precautions against ESD (Electrostatic discharge) should be taken, as the PCBA is delivered separately.
- ESDS devices must under no circumstances, during transport, storage, handling, production or mounting in an application, be exposed to harmful ESD.
- The customer is responsible for correct mounting of the ACK on suitable surfaces.
- Keypads, PCBA and cables are supplied separately and have to be mounted by the customer.

# 3. ACL (MEDLINE® CARELINE®)



The ACL (Attendant Control Lock) box is a one turn button box fitted to hospital and care beds for use where the patient positioning must be carefully controlled by the medical staff.

The ACL disconnects all functions on some handsets.

#### 4. ACM (MEDLINE® CARELINE®)



The ACM (Mini Attendant Control) box is fitted to hospital and care beds for use where patient positioning must be carefully controlled by the medical staff.

The compact design and simple operation makes it easy for the nursing staff to retain direct control over critical positioning functions whilst giving the patient a limited degree of adjustment.

The ACM must be mounted correctly on a flat surface to ensure IP degree. A short circuit in the cable can cause movement. To possibly avoid this risk, choose a OpenBus system.

#### 5. ACO (MEDLINE® CARELINE®)



The ACO (Attendant Control OpenBus) is a cost optimised and compact unit with up to 15 buttons that can be used as Handset keys or lock-outs.

The lock-out function can be made visable by using yellow LED's.

The ACO is compatible with control boxes that use an OpenBus™ interface i.e. CB6S, CB16 and CB20.

#### Usage:

- Compatible with OpenBus™ e.g. CB20, CB6S and CB16.
- Ambient temperature +5° to + 40°C
- For approvals information see Lintra/Approvals/Certificates
- ACO IPX6-Washable is approved according to EN60601-2-52.
   In order to comply with the norm the ACO must hang vertically from it's hook during the washing process.



#### Recommendations:


- To switch between locked and unlocked position a small knob between the two pushbuttons has to be turned 20° by use of a special key.
   The key is for the use of the nursing staff only, there are two types, one is made of plastic the other metal.
- The key has to be ordered separately. Article no. for the plastic key is: 00914516, and the metal key number is: 00914721
- For all types: Attention should be given to ensure that the channels shown correspond to the channels available on the chosen control box
- · Always use Locking ring and cables with O-rings.
- Locking ring and cables with O-rings must be fitted to ensure IP degree.
- If other front covers than standards are requested, the customer must design them..

#### 6. ACP (MEDLINE® CARELINE®)



The ACP (Attendant Control Panel) controller is fitted to advanced hospital and patient care beds for use where patient positioning must be carefully controlled by medical staff.

The ACP allows nursing staff to retain direct control over critical positioning functions while giving the patient a limited degree of adjustment.



It is recommended to clean all surfaces, also surfaces covered by lids and the inside of the lids.

(In the event that the ACP is cleaned in wash tunnels: be aware that surfaces covered by lids and the inside of lids will not be cleaned)

# 7. DPH Medical (MEDLINE® CARELINE®)

The DPH is a small two button panel for adjustment of different functions. The DPH fits into a MJB with a modular plug and thereby compatible with OpenBus.

#### Usage:

• Ambient temperature: +5° to +40°

DPH is compatible with the OpenBox control boxes via Modular Junction Boxes MJB5061101-00 as follows:

Control Boxes: CB6S OBL, CB6S OBM, CB6S OBF, CB16 OBL, CB16 OBF, CB20

Modular Junction Box: MJB5061101-00

• DPH1K10-210007 combined with MJB5061101-00 creates the OpenBus codes:

Up Arrow: H0 Down Arrow: H1

Wrong mounting is not an issue with the MJB5061101-00 and the modular jack plug of the DPH cable. The plug will only fit into the correct ports
of the MJB.

#### 8. FPP (MEDLINE® CARELINE®)

WE IMPROVE YOUR LIFE DESIGNED IN DENMARK

DESIGNED IN DENMARK
Type: FPP60XX02+12000
Item: FPP006-00

Date: 2010.09.22 IPX6 S.O.7654321 NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

NOT TO BE OPENED BY UNAUTHORIZED PERSONNE
MADE BY LINAK A'S DENMARK

CE

P.O.1234567-0001

The FPP is for use with a variety of different bed types and is therefore compatible with control boxes that use an OpenBus™ interface i.e. CB6S, CB16 and CB20.

#### Usage:

Ambient temperature: +5° to +40°

 Approvals: LINAK and UL International DEMKO A/S are currently in the process of certifying FPP re. UL60601 and EN60601-1.

• Current consumption: 15 mA (Standard versions with 5 no. LED's (5 LED's x 2 mA = 10 mA) +

microprocessor 5 mA, total = 15 mA



## Recommendations:

The application manufacturer must insure a proper installation of the FPP in the application. The installation must be convenient for the

To ensure proper activation, the lock above the housing must be properly locked by turning it clockwise.

The application manufacturer must ensure the correct torque to the slotted set screw at the bracket, to ensure a stable positioning of the FPP.

The application manufacturer must consider the bracket location for the FPP: If the FPP is mounted at a moveable part, it will move and might touch the patient or parts of the application. If mounted at a fixed part, the patient might move out of range to reach the FPP or he might even be hit by the FPP.



The end-user must not apply a torque to the FPP housing exceeding 8 Nm between the flexible arm and the panel.

The end-user must not bend the FPP arm to a radius smaller than 105 mm.

The FPP must not be useed as a handle at any time when moving the application.

The end-user must be informed that the FPP must not be used for other purposes (e.g. table, handle) than intended, i.e. as a Flexible Patient Panel (FPP).

The end-user must ensure the FPP does not hit items or persons when the application is moved.


#### Mounting instructions:

The FPP is intended for mounting at the head end of a bed so the patient is able to see and operate it with an easy push of a button. After use it can be moved a short distance away with an easy movement.


The FPP comes with a cable attached. The bottom part of the arm is prepared for mounting inside a bracket - fitting the diameter of the arm.

The bracket is not supplied by LINAK but must be designed and made by the customer. It must fit the dimensions shown. A suggestion to a design is illustrated on below pictures as well as the dimensions of the parts for fixation.

#### **Dimensions Illustration:**

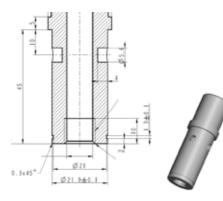

#### Possible bracket design.

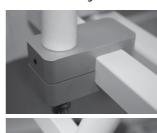



The FPP must be mounted in such a manner that it is secured against rotation. For this purpose the bracket end of the arm has 4 x drilled holes - one of the 4 holes must be secured via the bracket with a slotted set screw with cone point (pointed screw).

Otherwise it may slide away from the user when operated.

As illustrated from the pictures below the panel itself can be moved and angled in a number of positions. The arm can also be bent to move it closer to or move it further away from the user.



# The lock function

Between the arm and the panel there is a lock/unlock function, (a hose type connection). It enables the user to turn the panel into a preferred position.

# Locking of the Panel:

Turn the panel to a preferred position. With one hand on the panel turn the hose clockwise with the other hand. The Panel is fully locked when the panel cannot be turned.

# Unlocking of the Panel:

With one  $\bar{h}$  and on the panel turn the hose counter clockwise with the other hand until the panel can be moved freely.



#### 9. FS (MEDLINE® CARELINE® TECHLINE®)



The Foot Switch is a modular system, developed for use together with some of LINAK control boxes. The LINAK Foot Switch is designed for control of physiotherapeutic beds, hospital beds, dentist chairs, gynaecologist chairs, computer workstations, and working desks etc. It can also be used as a "stand alone" item for industrial applications.

#### Footswitch

Consist of: FS (a pedal unit) and FSE (electronics unit), which can activate one or more actuators. The module system can max. consist of two pedal units, a FSR (right pedal), a FSL (left pedal), and one electronics box.

#### 10. FS2 (MEDLINE® CARELINE®)



The FS2 Foot Switch is developed for use together with some of LINAK control boxes and especially designed for mounting on a support plate.

The Foot Switch is available in a single and a double version.

The double version can be used on a bed where one Foot Switch will be mounted on each side of the bed frame, thus enabling operation from both sides.

#### 11. FS3 (MEDLINE® CARELINE®)

Floor adaptor



The Foot Switch FS3 is an ergonomically designed modular system, developed for use together with LINAK control boxes and IC actuators with Intelligent Control. The LINAK® Foot Switch is designed for easy and improved control of e.g. hospital beds and couches and has been developed in cooperation with end users. The Foot Switch is therefore very user- and cleaning-friendly and has an aesthetic design.

The FS3 is a robust foot control which is available both as a single and double version as well as a floor and bed model. When mounting the double version on a bed, the Foot Switch will be placed on each side of the bed frame to enable easy operation from both sides. It is also possible to have the double floor version for medical applications, e.g. couches, in order to achieve the opportunity to control different motions of the application. The FS3 is furthermore available in an analogue version and a digital OpenBus<sup>TM</sup> version.

# Bed adaptor

#### 



#### Usage:

Usage temperature: + 5° C to + 40° C
 Storage temperature: -10° C to + 50° C
 Relative humidity: 20% to 80% at +30° C
 Atmospheric pressure: 700 to 1060 hPa

Compatibility: LA27CS, LA43 IC, LA44 IC, analogue control boxes and OpenBus™ control boxes


 Approvals: IEC60601-1:2005 3<sup>rd</sup> edition, ANSI / AAMI ES60601-1:2005 3<sup>rd</sup> edition and CAN /


CSA-22 2 No 60601-1:2008

# Mounting of the FS3 bed model:

To mount the FS3 bed model, you have to use the bolt and the nut which have already been fitted to the FS3 bed model (see picture below).

Bolt and nut for mounting

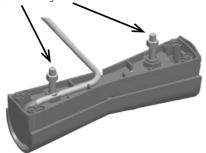

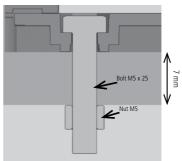

to be continued

Page 72 of 108

You have to remove the nut before mounting the FS3 on the bed and after mounting the FS3 to the bed, the nut is fastened to secure that the FS3 is fixed to the bed frame.

Please note that the max. torque on the nut should be 2.0 Nm (20 kg f. cm).

When mounting the FS3 bed model, it is important to run the cable through the hole of the FS3 in order to lead the cable through (see picture below).



Location of the notch for the cable of the FS3 bed model.



### Recommendations:

- . Do not pull the cable or drop the FS3 on the floor.
- · Do not play with the FS3.

#### 12. HB20 (MEDLINE® CARELINE® HOMELINE®)



The HB20 series combines ergonomic design with a wide range of functionalities such as memory and infrared communication. The handset series is compatible, via the IRO, with the OpenBus™ product assortment.



# Warning!

- Inform the customer not to exceed the IP degree and to make regular inspection for correct functionality. Defective and worn out parts must be replaced.
- Inform the customer that due to the soft material of the soft touch buttons, they can remain activated when released after a forced, any activation.
- Inform the customer that there is no indication for low battery. At low battery, the IR range is reduced and it is recommended to replace the batteries. After replacing the batteries, the functionality and IR range must be tested.
- Inform the customer that all IROs that receive the HB2x signal will operate. There is no pairing between a unique HB2x and an IRO.

# 13. HB30 (MEDLINE® CARELINE®)

HB320000B006-2002A0F000 Type:

Item: J90018

Date: 2013.02.28

IP X6 😉

P.O: W-017653-0001 MADE IN CHINA

The HB30 hand control is designed for better user experience and ergonomic fit for the hands of caregivers. The compact size ensures one hand operation. The HB30 is especially suitable for patient lifts and other MEDLINE® and CARELINE® applications like couches, tables and chairs for treatment and examination.

# Usage:

· Usage temperature:

5° C to 40° C -10° C to +50° C

· Storage temperature · Compatibility:

· Approvals:

Analogue JUMBO Systems

Analogue JUMBO systems with diode and OpenBus JUMBO versions

All OpenBus control boxes

IEC60601-1:2005 3rd edition approved, ANSI / AAMI ES60601-1:2005 3rd edition and CAN/CSA-22.2

No 60601-1:2008 pending

The HB30 is biocompatibility tested and approved according to DS/EN ISO 10993-5:2009, biological evaluation of medical devices - part 5: Tests for in vitro cytotoxicity. It is a demand for hand-held devices for patient lifts. The HB30 has a compact design and therefore it cannot be approved according to EN IEC60601-2-52

(Application Environment 4 for care beds used in Domestic areas (or EN1970)).

# How to identify the cables:

Each cable has a label for easy identification of item number and for which control box it is intended.



### How to mount a cable:



Step 1: Mount the cable lock and fix it to the slot marked in the picture.



Fix the cable tab on the hand control's front side first. Push in and twist a bit to fix the tab (see picture fit A into B).



Fix the tab on the back as well by pushing.

#### How to remove a cable:



Step 1: Release the cable by pushing e.g. a screwdriver into the hole on the back of the hand control. Twist and release.



# Recommendations:

- Please ensure that you use the right cable type to ensure the wished functionality. In case of lack of functionality of your hand control, check that
  the hand control cable is the right one for the intended control box or contact your local LINAK representative.
- Please note that HB3XOLO version (analogue with diode) is not supported by the CBJC. The diode will light up at all times if used with the CBJC.
- Do not submerge the handset under water.
- Unless otherwise specified or agreed with LINAK, the handset is only intended to be used on LINAK systems.
- Do not sit or lie down on the handset. It can cause unintended movement of the application.
- When changing handsets for OpenBusTM systems, the power must be switched off.
- The force of the magnet depends on the thickness and the type of the lacquering, stickers, steel thickness etc. It is the responsibility of the customer to verify that the holding force on the application is acceptable.
- For handsets with magnets it is the responsibility of the user/operator to evaluate any possible risk caused by use of permanent magnets.
- For handsets with magnets it is recommended to have a parking place for the handset on the application, where the customer ensures that the handset does not fall off.

### 14. HB40 (MEDLINE® CARELINE® TECHLINE®)

Item : HB41000-108142 Date : 2009.03.20 IPX4

P.O.123456-0001 / S.O.7654321 MADE BY LINAK A/S DENMARK

The HB40 series handsets are designed for use with most of LINAK control boxes.

These sturdy compact units are ergonomically designed and ideal for a vast range of applications from patient care beds and office furniture to industrial and agricultural duties.

The HB40 must hang vertically from it's hook during "intensiv" washing process.

# Usage:

Ambient temperature: +5° to +40° C

- . HB40 is compatible with CB8-T, CB9..AX(not CH.4) and CB12 (not CH.4)
- HB40A is compatible with CB8-A battery version. Fitted with plug for battery charger CH01.
- HB40E is compatible with CB9Px (except CB9..PM/PN) and CB14
- HB44H is only compatible with CB9..Ax and CB12 (if CH.4) 4 channels
- HB40T is only compatible with CB7 (max. 2 channels)

# Compatibility:

	СВ7	CB8	CB8A	CB9Ax	CB9Px (not CB9PM/PN	CB12	CB14
HB4xO		х		х*		х	
HB4xA			х				
HB4xE					х		х
HB4xH				x (4ch.)		x (4ch.)	
HB4xT	х						

<sup>\*</sup> only for channels 1, 2 and 3

# 15. HB50 (MEDLINE® CARELINE® TECHLINE®)

Item : HB52B00-00111 Date : 2009.03.19 IPX5

P.O.123456-0001 / S.O.7654321 MADE BY LINAK A/S DENMARK

The HB50 is primarily designed for the LINAK JUMBO system and most of LINAK control boxes with memory functions.

The HB50 gives the user access to a range of memory functions, allowing present positions to be stored. For use in a wide variety of hospital, patient care and industrial applications.

# 16. HB60 (HOMELINE®)

Item : HB61T00-00009 Date : 2009.03.19

P.O.123456-0001 / S.O.7654321 MADE BY LINAK A/S DENMARK

The HB60 series is exclusively designed to be used together with the LINAK HOMELINE® system: LA31/LA29/LA28C/CB7 or CB9 with or without memory.

# 17. HB70 (MEDLINE® CARELINE®)

Item : HB756E000-10600 Date : 2009.03.19 IPX6

P.O.123456-0001 / S.O.7654321 MADE BY LINAK A/S DENMARK

LINAK offers the HB70 with protection class IPX6 as standard and a range of options such as control of up to 5 actuators, memory, and simultaneous drive. The HB70 is designed to operate with most LINAK control boxes.

# Usage:

- · Compatible with most LINAK control boxes.
- Approved according to: EN 60601-1, EN 60335-1 and UL 60601-1 as part of a LINAK actuator system



#### Recommendation:

- It is not possible to combine HB7x with the binary based CB9..PM/PN.
- The IPX6 Washable version has a special adhesive for the front covers.
- The HB75xE0 used together with CB140 will give trend and anti-trend on channel 1and 2 of the control box when using the last button row.
- All front covers use the codes W0 (not Washable) and WW (Washable) Memory:

# Memory:

- The memory and parallel functions require the control box to have a microprocessor.
- When storing the memory position on the CB20, CB14, CB18MKII and newer versions the actuators must be run to the desired position and the "store" button (S) must be pushed. Then the desired memory position button (1, 2 or 3) must be activated within 2 seconds.

### 18. HB80 (MEDLINE® CARELINE®)



The HB80 hand control has an optimised ergonomic design shaped for the hand. The handset is suitable for all kinds of MEDLINE and CARELINE applications such as hospital beds, patient lifts, treatment and examination couches etc.

The HB80 handset is available in versions with up to 10 or 12 activation buttons.

#### Usage:

Usage temperature: 5° C to 40° C
 Storage temperature: -10° C to +50° C

Compatibility: CB6, CB8, CB9, CB12, CB14, CBJ 1/2, CBJ-H, CBJ-C, CB6S, CB16 and CB20.

Approvals: IEC60601-1:2005 3<sup>rd</sup> edition, ANSI/AAMI ES60601-1:2005 3<sup>rd</sup> edition and CAN/CSA-22.2 No 60601-1:2008.

The HB86 version has a shorter distance between the buttons and cannot be approved according to EN IEC60601-2-52 Application Environment 4 for care beds used in Domestic area (or EN1970). HB80 is designed and tested according to IPX6 washable in conformity with EN60601-2-52 cl. 201.11.6.6.101 (Machine washable medical beds).

The HB80 must hang vertically from it's hook during the washing process.

In order to maintain the flexibility of the cables, it is important that a coiled cable is placed in such a way that the cable's own weight does not strain the coil during the washing process.



# Recommendation:

- Unless otherwise specified or agreed by LINAK the handset is only intended to be used on LINAK systems.
- When changing handsets for OpenBus™ systems the power must be switched off.
- It is recommended to check the handset and cable for damage and holes made by violent handling before washing the application or at least once
  a year.
- It is recommended to have a parking place for the handset on the application, where the customer ensures that the handset does not fall off.
- Clean the handset regularly to ensure good hygiene standards.
- When a defective HB80 is replaced, check that the new HB80 has exactly the same specification and functionality.
- Do not submerge the handset under water.

### For handsets with magnet:

- If handsets with magnet are attached to a smooth surface, a movement or twisting of the cable, for example during transport, can cause the handset to move and result in damage if the cable is squeezed.
- The force of the magnet depends on the thickness of the lacquering, the lacquering type, stickers, steel thickness etc.
   It is the responsibility of the customer to verify that the holding force on the application is acceptable.
- It is the responsibility of the user/operator to evaluate any possible risk caused by use of permanent magnets.



# Warnings!

• Do not sit or lie on the handset. It can cause unintended movement of the application.

In order to maintain the flexibility of the cables, it is important that a coiled cable is placed in such a way that the cable's own weight does not strain the coil during the washing process.



#### 19. HD8X (MEDLINE® CARELINE®) for JUMBO Care system

WE IMPROVE YOUR LIFE
DESIGNED IN DEMMARK
Type: HD82C0F011000W-200230012A0C000
Item: HD8X008-02
Date: 2013.12.19 IPX6 S.O.7654321

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
MADE BY LINAK A/S DEWINARK

WILLIAM A/S DEWINARK

P.O.1234567-0001

Has an optimised ergonomic design shaped for the hand. The handset is suitable for all kinds of MEDLINE and CARELINE applications with OpenBus control system such as hospital beds, patient lifts, treatment and examination couches etc.

## Usage:

Usage temperature: 5° C to 40° C
 Storage temperature: -10° C to +50° C

Compatibility: CBJ-C

Approvals: IEC60601-1:2005 3rd edition, ANSI/AAMI ES60601-1:2005

3rd edition and CAN/CSA-22.2 No 60601-1:2008.

The HL70 is a handset with integrated locking function, where a selective



# Recommendation:

- Unless otherwise specified or agreed by LINAK the handset is only intended to be used on LINAK systems.
- When changing handsets for OpenBus<sup>™</sup> systems the power must be switched off.
- It is recommended to check the handset and cable for damage and holes made by violent handling before washing the application or at least once
  a year.
- It is recommended to have a parking place for the handset on the application, where the customer ensures that the handset does not fall off.
- Clean the handset regularly to ensure good hygiene standards.
- When a defective HD8X is replaced, check that the new HD8X has exactly the same specification and functionality.
- · Do not submerge the handset under water.

# For handsets with magnet:

- If handsets with magnet are attached to a smooth surface, a movement or twisting of the cable, for example during transport, can cause the handset to move and result in damage if the cable is squeezed.
- The force of the magnet depends on the thickness of the lacquering, the lacquering type, stickers, steel thickness etc.
   It is the responsibility of the customer to verify that the holding force on the application is acceptable.
- It is the responsibility of the user/operator to evaluate any possible risk caused by use of permanent magnets.




# Warnings!

Do not sit or lie on the handset. It can cause unintended movement of the application.

# 20. HL70 (MEDLINE® CARELINE®)

Item : HL7240002+20500 Date : 2009.03.19 IPX4

P.O.123456-0001 / S.O.7654321 MADE BY LINAK A/S DENMA



# 21. HL80 (MEDLINE® CARELINE®)

WE IMPROVE YOUR LIFE

Item No. : HL854507001+61

Frod. Date: 2009.03.19 IP54 S.O.7654321

NOT TO BE OPBEBB BY UNAUTH-CREED PERSONNEL MADER LIMIT AS DENMARK

P.O. 123456.0.001

The HL80 handset has an optimised ergonomic design and switch activations.

The HL80 is a lockable handset, which makes it possible to lock or unlock one or several functions.

It is available in several different standard versions with a variation of bed symbols for easy interaction with end-users.

### Usage:

 Approved according to: IEC60601-1:2005 3<sup>rd</sup> edition, ANSI / AAMI ES60601-1:2005, 3<sup>rd</sup> edition, and CAN / CSA-22 2 No 60601-1:2008



## Warnings!

- When using the locking function on HL80 check that the handset switches are actually locked.
- Locking function on HL80 only locks the actual handset.
- Do not sit or lie on the handset. It can cause unintended movement of the application.
- Locking of a single channel at HL8x do not necessarily prevent that channel from activation, if the same channel are covered by another handset button (e.g. at simultaneous drive) or another control unit.

...to be continued



# Recommendation:

- Violent use of the key on HL80 can cause either damage to the keyhole or the key itself.
- If a lock key is missing, then full control over the application could be missing.
- Clean the handset regularly to ensure good hygiene standards.
- · When a defective Hx80 is replaced, check that the new Hx80 has exactly the same specification and fuctionality.
- · Do not submerge the handset under water.
- Unless otherwise specified or agreed by LINAK, the handset is only intended to be used on LINAK systems.
- When changing handsets for OpenBus™ systems, the power must be switched off.
- It is recommended to check the handset and cable for damage and holes made by violent handling before washing the application or at least once a year.
- It is recommended to have a parking place for the handset on the application, where the customer ensures that the handset does not fall off.

# For handsets with magnet:

- If handsets with magnet are attached to a smooth surface, a movement or twisting of the cable, for example during transport, can cause the
  handset to move and result in damage if the cable is squeezed.
- The force of the magnet depends on the thickness of the lacquering, the lacquering type, stickers, steel thickness etc. It is the responsibility of the customer to verify that the holding force on the application is acceptable.
- It is the responsibility of the user/operator to evaluate any possible risk caused by use of permanent magnets.

# 22. IRO (MEDLINE® CARELINE®)



The IRO (Infrared Receiver OpenBus™) has been developed as a part of the accessory portfolio to be available for the CB OpenBus™ family. The receiver is fitted to the bed so that the bed movement can be controlled with signals received from a remote control (C-type Transmitter).



#### Warning!

- Inform the customer that other handsets/equipment that use a protocol similar to parts of the LINBUS protocol for communication, may have influence on movement of the application
- Inform the customer that:
  - a damaged or a dirty IR window will reduce the receiving sensitivity
  - foreign object must not block the visual line from transmitter to the IRO receiver,
  - the IRO must be mounted for optimal visual receiving ability
- Inform the customer that interference from other light sources (38 KHz +/- 5 %), e.g. neon light, sunlight or toys may cause a temporary stop in a
  movement
- · The customer has to mount the IRO at a protected location in the application
- Inform the customer to use the torque 1.5-2.0 Nm for mounting the IRO on the application

# 23. LS (MEDLINE® CARELINE® TECHLINE®)



Type : LS301-90 | General Representation | LS301-90 | General Representation | LS30399-15 | General Representation | LS30399-15 | General Representation | LS3039-15 | General Representation | Gene

There are two types of LINAK limit switches, for actuators type LA22, LA30, LA30S, LS, and LSD.

The LS type gives a signal in two fixed end positions, but requires a control unit to stop the actuator when the microswitches are activated.

# 24. LSD (MEDLINE® CARELINE® TECHLINE®)



The LSD type controls the stroke length of the actuator between two fixed end positions by cutting off the current to the motor.

# 7. Information on specific JUMBO™

# 1. BAJ1 & BAJ2 (MEDLINE® CARELINE®)

LINAK® **液((())**(())(())(() U Out: 24 V=. max. 10 AT / IPX5 Type: BAJ100001151 m: BA 11015-00 Date: 2009.03.19 S.O.7654321 P.O. :123456-0001 MADE BY LINAK A/S DEI CAUTION: NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL A

LINAK® ACE COOU U Out: 24 V ..., max. 10AT / IPx4 △ ⊕ LINAK KK Item: BAJ200000010 94 (A) 12P Date: 2009.03.30 S.O.7654321 P.O. :123456-0001 Λ CAUTION: NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

These battery packs have been specially developed for use with the JUMBO system.

The battery packs are easy to exchange through an integrated snap system. The battery packs are easily mounted on the JUMBO mounting brackets.

A customised front cover is possible.

BAJ1 has to be charged with a JUMBO charger CHJ2 or a JUMBO control box CBJ1 or CBJ2 with integrated charger.

BAJ2 can be charged as BAJ1, but can also be charged through an integrated DC-plug for use with external charger CH01.

BAJ1 is available in a special edition that can be used in the harsh conditions in the pool environment both outdoor and indoor.

# Usage:

· Duty cycle: 10% or 2 min. continuous use then 18 min. not in use

+5° to +40 °C Ambient temperatures:

This battery pack is a part of the JUMBO system. It is compatible with CBJ1/CBJ2 and CHJ2.

IEC60601-1:2005 3rd edition. ANSI/ AAMI ES60601-1:2005 3rd edition and CAN/CSA-22.2 No 60601-1:2008 · Approvals:

# 2. CBJ1/CBJ2 (MEDLINE® CARELINE®)



The control boxes CBJ1 and CBJ2 are part of the JUMBO system, JUMBO is a modular system combining an actuator, a control box (CBJ1/CBJ2), a battery (BAJ1/BAJ2) and a charger (CHJ2) in a flexible solution, specially developed for patient lifts.

The complete system is medically approved and contains a series of features which meet the patients need for a safe and comfortable lift, e.g. CBJ1 and CBJ2 are equipped with a soft-start/stop function, emergency lowering function etc.

CBJ1 and CBJ2 are available in a special edition that can be used in the harsh conditions in the pool environment both outdoor and indoor.

# Usage:

Item: CBJ2018-02

Date: 2009.03.19 S.O.7654321 P.O. :123456-0001 MADE BY LINAX AS DE

· Duty cycle: max. 10% or 2 min, continuous use then 18 min, without use

CAUTION : NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

 Ambient temperature:  $+5^{\circ}$  to  $+40^{\circ}$ 

• For one or two actuators (lift and leg spreader actuator)

· Approvals: IEC60601-1:2005 3rd edition, ANSI/AAMI ES60601-1:2005 3rd edition, CAN / CSA-22.2 No 60601-1:2008.

# Adjustment instructions for the JUMBO application.

Tool	For the adjustment you must use a trimming screwdriver, which can be purchased from LINAK A/S. It is also possible to use other types of trimming screwdrivers for the adjustment.
ush	Ordinary screwdrivers cannot be used, as they will damage the potentiometer slot.
T	When you receive the JUMBO from LINAK A/S it is adjusted to min. current cut-off.
1.	Connect the JUMBO control box to the actuator.
2.	Load the actuator with the required load.
3.	Turn the potentiometer completely clockwise.
4.	Run the actuator in the loaded direction at the same time turn the potentiometer anticlockwise until the actuator stops.
5.	Turn the potentiometer 3 times clockwise.
6.	Check JUMBO can lift the loaded actuator.
7.	Insert the plugs article no. 0009020 (Light grey (RAL7035) or 0009019 (Dark grey (RAL7016) to ensure IP protection



#### Warning


In order to avoid injury, the emergency-stop should be activated in (all) transport and cleaning situations.



#### Recommendation:

- When charging, the CBJ1-2 will not be able to operate any actuators.
- By use of charger CH01 it is possible to activate the actuators when charging. However, this is not recommended as it can damage the control box or the charger CH01.

# Mounting of CBJ1 and CBJ2:





# Special care should be taken when mounting the CBJ.

As long as the the CBJ is mounted correctly then the CBJ complies to IPx5.

If the CBJ is mounted incorrectly then water will gather around the screw holes resulting in non-compliance with IPx5!

CBJ1/2 with variable current cut-off: the protection plugs must always be inserted to ensure IP protection after adjustment.



When using the control box with emergency stop, the stop button must be activated in cleaning situations in order to comply with IPx5. The battery pack BAJ1/2 must not be removed in cleaning situations, doing so could result in non-compliance with IPx5.



The mains cable must always be ordered separately when ordering a CBJ with an internal charger.

#### 3. CBJ Care (MEDLINE® CARELINE®)

CAUTION! NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

ATTENTION! NE PAS À OUVRIR PAR PERSONNEL NON-AUTORISÉ A



WE IMPROVE YOUR LIFE DESIGNED IN DENMARK Item: CBJ015500F231134 Date: 2012.12.13 S.0.7654321 P.O.: 1234567-0001

U In: 100 - 240 VAC, 50-60 Hz CBJ-C I In: Max. 400 mA, 37-53-VA 2.Gen. U Out: 24 V=:, max. 250 VA / IPX4 Int.: 10%, Max. 2min. / 18min. S.W. PAR: 01000014 Ver. 1.0

**⑤☆**(€**℃**,△) 大□ The control boxes CBJ Care is a part of the JUMBO system. JUMBO is a modular system combining an actuator, a control box (CBJ Care/CBJ1/CBJ2), a battery (BAJ1/BAJ2), and a charger (CHJ2)/internal charger in a flexible solution, specially developed for patient lifts.

The complete system will be medically approved and contains a series of features, which meet the patients need for a safe and comfortable lift, e.g. CBJ Care is equipped with a soft-start/stop function, emergency lowering function, learn mode for current cut off, service indicator and battery indicators. Furthermore usage information is collected in the control box.

## Usage:

• Duty cycle: max. 10% or 2 min.continuous use then 18 min. without use

• Ambient temperature: +5° to +40°

For up to three actuators (lift, leg spreader and tilt of the sling)

Approvals: IEC60601-1:2005 3<sup>rd</sup> edition, ANSI / AAMI ES60601-1:2005 3<sup>rd</sup> edition, CAN/CSA-22.2 No 60601-1:2008
 Australia deviation, for one, two or three actuators, (lift, leg spread and tilt actuator), Canadian deviation



### Recommendations:

- Before start-up we recommend to reset the service counters days and cycles until next service visit. To reset press the up and down button on the control box or the hand control for 5 seconds. An audio signal will confirm the resetting.
- The green battery indicator (100% to 50% capacity remaining) will light up during charging even though the battery is not fully charged. It is necessary to use the "CHARGE" diode to indicate whether or not the battery is fully charged (when using internal charger). The CHARGE indicator will light up during charging and turn off when the battery is fully charged.
- When charging, the CBJ-Care will not be able to operate any actuators.
- Using the Learn Mode function means that:

The lift will never be able to lift more than 1.5 times the max. load. However the actuator will not stop exactly at the weight it is adjusted to. This is because the actuator will use less current when it's components are run-in. After the max. current value has been registered using the "Learn" function the control box will be able to use max. current +10%.

This ensures that the lift is capable of lifting the promised load but cannot lift more than 1.5 times this amount. If the below mentioned conditions are fulfilled:

- Learn mode is made on the specific pair of actuator and control box which are going to be used in real life afterwards.
- Ambient temperature should be app. 20 degrees C +/ 5%.
- Load curve: difference between the highest and lowest load should not be more than approx. max. 10%
- The registration function can only be activated by using a specially produced handset (HB7x235-00). A standard handset cannot activate the function.
- The maximum cut-off value that can be registered (stored) is 11 Amp.
- If an actuator or CBJ Care is exchanged it will be necessary to reset the max. load to ensure the correct cut-off value for the new system as a whole
- Please note that when you disconnect the service data tool from JUMBO Care it will take 1 hour before the control box will power down.
   This means that display indicators will keep lighting up 1 hour after disconnection of the service data tool. If you want to avoid this battery consumption the emergency stop button can be activated.
- Ensure that you have the Service data tool version 2.5.0 or newer as only these versions support JUMBO Care 2<sup>nd</sup> generation.
- If the control box is exchanged the actuator data will be lost. The data is stored in the control box, not the actuator. However, actuator data can be
  maintained by using the service data tool for saving actuator data in the new control box.
- Note that the control box has to be "awake" in order to connect to the service data tool. Activate the control box before connecting via the
  emergency lowering buttons or the hand control (via T-cable).

#### **HOT PLUGGING**

Removing or adding any OpenBus™ cables are not allowed when the control box is on power via mains supply or battery! If necessary anyway follow the below procedure:

- 1. Remove mains or battery and wait 5 sec.
- 2. Mount or dismount the required cables

If this procedure is NOT followed it may result in a damaged OpenBus™ driver circuit. The risk of a damaged circuit increases if the accessory has a high start current (in rush current).



#### Warnings!

In order to avoid injury, the emergency-stop should be activated in (all) transport situations.

# Functionality - JUMBO Care with display

Below you find information about what to read-out on the display version of JUMBO Care. Basically the functionality for the display version is the same as the diode version, but more information can be read out on the display.

Page 82 of 108 ...to be continued

# **Driving information**



As long as a hand control button function is activated driving information will be shown on the display. Either lifting arm up, lifting arm down, legs in or legs out or tilt of sling.

The only exception to this is when the battery is flat (stage 3 and 4 – see below). At that point the battery information will be shown instead.



# Battery information

The battery discharging will be shown in four stages:



Battery state 1: The battery is ok, no need for charging (100 - 50 %).



Battery state 2: Battery needs charging. (50 - 25 %)



Battery state 3: Battery needs charging. (Less than 25 %)



Buzzer sound is provided when a button is pressed in this battery state.



The battery needs charging. At this stage some of the functionality of the lift is lost. At this battery stage it is only possible to drive the lifting arm down. Furthermore an audio signal will sound when a control button is

activated (17V or lower). The symbol will switch between the two pictures for 10 seconds.

The battery symbol is shown when the box is active until power down (2 minutes after use).

• The battery level is measured via voltage level. This means that it is possible to experience e.g. that the battery switches from state 1 to state 2 and back to state 1.

It is not possible to use other batttery types than (BAJ1/BAJ2) with the JUMBO Care

#### Charging of battery:



When the mains cable is plugged in and a control button is activated the symbol to the left is shown on the display until power down 2 minutes later. The purpose of the symbol is to tell the user that it is not possible to use the lift when it is plugged in to the mains.

CB6S OBL with battery charger is not an approved combination, because it does not support charging indicator.

### Short circuit:



If there is a short circuit the control box will show the short circuit symbol with a recommendation to check the connections. The symbol will be shown until the short circuit has been repaired.

#### Service:





The control box will show the service symbol when it is time for service. The standard setting is after 12 months/8000 cycles. After each power down, the first time that the service symbol is shown the control box will provide an audio sound (100 milli seconds) so that the user gets a reminder about checking the display.

The 'SERVICE' text will blink 3 times, then a static service symbol will be shown (10 seconds in total). Even though it is time for service the system will still be functional and work as normal.

## Overload Channel 1 only:






When overload occurs (according to the pre- definedcurrent cut off limit) the overload symbol will be shown on the display. The 'MAX' text will blink 3 times and the overload symbol will be shown for 10 seconds in total.


### Service information read-out

Basic service information can be read out on the display. To get the service information on the display please press the lifting arm up button (only ½ second press). The information will be shown for ½ minute or until other buttons are activated.




If "No days" are chosen for service interval then the display will show Days since last service /-.

# Mounting:







As long as the the CBJ is mounted correctly then the CBJ complies to IPx4.If the CBJ is mounted incorrectly then water will gather around the screw holes resulting in non-compliance with IPx4! In order to ensure IPx4, the emergency stop should be activated in cleaning situations.

# 4. CBJ Home (MEDLINE® CARELINE®)

LINAK 12 Item: CBJH13080000004 Date: 2009 03 19 S.O.7654321 P.O. :123456-0001 MADE BY LINAK A/S DENMARK

U In : 24 V U Out: 24 V=, max. 250 VA / IPX4 Op. : 10%, Max. 2min. / 18min. S.W. P/N.:78000 Ver.1.70 CAUTION: NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL A

RCEC **知**。File E175209 大 △⊕

module.

The CBJ Home is a specially developed solution for patient lifts. The complete system consists of a control box and a battery enclosed in a single elegant

The system will be medically approved and contains a series of features ensuring a safe comfortable lift, e.g.the CBJ Home is equipped with a soft-start function, emergency lowering, emergency stop etc. The CBJ Homebatteries are ventilated through a number of grill units on the backside of the housing.

#### Usage:

CBJ Home is only compatible with LA31, LA34 (not fast motor) and LA44 (not fast motor) on channel (Hi/Lo) and LA31 on channel 2 (leg spreader).

Max. 10% or 2 min. continuous use then 18 min. without use. Duty cycle:

· Ambient temperature:  $+5^{\circ}$  to  $+40^{\circ}$ C.

 Approvals: IEC60601-1:2005 3rd edition, ANSI/AAMI ES60601-1:2005 3rd edition

# Replacement of battery:

Only an authorised LINAK service centre should change a battery in a CBJ Home. If a CBJ Home is opened and a battery changed by an unauthorised personel there is a risk that it may malfunction at a later date.

Mounting of CBJ Home (only vertically)





# Recommendations:

- If emergency stop is pressed whilst charging, the batteries will not be charged.
- . When charging, the CBJ Home will not be able to operate any actuators.
- For recharging the batteries, use charger CH01 (charger has to be ordered separately). Mains cable must be ordered separately if internal charger is chosen.
- Note: Always mount the CBJ Home with the channel sockets facing downwards
- The CBJ Home is not intended for use with "buffer" type actuators such as LA28 and LA32 only LA31, LA34 and LA44.
- The actuator must always be fitted with an exchangeable cable (mini-fit) socket.
- Actuators on channel 1 must always be with spline.
- It cannot be guaranteed that the actuator will stop exactly at the weight that is stored as the motors in the actuators will use less current when run in. Though it will never reach the 1.5 times max. load as the norm states.
- Tolerance for current cut off is: +/-10%
- The maximum cut-off value that can be registered (stored) is 8 Amp.
- If an actuator or CBJ Home is exchanged it will be necessary to reset the max. load to ensure the correct cut-off value for the new system as a whole.
- The registration function can only be activated by using a specially produced handset (HB7X161-00). A standard handset cannot activate the function.
- To operate the "Learn mode" function in External charger versions produced before February 2010 press the "R" button when "learning" (the lifting arm actuator will operate automatically). With all other versions (and future versions with external charger) both the "R" button and the "lifting arm" button need to be pressed.



#### Warning!

In order to avoid injury, the emergency stop should be activated in (all) transport situations.

When using the control box with emergency stop button, the stop button must be released before charging batteries or before the application is put into operation.

The mounting screws for the control box and the charger must be tightened with a maximum torque of 1 Nm.

#### Mounting information:

The CBJ Home is mounted by means of 2 screws: Type ISO4762-M6x90-8.8 (not supplied by LINAK)

Spares information:

The cable lock kit consists of the following 3 items:

- 2 x screws
- 1 x blind plug for ch. 2 if not in use
- Cable Lock

All the cable lock items are included when ordering the kit, article number: 0898001-B.

# 5. COBO20 (MEDLINE® CARELINE®)



The COBO20 makes increased battery power available (compared to BA20). It is designed to be used with CU20 together with BAJ1 or BAJ2 (24V, 2.9AH). It is also possible to connect other 24V lead acid or SLA (Sealed Lead Acid) battery types.

COBO20 with internal charger has a green and a yellow light. Green is ON when the COBO20 is connected to mains. Yellow is ON when charging. The yellow light shines constantly until batteries are fully charged.

# Usage:

• The COBO20 is to be used with CU20 (instead of CP20) for applications that need a large battery capacity.

Ambient temperatures: +5 to 40°C

Approvals: The COBO20 is EMC approved.

The COBO20 is designed in accordance with the following standards: 60601-1/ UL2601 and EN60601-1-4.

• When running on batteries CU20 will shut down after 2 minutes to save power.



# Recommendations:


- Choose CU200XXXXXXXXXX if positioning/memory function is to be used.
- · After activation of emergency stop it can take up to 10 seconds before the system can be used again.
- If own battery package is used, a10A fuse must be added.
- It is recommended that the COBO20 is serviced according to the relevant national norms for the applications in which it is used, however all electrical parts must be checked at least once a year.
- The COBO20 should be cleaned regularly, in order to maintain good hygiene. It is not allowed to use chemicals to clean the box.
- Only use COBO20 together with CU20.



# Warning!

In order to avoid injury, the emergency stop should be activated in (all) transport situations.

#### Mounting of COBO20





# Special care should be taken when mounting the COBO20:

As long as the COBO is mounted correctly then the COBO20 complies to IPX5. If the COBO is mounted incorrectly then water will gather around the screw holes resulting in non-compliance with IPX5.

# 6. CH01 (MEDLINE® CARELINE®)

For charging the batteries of CB08-XA and all JUMBO control boxes, directly connected to the control box or via the handset HB40A. For charging of the batteries in battery box BAJ2 (JUMBO system) and CBJH.

# 7. CHJ2 (MEDLINE® CARELINE®)

The charger CHJ2 has been specially designed for use as a wall-charger for the JUMBO system.

The CHJ2 charger is a Switch Mode Power Supply (SMPS) version which makes charging of the batteries more efficient.

The charging time for a BAJ1 or a BAJ2 battery pack is approx. 4 hours. Mains voltage from 100 V AC – 240 V AC (50/60 Hz) is possible on same charger.

The charger indicates whether the charger is connected to the mains (green LED) or whether the battery is being charged (yellow LED). Medically approved.

# Usage:

Approvals: IEC60601-1:2005 3<sup>rd</sup> edition, ANSI/AAMI ES60601:1 2005 3<sup>rd</sup> edition and CAN / CSA-22.2 No 60601-1:2008

• Ambient temperatures: + 5 to + 40 °C

# 8. MBJ1/2/3 (MEDLINE® CARELINE®)

Depending on of what your JUMBO system consists you need to use one of the following three mounting brackets. IP protection is only valid when the JUMBO system is mounted vertically.

All three brackets include matching screws (IPX1, IPXX and IPX5 are delivered with stainless screws). The mounting screws for the control box, charger must be tightened with a maximum torque of 1 Nm.

	MBJ1 For use together with CBJ1 or CBJ2 or CBJC, CHJ2 and BAJ1 or BAJ2. I. e. when combining control box, charger and battery pack MBJ1 has to be used.
	MBJ2 For use together with CBJ1 or CBJ2 or CBJC, and BAJ1 or BAJ2. I. e. when combining control box and battery pack MBJ2 has to be used.
0	MBJ3 For use together with CHJ2 and BAJ1 or BAJ2. I. e. when combining charger and battery pack MBJ3 has to be used.

# 8. Information on specific accessories

If the actuator is to be equipped with accessories, these must be specified when ordering the actuator from LINAK. There are the following possibilities:

# 1) TR6/TR7 External transformer

If the TR6 or TR7 fixed cable connection becomes damaged the transformer must be replaced.

# 1. BA18 (MEDLINE® CARELINE®)



The BA18 is exchangeable without opening the CB (BA18 is a separate box).

Ventilation of external batteries, BA18 - see Figure 1

Check at regular intervals that the ventilation stub is undamaged and intact. The construction of the ventilation stub permits battery gasses to get out, but it does not permit penetration of water.

#### Usage:

- Compatible with CB6, CB6S, CB7, CB9, CB12 / CB14 BT versions
- Ambient temperature: +5°C to +40°C

## 2. CS16 (TECHLINE®)



The CS16 electronic limit switch is connected between the LINAK® actuator and a non-LINAK power supply, where it cuts out the current to the actuator in end position of if an obstacle is encountered. The PCB contains a variable current limit setting and is available in different versions, depending on the actuator with which it is to be used.

The CS16 should be connected between the linear actuator and the power supply, where it will switch off the power when the actuator reaches end position or if the actuator is overloaded.

As the CS16 are open PCB's, they have to be installed in an encapsulation to prevent damage. (LINAK® offers one type of encapsulation for CS16).

### Adjustment of CS16

The CS16 has a rotary potentiometer for adjusting the value of the cut-off current. To obtain the correct cut-off current, connect the CS16 and turn the potentiometer as far as it will go/anticlock wise to set the maximum cut-off current.

Then subject the actuator to the maximum load it will be exposed to in the application. At the same time turn the potentiometer clockwise, reducing the cut-off current, until the actuator stops (not in end position).

Then turn the potentiometer approx. quarter of a turn anti-clockwise and the system is ready for use.

As the CS16 is a open PCB's, it have to be installed in an encapsulation to prevent damage. (LINAK $^{\odot}$  offers one type of encapsulation).

# 3. DJB (MEDLINE® CARELINE®)



The DIN Junction Box is designed for use where there is a need for more than 1 or 2 controls to be connected to a control box.

The DIN Junction Box is constructed for connection of up to 4 controls with 8-pin DIN plugs. Furthermore, the box is constructed so that all channels for connetion are placed on the same side of the box.

This gives the box a clean design and makes it easy to mount e.g. in a bed frame.

#### Usage

Possible for connection of LINAK control boxes: CB8, CB9/CB9P, CB12, CB14, CBJ and OpenBus™ control boxes e.g. CB20, CB6S, CB16.

# 4. EBC - Electronic Brake Control System (MEDLINE® CARELINE®)



The EBC is designed for use together with 3<sup>rd</sup> party castors and the LINAK OpenBus™ control system, including Jumbo Care. The EBC - Electronic brake control - can replace traditional (mechanical) central locking systems for castors on hospital and nursing home beds or medical applications like e.g. shower equipment. This new system offers an increased freedom of application design as there is no need for a mechanical connection between the castors.

# Usage:

Operating temperature: 5°C to 40°C
 Storage temperature: - 10°C to 50°C

Approved according to IEC60601-1:2005 3rd edition approved, ANSI / AAMI ES60601-1:2005, 3rd edition, and CAN / CSA-22.2 No 60601-1:2008



LINAK A/S only delivers the OpenBus<sup>TM</sup> system and is not responsible for any products other than LINAK products (i.e. products from  $3^{rd}$  party suppliers or the compliance of such products with the LINAK OpenBus<sup>TM</sup> system).



# Recommendations:

- · Always use locking mechanism and O-ring on cables.
- If any open sockets they must be fitted with blind plugs to ensure IP Degree.
- Removing or adding any OpenBus<sup>TM</sup> cables is not allowed when the control box is powered (hot plugging).

# Before installation/service

- Stop the application.
- Remove battery power cable and OpenBus™ connection then possible castor connection.
- · Service system.

### After installation/service

Reconnect castor connection, then OpenBus™ connection, battery power cable, then control box mains.

# 5. Massage Motor Medical (MEDLINE® CARELINE®)



The massage motor can be added to all kinds of couches and tables, chairs or beds for treatment and examination. It enables comfort, relaxation and tension release for patients and clients. The massage motors are directly connected to the actuator port at the control box — no extra wiring at the application, simple and easy mounting.

# Usage:

Compatibility: CB6S OBMe, CB16 OBF, (CB20 pending) MJB006-0x to be used for OpenBus™ impulse drive


Duty cycle: 10 %, 30 min. max.
 Operating temperature: +5°C to +40°C
 Storage temperature: -10°C to +50°C
 Relative humidity: 20 % to 80 % at +30°C
 Atmospheric pressure: 700 to 1060 hPa

Approvals: Medical approvals to be determined

## Mounting:

Massage motor on a plate

# Mounting of massage motor by using brackets:

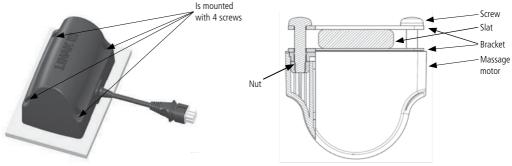

Mounting of the screw with max. torque 2 Nm

The massage unit is mounted with 4 x M6 roundheaded machine screws with flat underside. 15 to 20 mm long + the thickness of the bracket. Torque max. 2-3 Nm.

2 brackets must be used - one on each side of the slat.

#### 6. MJB (MEDLINE® CARELINE®)



The MJB (Modular Junction Box) is designed for use together with the CB20 and other OpenBus™ control boxes. The MJB makes it possible to connect handsets, attendant controls and accessories with the CB20/CB6S/CB16. The CB20 has 2 modular jack interfaces, but by using the MJB the connection possiblities are greatly increased. One "modular jack" channel is used for connecting to the control box.

#### 7. SLS (MEDLINE® CARELINE® TECHLINE®)



LINAK has designed a switch that can be mounted in connection with the 24V DC actuators: LA12, LA22, LA28, LA28S, LA31, LA32, or LA34 and a control box on e.g. a bed frame.

The Safety Limit Switch (SLS). The SLS Switch is primarily used as a Limit Switch in systems consisting of a control box, LA28/28S and/or LA32.

As an example the SLS can be installed on the actuator cable where it disconnects the actuator in either inward or outward direction when activated. The SLS can also be used as a signal control directly connected to a control box.

#### 8. SMPS30 (MEDLINE® CARELINE®)



The SMPS30 is a very powerful Switch Mode Power Supply typically used for Treatment or Examination Couches. The SMPS30 is an eco-friendly solution due to a low standby power consumption compared to traditional transformer solutions. The universal input voltage makes the SMPS adaptable to the worldwide market irrespective of the input voltage.

# Usage:

LA43 IC, LA44 IC Compatibility:

· Duty Cycle\*: 10%, 2 minutes continuous use followed by 18 minutes not in use.

5°C to 40°C · Operating temperature: -10°C to 50°C Storage temperature:

20% to 90% @ 30°C - not condensing Relative humidity:

· Atmospheric pressure: 700 to 1060 hPa

· Altitude: max. 2000 metres above sea level

· Approvals: IEC60601-1:2005 3rd ed., ANSI / AAMI ES60601-1:2005, 3rd edition, CAN / CSA-22.2 No 60601-1:2008

AT 10% DUTY CYCLE, MAX. OUTPUT POWER IS POSSIBLE AT AN AMBIENT TEMPERATURE OF 25°C

# Safety concept:

DC power is only on the application when needed – when the hand control is activated.

The user is part of a safety concept with light indications showing:



# The SMPS30 is designed for placing on the floor, but it can also be mounted on the wall / application via the bottom base plate and 4 screws.

If the SMPS30 is mounted on the wall/application, please dismount the SMPS30 to get access to the cable locking mechanism on the mains cable.



### Please note

The SMPS30 is only compatible with LA43 IC and the LA44 IC. The SMPS30 is not suitable for outdoor applications

### Before installation, re-installation or troubleshooting

- Stop the application
- · Switch off the power supply and pull out the mains plug
- Relieve the application of any loads, which may be released during the work

#### Before start-up

- · Make sure that the system has been installed as instructed in the User Manual
- System connection. The individual parts must be connected before the SMPS30 is connected to the mains.

# **During operation**

- · Ensure that the cables are not damaged
- . Unplug the SMPS30 before moving the equipment

# Device protection:

The SMPS30 contains several mechanisms to protect itself from being damaged due to excessive use.

- In case of overheating, the device will activate a thermal protection. No power output will be available until the temperature is back again within normal operating range.
- In case of exceeding the current limit / failure in the actuator, the device will activate an overload protection. Immediately after the situation has been remediated the power output will be available again.

# Hot plugging

• It is not allowed to remove or to add the output cable as long as the SMPS is powered by mains.

# Maintenance/cleaning

- The SMPS30 must be cleaned at regular intervals to remove dust and dirt and it must be inspected for mechanical damage, wear and breaks
- · It is not allowed to spray directly with a high-pressure cleaner on the device
- · Interconnecting cables must remain plugged in, correctly fitted with O-rings, during cleaning to prevent ingress of water
- The SMPS30 is resistant to the majority of cleaners and disinfectants used in the hospital and nursing home sector. However, the detergents must comply with the following basic requirements
  - They must not be highly alkaline or acidic (pH value 6-8)
  - They must not contain caustic agents

# 9. Under Bed Light 2 (MEDLINE® CARELINE®)



The Under Bed Light (UBL2) provides a powerful light with a good distribution. The UBL2 is to be used for beds within hospitals, nursing homes and in homecare.

The Under Bed Light makes it easier for patients and other people in need of care to find their way at night in the dark to prevent falling accidents and to make them feel safe.

# Usage:

Operating temperature: +5°C to +40°C
 Storage temperature: -10°C to +50°C

Relative humidity: 10% to 80% at +30°C not condensing

Atmospheric pressure: 700 to 1060hPa

• Approvals: EN62471, IEC60601-1:2005, 3rd edition (approvals are currently pending)



# **Recommendations & precautions:**

- Screw holes in application are needed for mounting. Inform the customer to use M4 Ø12 screws with Ø12 washer, when mounting the UBL2.
   Max. torque 2.5 Nm.
- · Hot-plugging:

Removing or adding any OpenBus<sup>TM</sup> cables is not allowed when the CB is powered by mains supply! If needed anyway, follow the below procedure:

- 1. Remove mains and wait 5 sec.
- 2. Mount or dismount the required cables

If this procedure is NOT followed, it may result in a damaged OpenBus™ driver circuit. The risk of a damaged circuit increases if the accessory has a high start current (in rush current).

- There can be a risk of conflict with other OPENBUS™ accessories, like HB, ACP, etc. when using the OpenBus™ UBL2, it is therefore
  recommended to make a system/bit overview.
- · Always use locking mechanism and O-ring
- · Sockets not used must be fitted with blind plugs to ensure IP Degree
- The UBL2 must be mounted on a plane surface and casing must not be subject to impact or any kind of stress.

# 9. Repair and disposal

# Repair

Only an authorised LINAK service centre should repair the LINAK actuator systems. Systems to be repaired under warranty must be sent to an authorised LINAK service centre.

In order to avoid the risk of malfunction, all actuator repairs must only be carried out by an authorised LINAK Service shop or repairers, as special tools and parts must be used.

If a system is opened by unauthorised personel there is a risk that it may malfunction at a later date.

# Spare parts

LINAK can supply spindle parts and motor parts as spare parts. Please indicate the designation from the label when ordering spare parts from your nearest authorised LINAK dealer.

# Disposal of LINAK's products

LINAK's products may be disposed of, possibly by dividing them into different waste groups for recycling or combustion.

We recommend that our product is disassembled as much as possible at the disposal and that you try to recycle it. As an example of main groups within sorting of waste we can mention the following.

Metal, plastic, cable scrap, combustible material and collection for recoverable resources.

Some of these main groups can be sub-divided into groups e.g. metal can be divided into steel and aluminum or plastic can be divided into ABS and PP. As an example of sorting we show you below, which recycling groups the different components in LINAK's products should be placed into:

Product	Component	Recycling group
Actuator:	Spindle and motor Plastic housing Cable	Metal scrap Plastic recycling or combustion Cable scrap or combustion
Control box:	PC-board Plastic housing Cable Transformer Batteries	Electronics scrap Plastic recycling or combustion Cable scrap or combustion Metal scrap Recoverable resources
Control:	Plastic housing Cable PC-board	Plastic recycling or combustion Cable scrap or combustion Electronics scrap

By now nearly all our moulded plastic units are provided with an internal code for plastic types and fibre content, if any.

# Main groups of disposal

Product main type	Metal scrap	Cable scrap	Electronic scrap	Plastic recycling or combustion	Remark
ACC			Х	Х	
ACK		Х	Х	Х	
ACL		Х	Х	Х	
ACM		Х	Х	Х	
ACP		Х	Х	X	
ACO		Х	Х	X	
BA18				X	Battery
BA20			Х	X	Lead battery
BADM			Х	X	Lead battery
BAJ1			Х		
BAJ2			Х		
BB3	Х				
BL1	Х				
BL4	Х				
CB12	Х		X	X	
CB14	Х		X	X	
CB16	Х		Х	X	
CB20	Х	Х	X	X	
CB6	Х		X	X	
CB6P2					
CB6S	X		Х	X	
CB7			X	X	
CB8-A			X		
CB8-T			X		
CB9	Х	Х	X	X	
CBJ1			X		
CBJ2			X		
CBJC					
СВЈН			X		
CBR1			X		
CHJ2			X		
CS16		Х	X		
COBO20					
CP20	X		X	X	
CU20			X	X	
CUDM			X	X	
DJB		X	X	X	
DPH					
FS	X	X	X	Х	Metalscrap because of FSR + FSR

Page 94 of 108

# Main groups of disposal

Product main type	Metal scrap	Cable scrap	Electronic scrap	Plastic recycling or combustion	Remark
FS2	Х	Х	Х	X	
FS3	Х	Х	Х	X	
HB20			Х	X	
HB30		Х		X	
HB40		Х	Х	X	
HB50		Х	Х	X	
HB60		Х	Х	X	
HB70		Х	Х	X	
HL70		Х	Х	X	
HB80		Х	Х	X	
HBDM		Х	Х	X	
HL80		Х	Х	X	
IRO			Х	X	
LA12	Х	Х	Х	X	
LA22	Х	Х		X	
LA23					
LA27	Х		Х	X	
LA28	Х	Х	Х	X	
LA29	Х	Х	Х	X	
LA30	Х	Х		X	
LA31	Х	Х	Х	X	
LA32	Х				
LA34	X	Х	Х	X	
LA43	Х	Х	Х	X	
LA44	Х	Х	X	X	
LC2	aluminum extrusions, spindle, motor, end plates, fasteners	power cable, signal cable	PCB	glide pads, retainer clips, top frame, PCB housing	
LP2	Х	Х			
LP3	Х	Х			
LS	Х		Х	X	
LSD	Х	Х	Х	X	
Massage Motor					
MBJ1/2/3	Х				
MJB			Х	X	
SLS		Х	Х	X	
SMPS30			Х	Х	

# **Practical information**

Product main type	Description
ACC	Folie glued together with housing
ACK	No housing. Only folie with cable
ACL	Cannot be opened since it is welded together. When the cable has been cut-off it is disposed of as combustible waste
ACM	Cannot be opened since it is welded together. When the cable has been cut-off it is disposed of as combustible waste
ACP	Screw together
ACO	Folie glued together with housing
BA18	Total glace tegenia. Mili neasing
BA20	Welded together
BADM	Glued and screwed together
BAJ1	Glued and screwed together
BAJ2	Glued and screwed together
BB3	Outer tube (Alu) can be dismounted (screws)
BL1	
BL4	Plastic housing and the BB3 inside can be dismounted (screws)
CB12	Screw together
CB14	Screw together
CB20	Glued and welded together. Cannot be opend
CB6	Glued and screwed together
CB6P2	
CB6S	Glued and screwed together
CB7	
CB8-A	Screw together
CB8-T	Screw together
CB9	Has to be unscrewed with a screw driver
CB16	Glued and screwed together
CBJ1	Glued and screwed together
CBJ2	Glued and screwed together
CBJC	
СВЈН	Glued and screwed together
CBR1	
CH01	Welded together
CHJ2	Glued and screwed together
CS16	Screw together, cut off can be adjusted
COBO20	
CP20	Glued and screwed together
CU20	Glued and screwed together
CUDM	Glued and screwed together
DJB	Cannot be opened since it is welded together. When the cable has been cut-off it is disposed of as combustible waste
DPH	
FPP	Folie glued together with housing


# **Practical information**

Product main type	Description
FS FS	Description
FS2	
FS3	Ultrasonic welded and screwed together
HB20	Olliasonic weided and sciewed together
HB30	Ultrasonic welded
HB40	Screw together
HB50	Screw together
HB60	Screw together
НВ70	Cannot be opened since it is welded together. When the cable has been cut-off it is disposed of as combustible waste
HL70	Cannot be opened since it is welded together. When the cable has been cut-off it is disposed of as combustible waste
HB80	Glued together
HL80	Glued together
HBDM	Glued and screwed together
IRO	Welded together
LA12	
LA22	Cannot be opened since it is glued together. When the cable has been cut-off it is disposed of as steel scrap
LA23	
LA27	Cannot be opened since it is welded together.
LA28	The outer tube is glued in the motor base, but it can be unscrewed with a pipe wrench in a vice
LA29	
LA30	
LA31	
LA32	The outer tube is glued in the motor base, but it may be unscrewed with a pipe wrench in a vice
LA34	
LA43	Screwed together
LA44	Screwed together
LC2	- LC2-2 uses an LA28 actuator and the LC2-5 uses an LA30 actuator - LC2 uses its own limit switch end-stop technology not the actuator current cut-off end-stop technology - LC2 assemblies should not be repeatedly disassembled because the screws are self-tapping and may compromise the fastener integrity Lifting columns with gas spring may only be opened when they have run out to full stroke.  They can be recognised by the 9th figure, which is a "G" and by a warning label on the end plate
LP2	
LP3	
LS	
LSD	
MBJ1/2/3	
MJB	Cannot be opened since it is welded together.
Massage	
Motor	
SLS	Cannot be opened since it is welded together. When the cable has been cut-off it is disposed of as combustible waste
SMPS30	Screwed together (not a repairable product)

# **Drawings**

Figure 1


Ventilation of external batteries, BA18



Check at regular intervals that the ventilation stub is undamaged and intact.

The construction of the ventilation stub permits battery gasses to get out, but it does not permit penetration of water.

Figure 2

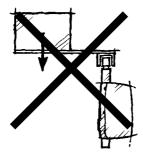




Figure 3







Figure 4

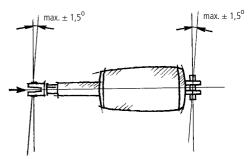


# 1) LA22



# 3) LA30 and 30S

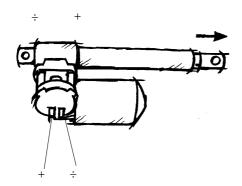


# LA30 Actuator with reed ( only possible with 24V L-motor )

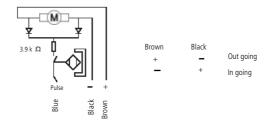


Please note that the voltage level og feedback signal depends on the actuator load.

# 4) LA12





Page 99 of 108

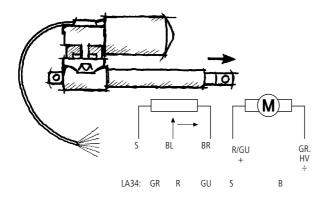

#### Colour codes: Black BR Brown R Red 0 Orange GU Yellow G Grey BL Blue ٧ Purple GR Green White Н۷

# 6) LA30, LA30S and LA32 with optical encoder

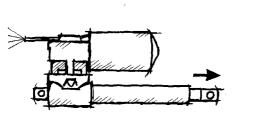

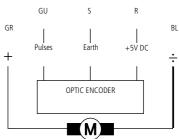

Version B


DIN plug

LINAK handset HB


is connected with a

7A-B) LA28/28S/32 with CS28/28S/32 - PC-board version A and B




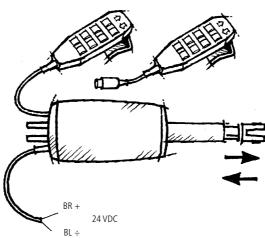


...to be continued

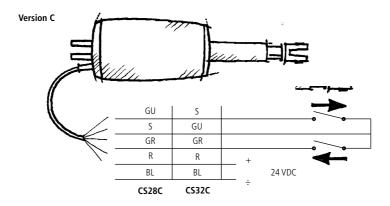


8) LA28, LA28S, LA32 with reed-switch and LA34 with pulse system

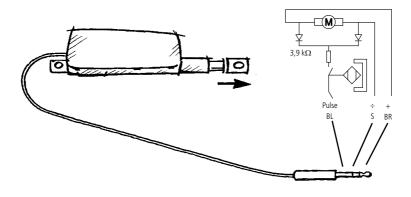


9) LSD

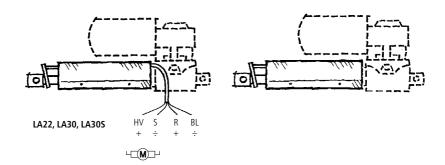


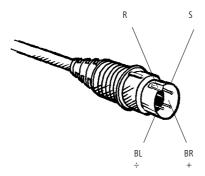

# 11) LA31 TECHLINE





# 12) LA12 PLC

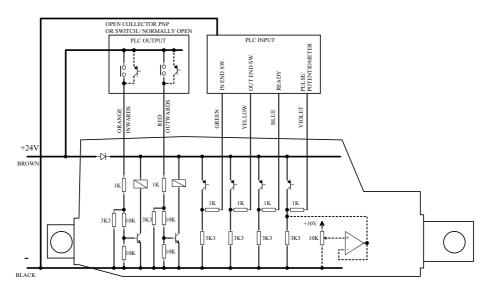

Page 102 of 108 ...to be continued









0273011 with O-ring

# WITHOUT FEEDBACK

LA27 Mini-fit plug cable (LA27 standard; Valid for LA27 article numbers = 27xxxxxxxxxxxx0)

CH1-4 MiniFit:				
When a channel is operated UP (Motor connections)	3: Brown: + 6: Yellow: -			
End-of-stroke switches	5: Orange: UP 4: Red: DOWN 2: Black: COMMON			
Not Used	1: No Connection			

(end of stroke = EOS)

LA23/LA31/LA34/BL1/BL4 Mini-fit plug cable

# without Feedback

	EOS Switch
Pin 1	Switch com. (GND)
Pin 2	Vbus
Pin 3	M+ (Motor/Power)
Pin 4	EOS wout
Pin 5	EOD in
Pin 6	M- (Motor/Power)

LA27 Mini-fit plug cable (Analog encoded without Hall)

# without Feedback

EOS Switch
Switch com. (GND) Vbus
M+ (Motor/Power)
EOS out
EOD in
M- (Motor/Power)

# WITH FEEDBACK

LA23/LA31/LA34/LA44/BL1 Mini-fit plug cable

# with Feedback

	Hall
Pin 1	Hall GND
Pin 2	Vbus
Pin 3	M+ (Motor/Power)
Pin 4	Hall A
Pin 5	Hall B
Pin 6	M- (Motor/Power)

LA27 Mini-fit plug cable

# with Feedback Hall

Hall com. (GND) Vbus M+ (Motor/Power) EOS (analog) M- (Motor/Power) Article numbers = 27xxxxxxxxxxx**A** 

Pin 6	M- (Motor/Power)		

LA34/LA44 Mini-fit plug cable (potentiometer)

	Potentiometer
Pin 1	Pot GND
Pin 2	Vbus
Pin 3	M+ (Motor/Power)
Pin 4	Pot Position
Pin 5	Pot + (3V3)
Pin 6	M- (Motor/Power)

# BL4 Mini-fit plug cable

1 3	
Reed	
Reed com. (GND)	
Vbus	
M+ (Motor/Power)	
NC	
Reed	
M- (Motor/Power)	

Figure 7

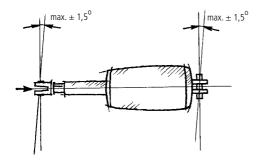


Figure 8

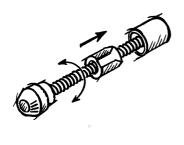


Figure 9


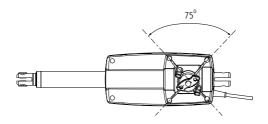


Figure 10

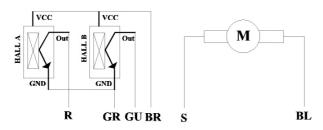

Page 104 of 108

Page 106 of 108	

#### DENMARK

LINAK A/S - Group Headquarters Guderup LINAK Slovakia s.r.o. Phone: +45 73 15 15 15 Fax: +45 74 45 80 48 +45 73 15 16 13 (Sales) E-mail: info@linak.com www.linak.com

#### SLOVAKIA

Phone: +421 51 75 63 414 Fax: +421 51 75 63 410 E-mail: jp@linak.sk www.linak.com

LINAK U.S. Inc. North and South American Headquarters Phone: +1 502 253 5595 +1 502 253 5596 Fax: F-mail: info@linak-us.com www.linak-us.com

#### SUBSIDIARIES

#### **AUSTRALIA**

LINAK Australia Ptv. 1 td Phone: +61 3 8796 9777 +61 3 8796 9778 E-mail: sales@linak.com.au www.linak.com.au

LINAK Repräsentanz Österreich (Wien) Phone: +43 (1) 890 7446 +43 (1) 890 744615 E-mail: info@linak.de www.linak.at

#### BELGIUM & LUXEMBOURG

LINAK Actuator-Systems NV/SA Phone: +32 (0)9 230 01 09 +32 (0)9 230 88 80 E-mail: beinfo@linak.be www.linak.he

LINAK Do Brasil Comércio De Atuadores Ltda. LINAK GmbH Phone: +55 (11) 2832 - 7070 +55 (11) 2832 - 7060 E-mail: info@linak.com.br www.linak.com.hr

#### CANADA

LINAK Canada Inc Phone: +1 502 253 5595 +1 416-255-7720 E-mail: info@linak.ca www.linak-us.com CZECH REPUBLIC

#### LINAK C&S S.R.O.

Phone: +420581741814 +420581702452 Fax: E-mail: ponizil@linak.cz www.linak.cz

#### DENMARK

LINAK Danmark A/S Phone: +45 86 80 36 11 +45 86 82 90 51 E-mail: linak@linak-silkeborg.dk www.linak.dk

#### FINLAND

LINAK OY Phone: +358 10 841 8700 +358 10 841 8729 E-mail: linak@linak.fi www.linak.fi

#### FRANCE

LINAK France E.U.R.L Phone: +33 (0) 2 41 36 34 34 +33 (0) 2 41 36 35 00 E-mail: linak@linak.fr www.linak.fr

#### GERMANY

Phone: +49 6043 9655 0 +49 6043 9655 60 E-mail: info@linak.de www.linak.de

#### INDIA

LINAK A/S India Liaison Office Phone: +91 120 4393335 Fax: +91 120 4273708 E-mail: info@linak.in www.linak.in

LINAK UK Limited - Ireland Phone: +44 (0)121 544 2211 Fax: +44 (0)121 544 2552 +44 (0)796 855 1606 (UK Mobile)

+35 387 634 6554 (Republic Of Ireland Mobile)

E-mail: sales@linak.co.uk www.linak.co.uk

I INAK Italia S r I Phone: +39 02 48 46 33 66 Fax: +39 02 48 46 82 52 E-mail: info@linak.it www.linak.it

#### ΙΔΡΔΝ IINAK K K

ΙΤΔΙΥ

Phone: 81-45-533-0802 81-45-533-0803 E-mail: linak@linak.jp www.linak.jp

#### MALAYSIA

LINAK Actuators Sdn. Bhd. Phone: +60 4 210 6500 +60 4 226 8901 E-mail: info@linak-asia.com www.linak.my

#### NETHERLANDS

LINAK Actuator-Systems B.V. Phone: +31 76 5 42 44 40 +31 76 5 42 61 10 Fax: E-mail: info@linak.nl www.linak.nl

# **NEW ZEALAND**

LINAK New Zealand Ltd. Phone: +64 9580 2071 +64 9580 2072 Fax: E-mail: nzsales@linak.com.au www.linak.co.nz

Fax: E-mail: info@linak.se www.linak.se

#### NORWAY

LINAK Norge AS Phone: +47 32 82 90 90 +47 32 82 90 98 E-mail: info@linak.no www.linak.no

#### POLAND LINΔK Polska

Phone: +48 (22) 500 28 74 +48 (22) 500 28 75 E-mail: dkreh@linak.dk www.linak.pl

#### REPUBLIC OF KOREA LINAK Korea Ltd.

Phone: +82-(0)2-6231-1515 +82-(0)2-6231-1516 E-mail: scully@linak.kr www.linak.kr

# RUSSIAN FEDERATION

000 LINAK Phone: +7 495 280 14 26 Fax: +7 495 687 14 26 E-mail: info@linak.ru www.linak.ru

# SPAIN

LINAK Actuadores, S.L.u Phone: +34 93 588 27 77 +34 93 588 27 85 Fax: E-mail: esma@linak.es www.linak.es

# LINAK Scandinavia AB

Phone: +46 8 732 20 00 +46 8 732 20 50

# SWITZERLAND

ΠΝΔΚ ΔG Phone: +41 43 388 31 88 Fax: +41 43 388 31 87 E-mail: info@linak.ch www.linak.ch

# TAIWAN

LINAK A/S Taiwan Representative Office Phone: +886 2 27290068 +886 2 27290096 Mobile: +886 989292100 F-mail: michael.chen@linak.com.tw www.linak.com.tw

# TURKEY

LINAK ith, ihr, San, ve Tic, A.S. Phone: + 90 312 4726338 + 90 312 4726635 F-mail: info@linak.com.tr www.linak.com.tr

#### UNITED KINGDOM LINAK UK Limited

Phone: +44 (0)121 544 2211 +44 (0)121 544 2552 E-mail: sales@linak.co.uk www.linak.co.uk

# DISTRIBUTORS

# ARGENTINA

Novotec Argentina SRL Phone: +(54) 011-4303-8989/8900 +(54) 011-4032-0184 E-mail: info@novotecargentina.com www.novotecargentina.com

Ballarat Industrial Supplies www.hallind.com.au

www.blshipwav.com.au Gas Strut Marine and Industrial

www.gasstrutmarine.com.au

Prime Motion & Control www.primehyd.com.au West Vic Industrial Supplies www.westvicindustrial.com.au

MEM Ltda Phone: +[57] (1) 334-7666 Fax: +[57] (1) 282-1684 E-mail: servicioalcliente@memltda.com.co www.memltda.com.co

# INDONESIA

Pt. Himalaya Everest Jaya Phone: +6 221 544 8956/8965, +6 221 619 4658/1925 E-mail: hejplastic-div@centrin.net.id www.hei.co.id

# Bod Inc.

Phone: +98 2188998635-6 +98 2188954481 E-mail: info@bod.ir www.bod.ir

## RUSSIAN FEDERATION

000 FAM Phone: +7 812 3319333 +7 812 3271454 Fax: E-mail: purchase@fam-drive.ru www.fam-drive.ru

# SINGAPORE

Servo Dynamics Pte. Ltd. Phone: +65 6844 0288 +65 6844 0070 Fax:

# SOUTH AFRICA

www.isaza.co.za

Industrial Specialised Applications CC Phone: +27 11 312 2292 or +27 11 2077600 (Switch Board) Fax: +27 11 315 6999 E-mail: gartht@isagroup.co.za

### UNITED ARAB EMIRATES

Mechatronics Phone: +971 4 267 4311 +971 4 267 4312 E-mail: mechtron@emirates.net.ae www.mechatronics.ae

For contact details on other countries please visit www.linak.com or contact:

#### LINAK INTERNATIONAL Phone: +45 73 15 15 15

Fax: +45 74 45 90 10 Fax: +45 73 15 16 13 (Sales) E-mail: info@linak.com www.linak.com

## Terms of use

The user is responsible for determining the suitability of LINAK products for specific application. LINAK takes great care in providing accurate and up-to-date information on its products. However, due to continuous development in order to improve its products, LINAK products are subject to frequent modifications and changes without prior notice. Therefore, LINAK cannot guarantee the correct and actual status of said information on its products. While LINAK uses its best efforts to fulfil orders, LINAK cannot, for the same reasons as mentioned above, guarantee the availability of any particular product. Therefore, LINAK reserves the right to discontinue the sale of any product displayed on its website or listed in its catalogues or other written material drawn up by LINAK. All sales are subject to the Standard Terms of Sale and Delivery for LINAK. For a copy hereof, please contact LINAK.

